



INLET VALVE 990D ASSEMBLY INSTRUCTIONS





1. Height setting



2. Inlet installation





3. Water level adjustement



INLET VALVE 990D



Adjust water level with the grey adjustable screw ; screw to increase water level, unscrew to decrease it.



Adjust the float box to the float level and turn the small white screw to close the box, while pressing on the grey screw.

4. Maintenance



WARNINGS:

1) Do not over tight in any case.

2) Do not use any sealing paste and/or compound in any case

SIAMP UK will be not responsible in case these warnings are not respected.



Siamp Ltd / Unit C2 / Meadowbank Business Park Tweedale Way / Hollinwood / Oldham / Greater Manchester / OL9 8EH Telephone : 0161 681 2120 / Fax : 0161 681 2130 / aftersales@siamp.co.uk