## **INSTALLATION & MAINTENANCE INSTRUCTIONS**

## **UNIQUE MAINTENANCE FEATURES**

Quick servicing using Dudley 'TURBO' spares pack.
No need to dismantle cistern

Two parts separate easily for servicing.

Quick replacement of piston parts.

Fits 'SYVAC' Air Extractor for twin-trap syphonic W.C.'s.

## INSTALLATION INSTRUCTIONS

- 1. Disconnect lever and remove old syphon.
- 2. Fit 'TURBO' syphon with rubber washer into cistern.
- 3. Tighten back nut to secure syphon.
- 4. Fit appropriate cone ring to flush pipe (see diagram).
- 5. Tighten cap nut. Connect lever. Check action.

## SERVICE INSTRUCTIONS

- 1. Disconnect lever.
- 2. Remove yellow snap pin.
- **3.** Disengage the up-leg section of the syphon body from the down-leg and slide off the syphon body.
- 4. Remove piston to replace worn parts.
- 5. Check/replace 'O' ring to ensure a good seal.
- **6.** Slide syphon body back onto down-leg and reattach.
- 7. Replace yellow snap pin.

**WARNING:** No sealing compound, flux or solvent to be used in contact with plastic or rubber surfaces to avoid damage to plastic components. Rubber washers should provide adequate seal. PTFE tape may be used on threads.



