

WARNING

We shall not be responsible or liable for any failure of, or damage to, this plumbing product caused by the use of chlorine/bleach cleaners or related products added to the tank water. Use of such products will void the warranty and may result in product failure, possibly causing property damage. Do not over tighten plastic nuts and always turn off water supply when installing / removing toilet cistern parts.



Please note: Save this instruction sheet for future reference IMPORTANT: DO NOT use plumber's putty to seal this fitting

UK - Units 1-3 Capitol Trading Park, Kirkby Bank Road, Knowsley Industrial Estate, Liverpool, L33 7SY EU - Authorised Rep Compliance Ltd., GroundFloor, 71 Lower Baggot Street, Dublin, D02 P593, Ireland.

For more information please contact us: Tel: 0151 546 0531 E-mail: sales@vivasanitarv.co.uk

INSTALLATION INSTRUCTIONS

٢

æ R

with wingnuts.

Fit doughnut washer and bolts

and secure cistern to the pan



Insert the flush valve into the water tank. Slide close couple plate over the syphon thread and tighten to the tank using the washer and nut.



The flush volumes can be adjusted by removing the volume plugs. (Please refer to the guide above)

(Depress and release)

Full Flush

To operate the flush valve handle lever arm.

connect the C link to the toilet

Operating the dual flush function is really easy, when flushing your toilet depress and release for a full flush, depress and hold for a half flush. This will only flush half the water in your tank. Saving water and money.

Dual Flush Operation

Dual Flush Operation

Water will internally overflow into the toilet pan when the water level reaches the spill over point



To adjust the height of the flush valve twist the height adjustment screw and set to the desired height.



Low level installation does not require a close couple kit. Slide back nut and conical washer over the flush pipe and insert flush pipe into base of flush valve and secure with back nut.

Half Flush

(Depress and hold)

Point of internal overflow

TROUBLESHOOTING





Remove the C link by rotating until loose.

Slide the stem through the base to access the suction unit.



(the course

Remove the spring and clip then replace the diaphraam washer.

Once the diaphragm washer has been replaced, secure the clip and re-fit spring.





Slide the suction unit back through the base.

WARNING

Re-connect the C link to the stem.

