


Condensing wall mounted boiler

EDEA

USER, INSTALLATION AND SERVICING INSTRUCTIONS

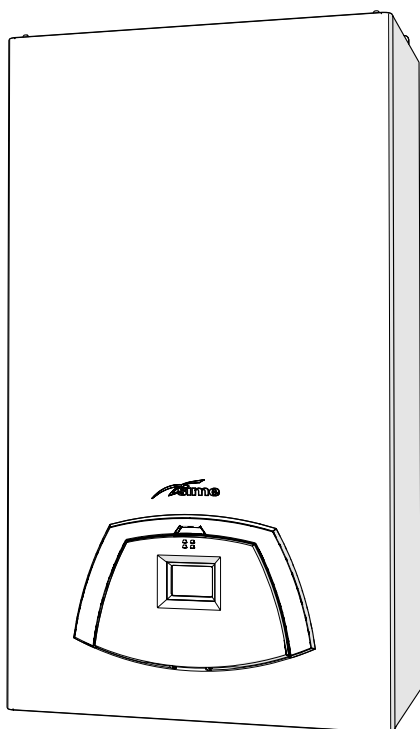

ENSURE THAT THESE
INSTRUCTIONS ARE LEFT
FOR THE USER AFTER
COMPLETION OF THE
BENCHMARK SECTION

PLEASE READ THE
IMPORTANT NOTICE
WITHIN THIS GUIDE
REGARDING YOUR BOILER
WARRANTY



To consult the documentation,
visit our website www.sime.it



BOILER DETAILS

please position here a sticker
from installation pack

RANGE RATED CERTIFICATION

The maximum power, in heating mode, of **Edea** boilers can be adapted, during the installation, to the thermal needs of the system by modifying the setting of PAR 15 in the **0 .. 100** range.

The setting of PAR 15 = 100 is the factory setting that allows the boiler to deliver its maximum power in heating mode. It can be reduced by modifying the setting of PAR 15 as shown in the table appearing below.

Once the new setting of PAR 15 has been made, the reduced maximum power value (kW) **for models with power above 35 kW MUST MANDATORILY** be applied beside the boiler's data plate. For checks and adjustments after the modification, refer to the new value for the maximum power.



The useful nominal power levels used are those relative to the operating conditions (80-60°C) (P_n min - P_n max).

Example for **Edea 30**:

- default heating power range: 2,8 - 24,5 setting of PAR 15 = 100
- "reduced" heating power range: 2,8 - 18,9 setting PAR 15 = 80

| DESCRIPTION | | Edea | | | | |
|--|----|------|------|-----|------|-------------------|
| | | 30 | | 40 | | Setting of PAR 15 |
| | | Min | Max | Min | Max | |
| A - Factory power range (heating) | kW | 2,8 | 24,5 | 4,2 | 34,1 | 100 |
| B - Reduced power ranges for maximum power reduction (heating) | kW | 2,8 | 21,2 | 4,2 | 30,7 | 90 |
| | kW | 2,8 | 18,9 | 4,2 | 27,3 | 80 |
| | kW | 2,8 | 16,5 | 4,2 | 23,9 | 70 |
| | kW | 2,8 | 14,2 | 4,2 | 20,5 | 60 |
| | kW | 2,8 | 11,8 | 4,2 | 17,0 | 50 |
| | kW | 2,8 | 9,4 | 4,2 | 13,6 | 40 |

Boiler technical data plate

Fonderie SIME S.p.A.
 Via Garbo, 27 - 37045 Legnago - VR (Italy) - Tel +39 0442 631111
 www.sime.it

Caldaia a condensazione - condensing boiler - caldera de condensacion - caldeira a condensacao -
 chaudiere a condensation - condensatieketel - gasbrennwertkessel - λέβητο συμπυκνωσης -
 kondenzációs kotel - plynový kondenzační kotel - condensare cazan - kocioł kondensacyjny -
 kondenzációs kazánok - конденсаційний котел - конденсирующий котел - كراجل التكثيف

| | |
|---|---|
| <p>Q_n max = _____</p> <p>P_n max 80-60°C = _____</p> <p>P_n max 50-30°C = _____</p> <p>PMS = _____</p> | <p>Q_n min = _____</p> <p>P_n min 80-60°C = _____</p> <p>P_n min 50-30°C = _____</p> <p>T max = _____</p> |
|---|---|

| | |
|--|--|
| <p>Q_{nw} max = _____</p> <p>PMW = _____</p> | <p>Q_{nw} min = _____</p> <p>T max = _____</p> |
|--|--|

| | | | |
|--|--|--|--|
| | | | |
|--|--|--|--|

| | | | |
|--|--|--|--|
| | | | |
| | | | |

MADE IN ITALY

UK
CA

IMPORTANT NOTICE

For the first year all of our appliances are protected by our manufacturer's guarantee which covers both parts and labour.

As you would expect from Sime Ltd, it is our aim to provide our valued customers with the best in after sales and service.

To take advantage of any extended warranty offered, all you have to do is to adhere to these 3 simple conditions:

- The installation must be carried out to Manufacturers/Benchmark Standards by a Gas Safe Registered Engineer, and recorded in the installation manual.
- The appliance must be registered with both Sime Ltd and Gas Safe within 30 days of installation.
- The appliance must be serviced every 12 months, within 30 days of the anniversary of the installation date, by either Sime Ltd or a Gas Safe registered engineer- ensuring that the Benchmark service record in the installation manual is completed.

Failure to comply with the above will result in only the 12 month warranty being offered. In the absence of any proof of purchase, the 12 month warranty period will commence from the date of manufacture of the boiler as shown on the appliance data plate.

SAFE HANDLING

This boiler may require 2 or more operatives to move it into its installation site, remove it from its packaging and during movement into its installation location. Manoeuvring the boiler may include the use of a sack truck and involve lifting pushing and pulling.

Caution should be exercised during these operations.

Operatives should be knowledgeable in handling techniques when performing these tasks and the following precautions should be considered:

- Grip the boiler at the base
- Be physically capable
- Use personal protective equipment as appropriate e.g. gloves, safety footwear.

During all manoeuvres and handling actions, every attempt should be made to ensure the following unless unavoidable and/or the weight is light.

- Keep back straight
- Avoid twisting at the waist
- Always grip with the palm of the hand
- Keep load as close to the body as possible
- Always use assistance

WARNING

Caution should be exercised when performing any work on this appliance.

Protective gloves and safety glasses are recommended.

- Avoid direct contact with sharp edges.
- Avoid contact with any hot surfaces.

NOTICE

Please be aware that due to the wet testing of the appliance, there may be some residual water in the hydraulic circuit.

- Protect any surfaces, carpets or floorings.
- Use a suitable container to catch any water that escapes when removing the protective caps from the connections.

Code Of Practice

For the installation, commissioning and servicing of domestic heating and hot water products

Benchmark places responsibilities on both manufacturers and installers.* The purpose is to ensure that customers** are provided with the correct equipment for their needs, that it is installed, commissioned and serviced in accordance with the manufacturer's instructions by competent persons and that it meets the requirements of the appropriate Building Regulations. Installers are required to carry out work in accordance with the following:

Standards of Work

- Be competent and qualified to undertake the work required.
- Install, commission, service and use products in accordance with the manufacturer's instructions provided.
- Ensure that where there is responsibility for design work, the installation is correctly sized and fit for purpose.
- Meet the requirements of the appropriate Building Regulations. Where this involves notifiable work be a member of a Competent Persons Scheme or confirm that the customer has notified Local Authority Building Control (LABC), prior to work commencing.
- Complete all relevant sections of the Benchmark Checklist/Service Record when carrying out commissioning or servicing of a product or system.
- Ensure that the product or system is left in a safe condition and, whenever possible, in good working order.
- Highlight to the customer any remedial or improvement work identified during the course of commissioning or servicing work.
- Refer to the manufacturer's helpline where assistance is needed.
- Report product faults and concerns to the manufacturer in a timely manner.

Customer Service

- Show the customer any identity card that is relevant to the work being carried out prior to commencement or on request.
- Give a full and clear explanation/demonstration of the product or system and its operation to the customer.
- Hand over the manufacturer's instructions, including the Benchmark Checklist, to the customer on completion of an installation.
- Obtain the customer's signature, on the Benchmark Checklist, to confirm satisfactory demonstration and receipt of manufacturer's instructions.
- Advise the customer that regular product servicing is needed, in line with manufacturers' recommendations, to ensure that safety and efficiency is maintained.
- Respond promptly to calls from a customer following completion of work, providing advice and assistance by phone and, if necessary, visiting the customer.
- Rectify any installation problems at no cost to the customer during the installer's guarantee period.



*The use of the word "installer" is not limited to installation itself and covers those carrying out installation, commissioning and/or servicing of heating and hot water products, or the use of supporting products (such as water treatment or test equipment).

**Customer includes householders, landlords and tenants.

The Benchmark Scheme

Sime Ltd is a licensed member of the Benchmark Scheme which aims to improve the standards of installation and commissioning of domestic heating and hot water systems in the UK and to encourage regular servicing to optimise safety, efficiency and performance.

Benchmark is managed and promoted by the Heating and Hotwater Industry Council.

For more information visit www.centralheating.co.uk.

Please ensure that the installer has fully completed the Benchmark Checklist in the use and maintenance section of the installation instructions supplied with the product and that you have signed it to say that you have received a full and clear explanation of its operation.

The installer is legally required to complete a commissioning checklist as a means of complying with the appropriate Building Regulations (England and Wales).

All installations must be notified to Local Area Building Control either directly or through a Competent Persons Scheme.

A Building Regulations Compliance Certificate will then be issued to the customer who should, on receipt, write the Notification Number on the Benchmark Checklist.

This product should be serviced regularly to optimise its safety, efficiency and performance.

The service engineer should complete the relevant Service Record on the Benchmark Checklist after each service.

The Benchmark Checklist may be required in the event of any warranty work and as supporting documentation relating to home improvements in the optional documents section of the Home Information Pack.

Important Information

IT IS A STATUTORY REQUIREMENT THAT ALL GAS APPLIANCES ARE INSTALLED BY COMPETENT PERSONS, IN ACCORDANCE WITH THE GAS SAFETY (INSTALLATION AND USE) REGULATIONS (CURRENT EDITION). The manufacturer's instructions must not be taken as overriding any statutory requirements, and failure to comply with these regulations may lead to prosecution.

No modifications to the appliance should be made unless they are fully approved by the manufacturer.

GAS LEAKS: DO NOT OPERATE ANY ELECTRICAL SWITCH, OR USE A NAKED FLAME. TURN OFF THE GAS SUPPLY AND VENTILATE THE AREA BY OPENING DOORS AND WINDOWS CONTACT THE GAS EMERGENCY SERVICE ON 0800111999.



Please refer to commissioning instructions for filling in the checklist at the back of this installation guide.

Note: All Gas Safe registered installers carry a ID Card.

You can check your installer is Gas Safe Registered by calling 0800 408 5577

SIME COMBINATION BOILERS Installer checklist

Please remember to carry out the following checks after installation. This will achieve complete customer satisfaction, and avoid unnecessary service calls. A charge will be made for a service visit where the fault is not due to a manufacturing defect.

- Has a correct by-pass been fitted and adjusted?
- Has the system and boiler been flushed?
- Is the system and boiler full of water, and the correct pressure showing on the pressure gauge?
- Is the Auto Air Vent open?
- **Has the pump been rotated manually?**
- Is the gas supply working pressure correct?
- Is the boiler wired correctly? (See installation manual).
- **Has the D.H.W. flow rate been set to the customer requirements?**
- Has the customer been fully advised on the correct use of the boiler, system and controls?
- Has the Benchmark Checklist in the use and maintenance section of this manual, been completed?

**WARNINGS**

- After having unpacked the boiler ensure that it is undamaged and complete including the valve pack, hanging bracket and template.
- The appliance must be used as intended. **Sime Ltd** declines all responsibility for any injury or damage to persons, animals, or property as a result of improper installation, adjustment, maintenance or use.
- In the event of water leaks, disconnect the appliance from the mains power supply, close the water mains and seek help from a qualified engineer.
- Periodically check that the operating pressure of the water heating system when cold is **1-1.2 bar**. If required, increase the pressure or seek help from a qualified engineer.
- If the appliance is not used for a long period of time, the following operations must be carried out:
 - *set the main isolation switch to "OFF";*
 - *close the gas and water valves for the water heating system.*
- To ensure continued efficient operation of the appliance it is recommended that it is serviced regularly, at least once a year. This is also a condition of the boiler warranty. It is the law that any service or repair is carried out by a Gas Safe Registered engineer. Services must be recorded in the maintenance section of this installation guide.
- If the power cable is damaged, replace it with a cable ordered as a spare part with the same characteristics (type X). Assembly must be carried out by a qualified professional.

**WARNINGS**

- **It is recommended that all operators** read this manual carefully in order to use the appliance in a safe and rational manner.
- **This manual** is an integral part of the appliance. It must therefore be kept for future reference and must always accompany the appliance.
- **Installation and maintenance** of this appliance must be carried out by a qualified company or by a professionally qualified technician in accordance with the instructions contained in the manual. Once the work is complete, the company or technician will issue a declaration of conformity with national and local technical standards and legislation in force in the country where the appliance will be used.
- **Any repairs on the appliance** must be carried out solely by professionally qualified personnel, using original spare parts only. Failure to comply with these instructions can jeopardise the appliance's safety and void the warranty with immediate effect.
- **Fonderie SIME S.p.A.** reserves the right to make improvements to its products at any time without prior notice, without compromising their essential characteristics. The graphic illustrations and/or images in this document may show optional accessories that vary according to the country in which the appliance is used.

RESTRICTIONS



DO NOT

- To allow children under the age of 8 to use the appliance. The appliance can be used by children no younger than 8 years old, by people with physical or cognitive disabilities, and by people lacking experience or the necessary knowledge, provided that they are supervised or have been instructed on how to use the appliance safely and that they understand the risks associated with it.
- To allow children to play with the appliance.
- To allow unsupervised children to perform user maintenance and cleaning.
- To use electrical devices or appliances such as switches, electrical appliances etc if you can smell gas. If this should happen:
 - *open the doors and windows to ventilate the room;*
 - *turn the gas off at the meter;*
 - *call the emergency service 0800 111999.*
- To touch the appliance with bare feet or with any wet part of the body.
- To carry out any repair, maintenance or cleaning operation before having disconnected the appliance from the mains power by setting the main switch to "OFF", and closing the gas supply.
- To modify the safety or adjustment devices without authorization and instructions from the manufacturer.



DO NOT

- To block the condensate drain.
- To pull, detach or twist the electrical cables coming out of the appliance even if the appliance is disconnected from the mains power supply.
- To expose the appliance to the elements. It is suitable for operating in a partially protected area in accordance with the EN 15502 standard, with a maximum ambient temperature of 60 °C and minimum - 5 °C. We recommend installing the appliance under a pitched roof extension, on a balcony or in a protected recess, nonetheless never exposed directly to the elements (rain, hail, snow). The appliance is equipped with a series of anti-freeze functions.
- To block or reduce the size of the ventilation openings of the room where the appliance is installed, if present.
- Remove the mains power and gas supply from the appliance if the external temperature could fall below ZERO (risk of freezing).
- To leave containers with flammable substances in the room where the appliance is installed.
- To dispose of the packaging material irresponsibly as it could be dangerous. Packaging must be disposed of as specified by the legislation in force in the country where the appliance will be used.

Dear Customer,

Thank you for purchasing a **Sime Ltd Edea** boiler, a new-generation modulating condensing device with technical features and excellent performance, allowing you to satisfy your heating and instant domestic hot water requirements with the utmost safety and limited running costs.

RANGE

| MODEL | CODE | GAS COUNCIL NUMBER |
|---------|---------|--------------------|
| EDEA 30 | 8116900 | GC No 47-283-91 |
| EDEA 40 | 8116902 | GC No 47-283-92 |

COMPLIANCE

Our company declares that the **Edea** appliances conform to the essential requirements of the following directives:

- Gas Appliances EU Regulation 2016/426
- Boiler Efficiency Directive 92/42/EEC
- Low Voltage Directive 2014/35/UUE
- Electromagnetic Compatibility Directive 2014/30/EU
- Ecodesign Directive 2009/125/EC
- Regulation (UE) N. 811/2013 - 813/2013
- Energy labelling Regulation (EU) No. 2017/1369



Please refer to the technical data plate for the serial number and year of manufacture.

SYMBOLS



WARNING

To indicate actions which, if not carried out correctly, can result in injury of a general nature or may damage or cause the appliance to malfunction; these actions therefore require particular caution and adequate preparation.



ELECTRICAL HAZARD

To indicate actions which, if not carried out correctly, could lead to injury of an electrical nature; these actions therefore require particular caution and adequate preparation.



DO NOT

To indicate actions which **MUST NOT BE** carried out.



CAUTION

To indicate particularly important and useful information.

MANUAL STRUCTURE

This manual is organized as follows.

USER INSTRUCTIONS

TABLE OF CONTENTS

9

DESCRIPTION OF THE APPLIANCE

TABLE OF CONTENTS

15

INSTALLATION AND SERVICING INSTRUCTIONS

TABLE OF CONTENTS

25

USER INSTRUCTIONS

TABLE OF CONTENTS

| | | | | | |
|----------|--|-----------|----------|---|-----------|
| 1 | OPERATING WITH EDEA | 10 | 3 | MAINTENANCE | 13 |
| 1.1 | Control panel | 10 | 3.1 | Servicing..... | 13 |
| 1.2 | Preliminary checks | 11 | 3.2 | External cleaning..... | 13 |
| 1.3 | Ignition | 11 | 3.2.1 | Cleaning the case..... | 13 |
| 1.4 | Adjusting the delivery temperature | 11 | | | |
| 1.5 | Adjusting the domestic hot water temperature | 11 | 4 | DISPOSAL | 13 |
| 1.6 | Fault / malfunction codes..... | 12 | 4.1 | Disposal of the equipment (European Directive 2012/19/EU) | 13 |
| 1.6.1 | Maintenance request | 12 | | | |
| 2 | SHUTDOWN | 12 | | | |
| 2.1 | Temporary shutdown..... | 12 | | | |
| 2.2 | Shutting down for long periods | 13 | | | |

VERY IMPORTANT!

PLEASE MAKE SURE YOUR COMMISSIONING CHECKLIST AND THE SERVICE INTERVAL RECORDS ENCLOSED ARE FILLED IN CORRECTLY.

ALL GAS SAFE REGISTERED INSTALLERS CARRY A GAS SAFE ID CARD.

BOTH SHOULD BE RECORDED IN YOUR COMMISSIONING CHECKLIST AND A SERVICE INTERVAL RECORDS.

YOU CAN CHECK YOUR INSTALLER IS GAS SAFE REGISTERED

BY CALLING ON 0800 408 5500 OR ALTERNATIVELY WWW.GASSAFEREGISTER.CO.UK

1 OPERATING WITH EDEA

1.1 Control panel

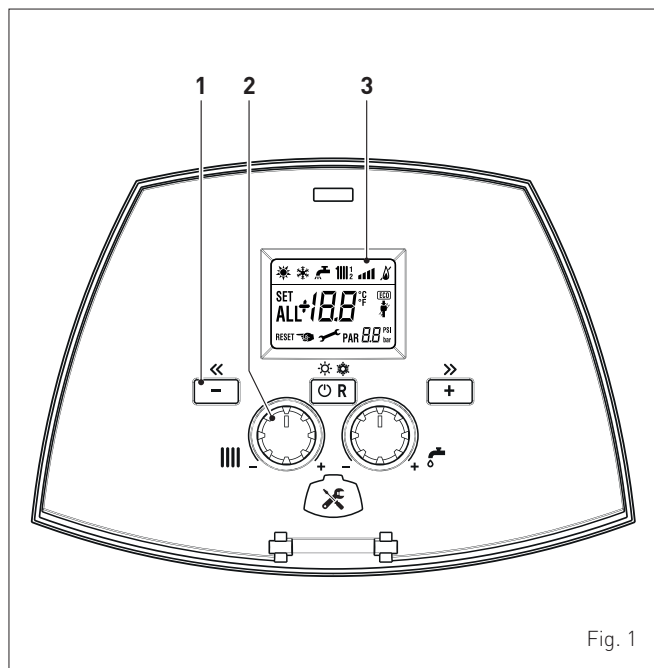


Fig. 1

1 FUNCTIONAL BUTTONS

POWER If pressed once or more times for at least 1 second during normal operation, this button allows the user to change the appliance's operating mode in a cyclical sequence [Stand-by – Summer – Winter]. If the appliance is experiencing a resettable fault, it can be used to unlock it.

- This allows the engineer to scroll through the parameters or decrease the values.

+ This allows the engineer to scroll through the parameters or increase the values.

Wrench icon Programming connector cover plug.

2 KNOBS

Heating knob The heating knob allows the user to set the flow temperature to between 20 and 80°C during normal operation.

DHW knob The domestic hot water knob allows the user to set the domestic hot water temperature to between 10 and 60°C during normal operation.

NOTE: pressing any button for more than 30 seconds causes a fault to appear on the display (ALL 42) without preventing the appliance's operation. The warning disappears when the button is released.

3 DISPLAY



"SUMMER". This symbol appears when the boiler is operating in "Summer" mode or if only the domestic hot water mode is enabled via the remote control.



"WINTER". The symbol is present in the "Winter" operating mode, or with the remote control if both the domestic hot water and heating modes are enabled. The flashing and symbols signal that the "chimney sweep" function is active.



RESET "RESET REQUEST". The wording indicates that, once the fault has been repaired, the appliance's normal operation can be reset by pressing the **POWER** button.



"DOMESTIC HOT WATER". This symbol is present during a DHW request or during the "chimney sweep function". It flashes during the selection of the domestic hot water set point.



"HEATING". This symbol lights up during heating operation or during the "chimney sweep function". It flashes during the selection of the heating set point.



"LOCKOUT" DUE TO NO FLAME.



"FLAME LIT".



"POWER LEVEL". Indicates the power level at which the appliance is operating.



"PARAMETER". This indicates when the engineer is in parameter setting/display, or "info" or "counter", or in "activated alarms" (history).



"ALARM". This indicates that a fault has occurred. The number specifies the cause which generated the alarm.



"CHIMNEY SWEEP". This indicates that the "chimney sweep function" has been activated.



"HEATING SYSTEM PRESSURE". Display of heating system pressure.



"ECO", ALTERNATIVE ENERGY SOURCES. Where active, it indicates that there is a solar system available.



"MAINTENANCE REQUEST". If active, it indicates that it is time to perform maintenance on the appliance.

1.2 Preliminary checks



WARNING


- Should it be necessary to access the areas in the bottom part of the appliance, make sure that the system components and pipes are not hot (risk of burning).
- Before replenishing the heating system, put on protective gloves.

The initial start-up of **Edea** must be carried out by professionally qualified personnel, after which the appliance can function automatically. It may be necessary for the user to restart the appliance automatically, without contacting the technician; for example, after a holiday.

First of all, check that the gas isolation and water system valves are open.

1.3 Ignition

After completing the preliminary checks, start up **Edea**:

- set the main system switch to "ON" in order for the display to show the pressure level in the system during refilling
- **check that the operating mode on the display is "Stand-by"** and if necessary select it by pressing the button  once or twice

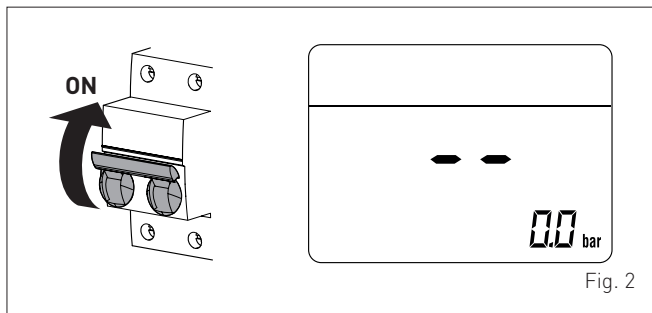


Fig. 2

- check that the pressure in the heating system, when cold, is **1-1.2 bar**. If the pressure is less than this, use the external filling device to repressurise the system to **1-1.2 bar**
- ensure that the filling device is turned off after use










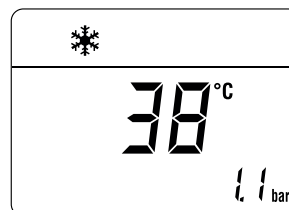
Fig. 3

- select the "SUMMER"  operating mode by pressing and holding the  button for at least 1 second. The delivery temperature detected at that moment will appear on the display

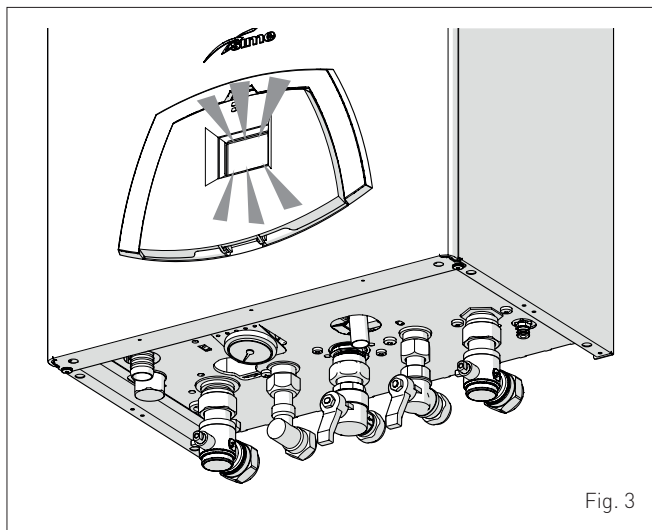

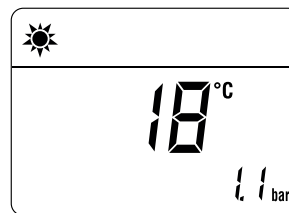
- open one or more hot water taps. **Edea** will work at its maximum power until the tap or taps are closed.

Once **Edea** is commissioned in "SUMMER mode" , with the  button, pressed for at least 1 second, it is possible to choose the "WINTER mode" . The display will show the value of the delivery water temperature measured at that time. In this case it is necessary to adjust the room thermostat(s) at the desired temperature or, if the system is equipped with a timer-controlled thermostat, verify that it is "active" and adjusted.



1.4 Adjusting the delivery temperature

To increase or decrease the delivery temperature of **Edea**, instead of modifying the specific parameter, it is possible to turn knob  on the control panel. The temperature can be set to between 20 and 80°C.

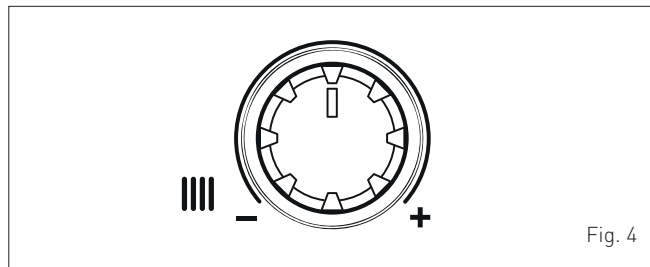



Fig. 4

1.5 Adjusting the domestic hot water temperature

The temperature of the domestic hot water can be adjusted by turning the  knob on the control panel.

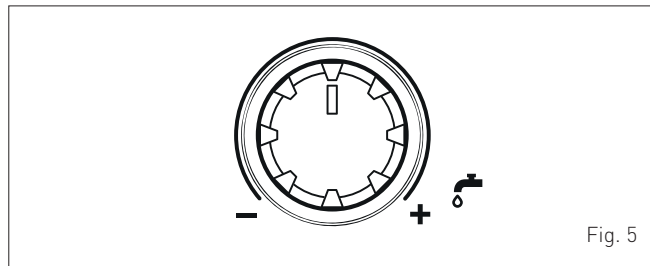


Fig. 5

1.6 Fault / malfunction codes

If, during the operation of **Edea**, an anomaly/fault occurs, the display will show **"ALL"** followed by the anomaly code.

If you see alarm **"02"** (low water pressure in the system):

- check that the pressure in the heating system, when cold, is **1-1.2 bar**. If the pressure is less than this, use the external filling device to repressurise the system to **1-1.2 bar**
- ensure that the filling device is turned off after use
- press and hold the button **OR** for more than 3 seconds and check whether normal operating conditions are restored.

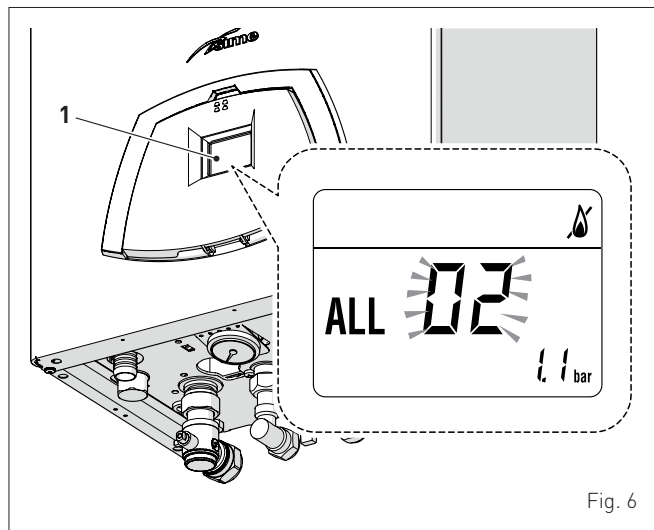


Fig. 6

If you see alarm **"06"** (no flame detected) and **"07"** (safety thermostat intervention):

- press and hold the button **OR** for more than 3 seconds and check whether normal operating conditions are restored.



If this operation is not successful, **ONLY ONE MORE ATTEMPT** can be made, therefore:

- close the gas cock
- isolate the power supply
- contact the Qualified Technical Personnel.

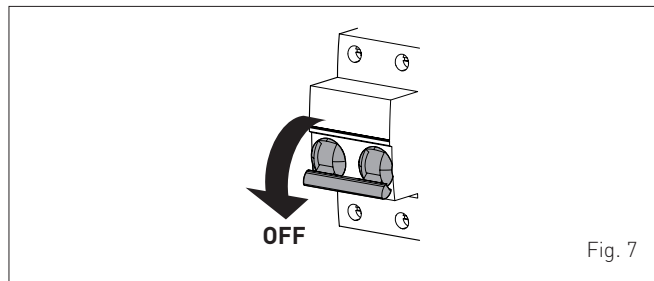


Fig. 7




CAUTION

Should you see an alarm not described here, contact a qualified technical professional

1.6.1 Maintenance request

When it is time to perform maintenance on the boiler, the symbol shows on the display.

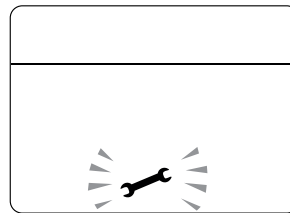


Contact the technical assistance service to organise the necessary work.

2 SHUTDOWN

2.1 Temporary shutdown

To temporarily interrupt the operation of **Edea**, press the **OR** button for at least 1 second, once from the **"WINTER mode"** or twice from the **"SUMMER mode"** . **"--"** will appear on the display; the boiler will be in **STAND-BY**. The boiler anti freeze function will be enabled.

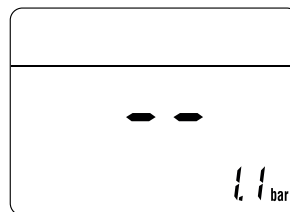

ELECTRICAL HAZARD

The boiler will still be powered.

If the user is away temporarily, for a weekend, short trip etc and if the outside temperature is at **ZERO**:

- press the **OR** button, once from the **"WINTER mode"** or twice from the **"SUMMER mode"** , to put the **Edea** in stand-by
- isolate the power supply
- isolate the gas cock.

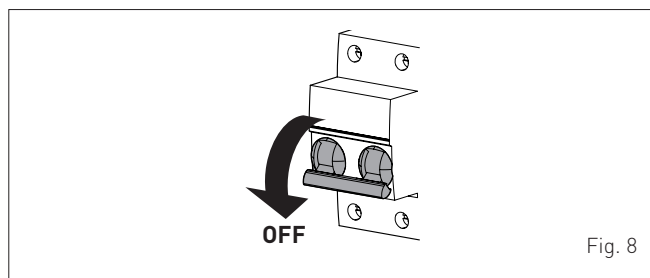


Fig. 8



CAUTION


If the outside temperature might fall below **ZERO**, since the appliance is equipped with an "antifreeze function"

- **ONLY PUT THE BOILER INTO STAND-BY**
- leave the system's main switch set to **"ON"** (appliance powered electrically)
- leave the gas cock open.

2.2 Shutting down for long periods

If the boiler is to be left unused for a long period, the following operations need to be carried out:

- press the **OR** button for at least 1 second, once from the “WINTER mode” ❄️ or twice from the “SUMMER mode” ☀️, to put the **Edea** in stand-by. The display will show “- -”

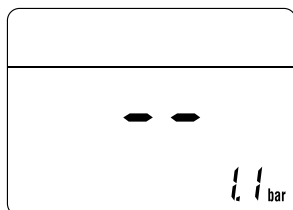

- isolate the power supply

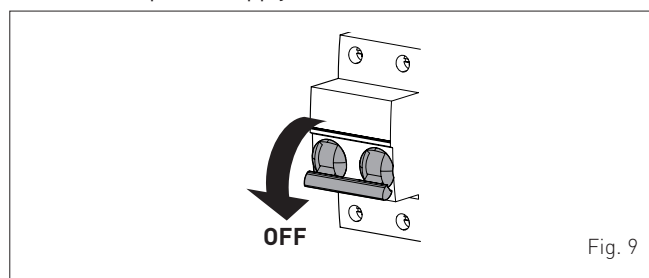


Fig. 9

- isolate the gas cock
- close the heating and domestic hot water isolation valves
- drain the heating and domestic hot water system if there is the risk of freezing.



CAUTION

Contact the Qualified Technical Personnel if the procedure described above cannot be easily carried out.

3 MAINTENANCE

3.1 Servicing

As a condition of the warranty and to ensure correct operation and efficiency, it is important that the boiler is serviced every 12 months, within 30 days of the anniversary of the installation date ensure the required information is recorded in the Gas Boiler System Service Interval Record (Benchmark).



CAUTION

Maintenance must **ONLY** be carried out by qualified professionals who follow the indications provided in the **INSTALLATION AND MAINTENANCE INSTRUCTIONS**.

3.2 External cleaning



WARNING

- Should it be necessary to access the areas in the bottom part of the appliance, make sure that the system components and pipes are not hot (risk of burning).
- Before performing any maintenance, put on protective gloves.

3.2.1 Cleaning the case

When cleaning the cladding, use a cloth dampened with soap and water or alcohol for stubborn marks.



DO NOT

Do not use abrasive products.

4 DISPOSAL

4.1 Disposal of the equipment (European Directive 2012/19/EU)



At the end of their life span, the appliance and electrical and electronic devices coming from households or classifiable as household waste must be delivered to appropriate waste collection systems, in accordance with the law and with Directive 2012/19/EU. This product was designed and manufactured for minimising its impact on the environment and on human health, but it contains components that could be detrimental if managed improperly. The symbol (crossed-out wheeled bin) depicted here and also appearing on your appliance means that the appliance at the end of its life must be managed in accordance with the law and treated as electrical and electronic waste. Before delivering the appliance for its disposal, consult the applicable provisions of the laws in force in the country where the appliance is used and get information on the authorised waste disposal facilities by contacting the relevant local offices.



DO NOT

dispose of the product with urban waste.

DESCRIPTION OF THE APPLIANCE

TABLE OF CONTENTS

| | | | |
|----------|---|-----------|--|
| 5 | DESCRIPTION OF THE APPLIANCE | 16 | |
| 5.1 | Characteristics | 16 | |
| 5.2 | Check and safety devices | 16 | |
| 5.3 | Identification | 16 | |
| | 5.3.1 <i>Technical Data Plate</i> | 17 | |
| 5.4 | Structure | 18 | |
| 5.5 | Technical features | 19 | |
| 5.6 | Main water circuit | 20 | |
| 5.7 | Sensors | 20 | |
| 5.8 | Expansion vessel | 21 | |
| 5.9 | Circulation pump | 21 | |
| 5.10 | Control panel | 22 | |
| 5.11 | Wiring diagram | 23 | |

5 DESCRIPTION OF THE APPLIANCE

5.1 Characteristics

Edea are last generation condensing wall mounted boilers which **Sime Ltd** has produced for heating and instant domestic hot water production when combined with a storage tank. The main design choices made by **Sime Ltd** for the **Edea** boilers are:

- the total pre-mix microflame burner combined with a stainless steel heat exchanger with a plaster outer shell, for heating
- room sealed, Type C appliance. Suitable for use on sealed heating systems
- the electronic control and command circuit board with microprocessor, for optimal management of the heating system and modulation of up to 1:10 for the instant production of domestic hot water. It allows for connecting room thermostats, an auxiliary sensor for managing kits, and the external sensor. The presence of the external sensor will make the boiler work at a variable temperature, in other words, the temperature in the boiler will vary in relation to the outdoor temperature, in accordance with the optimal climatic curve selected during the installation phase, resulting in considerable energy and financial savings. Moreover, the command board has an internal connection for inserting an expansion board which is used to control external relays.

Other special features of the **Edea** boilers are:

- the anti-freeze function which activates automatically if the temperature of the water inside the boiler falls below the threshold of the value set at parameter "PAR 10" and , if there is an external sensor, if the external temperature falls below the threshold of the value set at parameter "PAR 11"
- anti jamming function of the pump and diverter valve, this activates automatically every 24 hours if no request for heat has been made
- the chimney sweep function lasts 15 minutes and makes the job of the qualified technician easier when measuring the parameters and combustion efficiency
- domestic hot water comfort function which allows the time necessary for the hot water to become available to be reduced and ensures that the temperature is stable
- screen display of the operating and self-diagnostic parameters with error code display when the fault occurs. This makes repair interventions easier and allows appliance operation to be restored correctly.

5.2 Check and safety devices

The **Edea** boilers are equipped with the following check and safety devices:

- thermal safety thermostat 100°C
- 3 bar relief valve
- heating water pressure transducer
- delivery sensor
- DHW sensor
- exhaust sensor
- return sensor (SR).



DO NOT

Do not commission or operate the appliance with safety devices which do not work or which have been tampered with.



WARNING

Safety device may only be replaced by professional qualified personnel using **Sime Ltd** original spare parts.

5.3 Identification

The **Edea** boilers can be identified by means of:

- 1 Packaging label:** this is located on the outside of the packaging and provides a code, the serial number of the boiler and the bar code.
- 2 Energy Efficiency Label:** this is positioned on the outside of the packaging to notify the User of the level of energy savings and reduced environmental pollution produced by the appliance.
- 3 Technical Data Plate:** this is located inside the front panel of the boiler and provides the technical data, appliance performance information and any other information required by law in the country where the appliance will be used.
- 4 Sticker of product identification.**

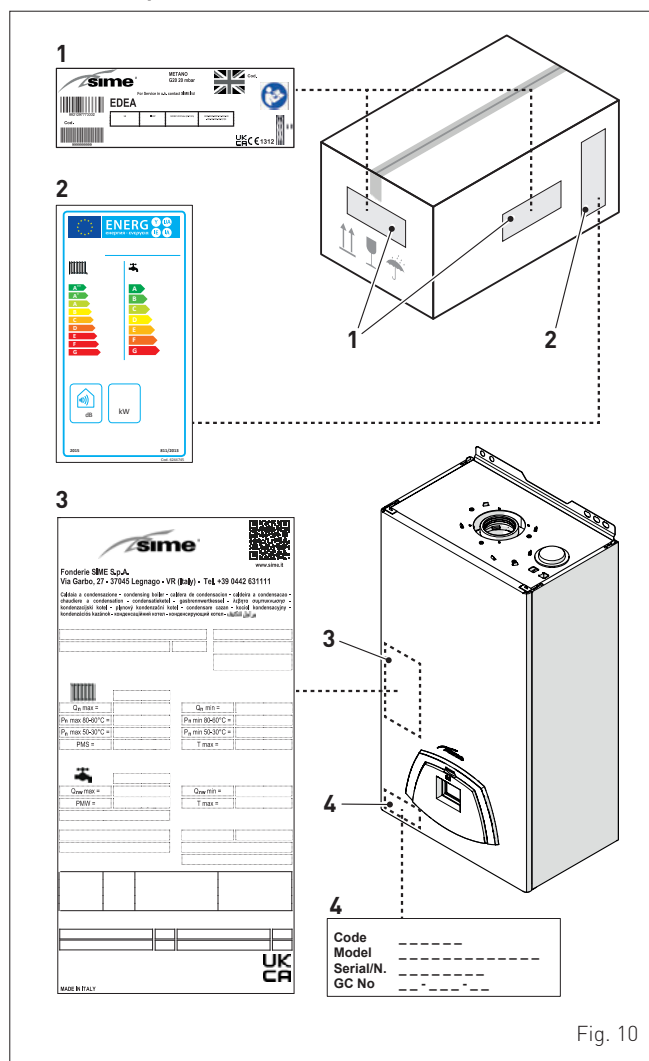


Fig. 10



CAUTION

Tampering with, removing or failing to display the identification plate or carrying out any other operation which does not allow safe identification of the product or which may hinder installation and maintenance operations.

5.3.1 Technical Data Plate

NAME

SERIAL NUMBER

YEAR OF MANUFACTURE

WATER CONTENT IN BOILER

MAX HEAT INPUT

MAX USEFUL OUTPUT (80-60°C)

MAX USEFUL OUTPUT (50-30°C)

MAX OPERATING PRESSURE

D.H.W. CONTENT

MAX HEAT INPUT

MAX OPERATING PRESSURE

FLOW RATE

ELECTRICAL SUPPLY

MAXIMUM ABSORBED POWER

TYPE OF GAS

COUNTRY OF INTENDED INSTALLTION

APPLIANCE CATEGORY

APPLIANCE TYPE

CODE

N° PIN

MIN HEAT INPUT

MIN USEFUL OUTPUT (80-60°C)

MIN USEFUL INPUT (50-30°C)

MAX OPERATING TEMPERATURE

MIN HEAT INPUT

MAX D.H.W. TEMPERATURE

ELECTRICAL PROTECTION DEGREE

NOx CLASS

GAS COUNCIL NUMBER CODE (UK)

WRAS CERTIFICATION (UK)

APPLIANCE CLASSIFICATION

TYPE OF GAS

SUPPLY PRESSURE

UK CA

MADE IN ITALY


Fig. 11



CAUTION

Tampering with, removing or failing to display the identification plate or carrying out any other operation which does not allow safe identification of the product or which may hinder installation and maintenance operations.

5.4 Structure

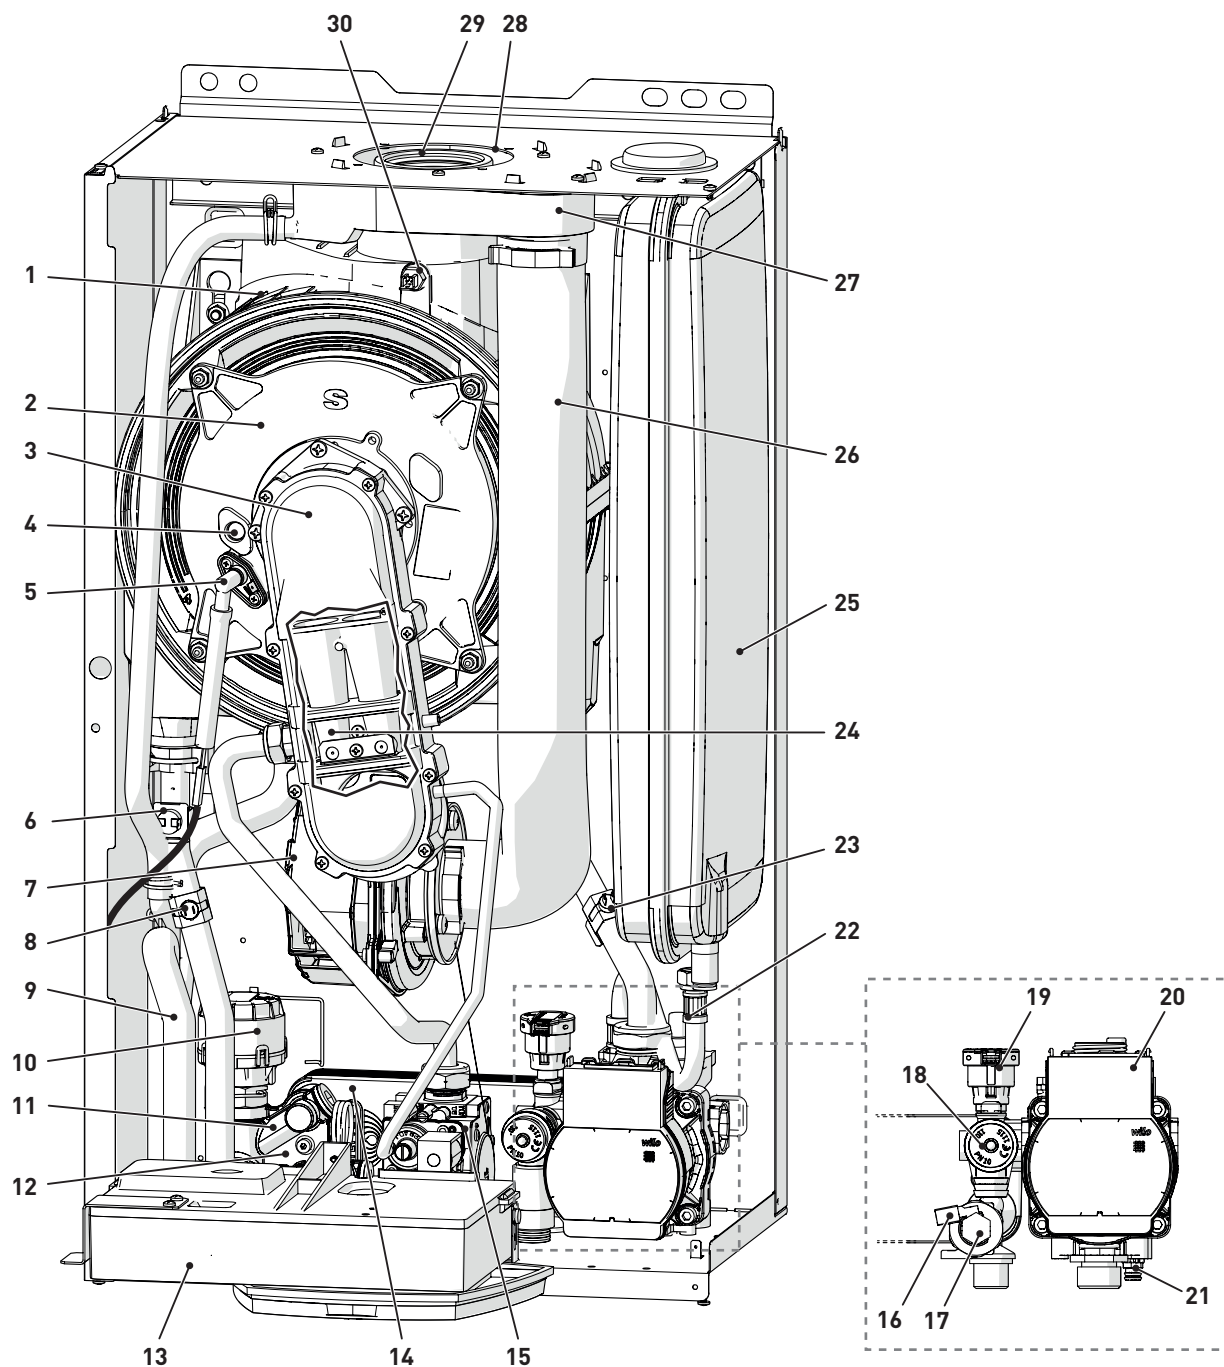

- | | |
|--------------------------------------|--|
| 1 Heat exchanger | 16 Domestic hot water flow meter (FLM) |
| 2 Combustion chamber door | 17 Domestic hot water filter |
| 3 Air/gas duct | 18 Relief valve (FS) |
| 4 Flame viewing window | 19 Water pressure transducer (TPAC) |
| 5 Ignition/detection electrode (EAR) | 20 Pump (PI) |
| 6 Safety thermostat (TS) | 21 Boiler drain |
| 7 Fan (V) | 22 Automatic bleed valve |
| 8 Boiler delivery sensor (SMC) | 23 Boiler return probe (SRC) |
| 9 Condensate siphon outlet | 24 Air-gas mixer |
| 10 Diverter solenoid valve (EVD) | 25 Expansion vessel (VE) |
| 11 System filling unit | 26 Air inlet pipe |
| 12 Domestic hot water sensor (SS) | 27 Air-smoke chamber |
| 13 Control panel | 28 Air inlet |
| 14 Domestic hot water heat exchanger | 29 Smoke outlet duct (CSFU) |
| 15 Gas valve | 30 Exhaust sensor (SF) |

Fig. 12

5.5 Technical features

| DESCRIPTION | Edea | | |
|---|---|-------------|-------------|
| | 30 | 40 | |
| CERTIFICATIONS | | | |
| Country of intended installation | GB | | |
| Fuel | G20 - G31 | | |
| PIN number | 1312CU6393 | | |
| Category | II2H3P | | |
| Appliance classification | B23P - B33P - B53P - C13 - C33 - C43 - C53 - C63 - C83 - C93 - C[10]3 | | |
| DHW rated useful heat output | kW | 30,0 | 40,0 |
| Class NO _x (*) | 6 (< 56 mg/kWh) | | |
| HEATING PERFORMANCE | | | |
| HEAT INPUT (**) | | | |
| Nominal flow (Q _n max) | kW | 25 | 34,8 |
| Minimum flow G20/G31 (Q _n min) | kW | 3,0 / 4,0 | 4,5 / 5,5 |
| HEAT OUTPUT | | | |
| Nominal (80-60°C) (P _n max) | kW | 24,5 | 34,1 |
| Nominal (50-30°C) (P _n max) | kW | 26,4 | 36,7 |
| Minimum G20 (80-60°C) (P _n min) | kW | 2,8 | 4,2 |
| Minimum G20 (50-30°C) (P _n min) | kW | 3,1 | 4,7 |
| Minimum G31 (80-60°C) (P _n min) | kW | 3,7 | 5,1 |
| Minimum G31 (50-30°C) (P _n min) | kW | 4,2 | 5,7 |
| EFFICIENCY | | | |
| Max useful efficiency (80-60°C) | % | 98 | 98 |
| Min useful efficiency (80-60°C) | % | 93,3 | 93,3 |
| Max useful efficiency (50-30°C) | % | 105,8 | 105,6 |
| Min useful efficiency (50-30°C) | % | 104,7 | 104,2 |
| Useful efficiency at 30% of load (40-30°C) | % | 108,7 | 108,5 |
| Losses after shutdown at 50°C | W | 105 | 115 |
| DOMESTIC HOT WATER PERFORMANCE | | | |
| Nominal heat input (Q _{nw} max) | kW | 30 | 40 |
| Minimum heat input G20/G31 (Q _{nw} min) | kW | 3,0 / 4,0 | 4,5 / 5,5 |
| Specific D.H.W. flow rate ΔT 30°C (EN 13203) | l/min | 13,0 | 18,8 |
| Continuous D.H.W. flow rate (ΔT 25°C / ΔT 35°C) | l/min | 16,9 / 12,0 | 22,5 / 16,1 |
| Minimum D.H.W. flow rate | l/min | 2,0 | 2,0 |
| Max (PMW) / Min Pressure | bar | 7 / 0,5 | |
| | kPa | 700 / 50 | |
| ENERGY PERFORMANCE | | | |
| HEATING | | | |
| Heating seasonal energy efficiency class | | A | A |
| Heating seasonal energy efficiency | % | 93 | 93 |
| Sound power | dB(A) | 55 | 56 |
| DOMESTIC HOT WATER | | | |
| Domestic hot water energy efficiency class | | A | A |
| Domestic hot water energy efficiency | % | 86 | 86 |
| Stated domestic hot water profile load | | XL | XXL |
| ELECTRICAL SPECIFICATIONS | | | |
| Power supply voltage | V | 230 | |
| Frequency | Hz | 50 | |
| Absorbed electrical power (Q _n max) | W | 93 | 113 |
| Absorbed electrical power at (Q _n min) | W | 67 | 65 |
| Absorbed electrical power in stand-by | W | 4 | 6 |
| Electrical protection degree | IP | X5D | |
| COMBUSTION DATA | | | |
| Smoke temperature at Max/Min flow (80-60°C) | °C | 80,0 / 62,0 | 74,5 / 58,2 |
| Smoke temperature at Max/Min flow (50-30°C) | °C | 51,3 / 42,5 | 52,3 / 44,2 |
| Smoke flow Max/Min | g/s | 14,5 / 1,5 | 18,8 / 2,2 |
| CO ₂ at Max/Min flow rate (G20) | % | 9,2 / 9,0 | 9,3 / 9,1 |
| CO ₂ at Max/Min flow rate (G31) | % | 10,2 / 10,0 | 10,0 / 10,0 |
| NO _x measured | mg/kWh | 15 | 34 |
| Gas consumption at Max/Min flow rate (G20) | m³/h | 3,17 / 0,32 | 4,23 / 0,48 |
| Gas consumption at Max/Min flow rate (G31) | kg/h | 2,33 / 0,31 | 3,11 / 0,43 |
| Gas supply pressure (G20/G31) | mbar | 20 / 37 | 20 / 37 |
| | kPa | 2 / 3,7 | 2 / 3,7 |

(*) NO_x class according to UNI EN 15502-1:2021

(**) Heat input calculated using the lower heat output (Hi)

| DESCRIPTION | | Edea | |
|-------------------------------------|-----|-----------|-----------|
| | | 30 | 40 |
| NOZZLES - GAS | | | |
| Number of nozzles | No. | 2 | 2 |
| Nozzle diameter (G20) | mm | 3,5 / 4,0 | 4 / 4,5 |
| Nozzle diameter (G31) | mm | 2,8 / 3,0 | 2,8 / 3,4 |
| TEMPERATURE - PRESSURE | | | |
| Max operating temperature (T max) | °C | 85 | |
| Heating adjustment range | °C | 20÷80 | |
| Domestic hot water adjustment range | °C | 10÷60 | |
| Max operating pressure (PMS) | bar | 3 | |
| | kPa | 300 | |
| Water content in boiler | l | 5,1 | 5,8 |

Lower Heat Output (Hi)

G20 Hi. 9.45 kW/m³ (15°C, 1013 mbar) - **G31 Hi.** 12.87 kW/kg (15°C, 1013 mbar)

5.6 Main water circuit

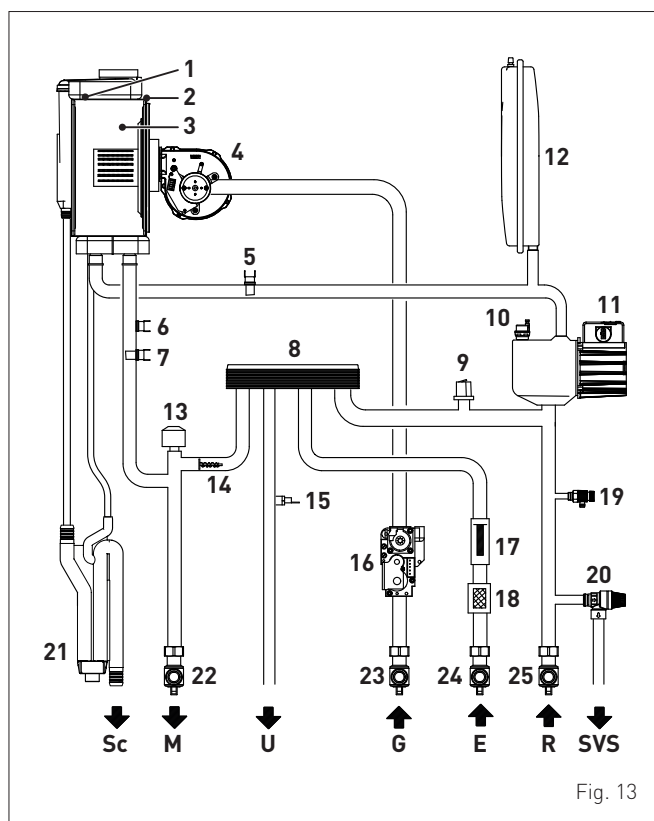


Fig. 13

KEY:

- M System flow
- R System return
- U Domestic hot water outlet
- E Domestic hot water inlet
- SVS Safety valve outlet
- G Gas supply
- Sc Condensate outlet

- 1 Exhaust sensor (SF)
- 2 Heat exchanger
- 3 Combustion chamber
- 4 Fan (V)
- 5 Boiler return probe (SRC)
- 6 Safety thermostat (TS)
- 7 Boiler delivery sensor (SMC)

- 8 Domestic hot water heat exchanger
- 9 Water pressure transducer (TPAC)
- 10 Automatic bleed valve
- 11 Pump (PI)
- 12 Expansion vessel (VE)
- 13 Diverter solenoid valve (EVD)
- 14 Automatic by-pass
- 15 Domestic hot water sensor (SS)
- 16 Gas valve
- 17 Domestic hot water flow meter
- 18 Domestic hot water filter (FLM)
- 19 Boiler drain
- 20 Relief valve (FS)
- 21 Condensate siphon outlet
- 22 System flow cock
- 23 Gas cock
- 24 Domestic hot water inlet cock
- 25 System return cock

5.7 Sensors

The sensors installed have the following characteristics:

- NTC R25°C (delivery) sensor; 10kΩ B25°-85°C: 3435
- domestic hot water sensor NTC R25°C; 10kΩ B25°-85°C: 3435
- External temperature sensor NTC R25°C; 10kΩ B25°-85°C: 3435

| TR | 0°C | 1°C | 2°C | 3°C | 4°C | 5°C | 6°C | 7°C | 8°C | 9°C |
|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|-------|
| 0°C | 27279 | 26135 | 25044 | 24004 | 23014 | 22069 | 21168 | 20309 | 19489 | 18706 |
| 10°C | 17959 | 17245 | 16563 | 15912 | 15289 | 14694 | 14126 | 13582 | 13062 | 12565 |
| 20°C | 12090 | 11634 | 11199 | 10781 | 10382 | 9999 | 9633 | 9281 | 8945 | 8622 |
| 30°C | 8313 | 8016 | 7731 | 7458 | 7196 | 6944 | 6702 | 6470 | 6247 | 6033 |
| 40°C | 5828 | 5630 | 5440 | 5258 | 5082 | 4913 | 4751 | 4595 | 4444 | 4300 |
| 50°C | 4161 | 4026 | 3897 | 3773 | 3653 | 3538 | 3426 | 3319 | 3216 | 3116 |
| 60°C | 3021 | 2928 | 2839 | 2753 | 2669 | 2589 | 2512 | 2437 | 2365 | 2296 |
| 70°C | 2229 | 2164 | 2101 | 2040 | 1982 | 1925 | 1870 | 1817 | 1766 | 1717 |
| 80°C | 1669 | 1622 | 1577 | 1534 | 1491 | 1451 | 1411 | 1373 | 1336 | 1300 |
| 90°C | 1266 | 1232 | 1199 | 1168 | 1137 | 1108 | 1079 | 1051 | 1024 | 998 |
| 100°C | 973 | | | | | | | | | |

Resistance R (Ω)

Correspondence of Temperature Detected/Resistance

Examples of reading:

TR=75°C → R=1925Ω

TR=80°C → R=1669Ω.

5.8 Expansion vessel

| Description | U/M | Edea | |
|----------------------------|-----|------|------|
| | | 30 | 40 |
| Total capacity | l | 9,0 | 10,0 |
| Prefilling pressure | kPa | 100 | |
| | bar | 1,0 | |
| Useful capacity | l | 5,0 | 6,0 |
| Maximum system content (*) | l | 124 | 140 |

(*) Conditions of:

Average operating temperature 70°C (with high temperature system 80/60°C)

Start temperature at system filling 10°C.




CAUTION

- For systems with water content exceeding the maximum system content (as indicated in the table) an additional expansion vessel must be fitted.
- The difference in height between the relief valve and the highest point of the system cannot exceed 6 metres. If the difference is greater than 6 metres, increase the prefilling pressure of the expansion vessel and the system when cold by 0.1 bar for each meter increase.

5.9 Circulation pump

The flow-head performance curve available for the heating system is shown in the graph below.

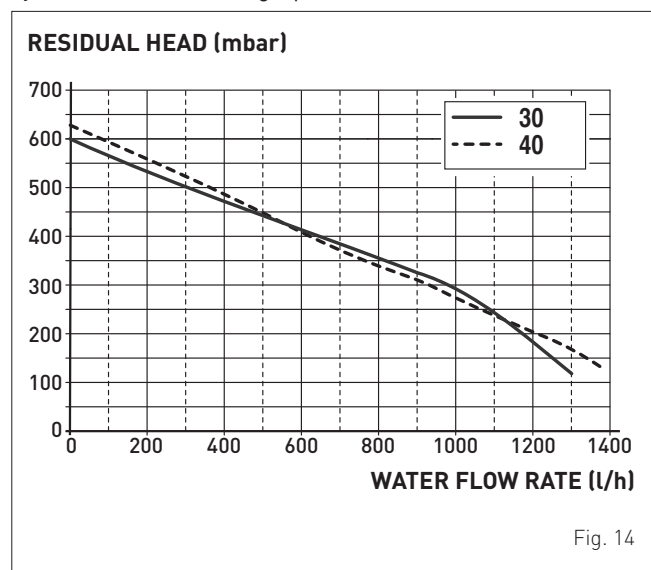

CAUTION

The appliance is equipped with a by-pass which ensures water circulation in the boiler when thermostatic valves are used in the system. The heating system design should incorporate a room thermostat. Thermostatic radiator valves fitted to all radiators except the room where the room thermostat is fitted. Properties with floor areas exceeding 150 square metres should be zoned.

5.10 Control panel

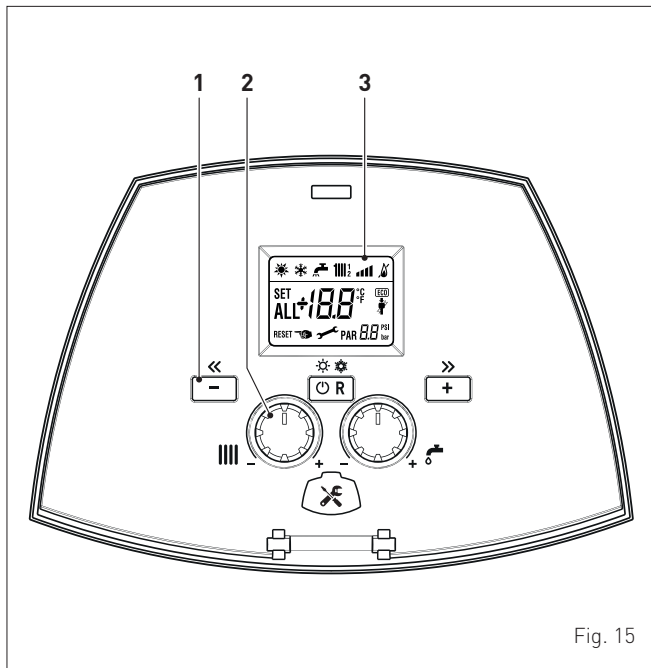


Fig. 15

1 FUNCTIONAL BUTTONS

ON If pressed once or more times for at least 1 second during normal operation, this button allows the user to change the appliance's operating mode in a cyclical sequence (Stand-by – Summer – Winter). If the appliance is experiencing a resettable fault, it can be used to unlock it.

- This allows the engineer to scroll through the parameters or decrease the values.

+ This allows the engineer to scroll through the parameters or increase the values.

Programming connector cover plug.

2 KNOBS

|||| The heating knob allows the user to set the flow temperature to between 20 and 80°C during normal operation.

The domestic hot water knob allows the user to set the domestic hot water temperature to between 10 and 60°C during normal operation.

NOTE: pressing any button for more than 30 seconds causes a fault to appear on the display (ALL 42) without preventing the appliance's operation. The warning disappears when the button is released.

3 DISPLAY



"SUMMER". This symbol appears when the boiler is operating in "Summer" mode or if only the domestic hot water mode is enabled via the remote control.



"WINTER". The symbol is present in the "Winter" operating mode, or with the remote control if both the domestic hot water and heating modes are enabled. The flashing and symbols signal that the "chimney sweep" function is active.



RESET "RESET REQUEST". The wording indicates that, once the fault has been repaired, the appliance's normal operation can be reset by pressing the **ON** button.



"DOMESTIC HOT WATER". This symbol is present during a DHW request or during the "chimney sweep function". It flashes during the selection of the domestic hot water set point.



"HEATING". This symbol lights up during heating operation or during the "chimney sweep function". It flashes during the selection of the heating set point.



"LOCKOUT" DUE TO NO FLAME.



"FLAME LIT".



"POWER LEVEL". Indicates the power level at which the appliance is operating.



"PARAMETER". This indicates when the engineer is in parameter setting/display, or "info" or "counter", or in "activated alarms" (history).



"ALARM". This indicates that a fault has occurred. The number specifies the cause which generated the alarm.



"CHIMNEY SWEEP". This indicates that the "chimney sweep function" has been activated.



"HEATING SYSTEM PRESSURE". Display of heating system pressure.




"ECO", ALTERNATIVE ENERGY SOURCES. Where active, it indicates that there is a solar system available.



"MAINTENANCE REQUEST". If active, it indicates that it is time to perform maintenance on the appliance.

5.11 Wiring diagram

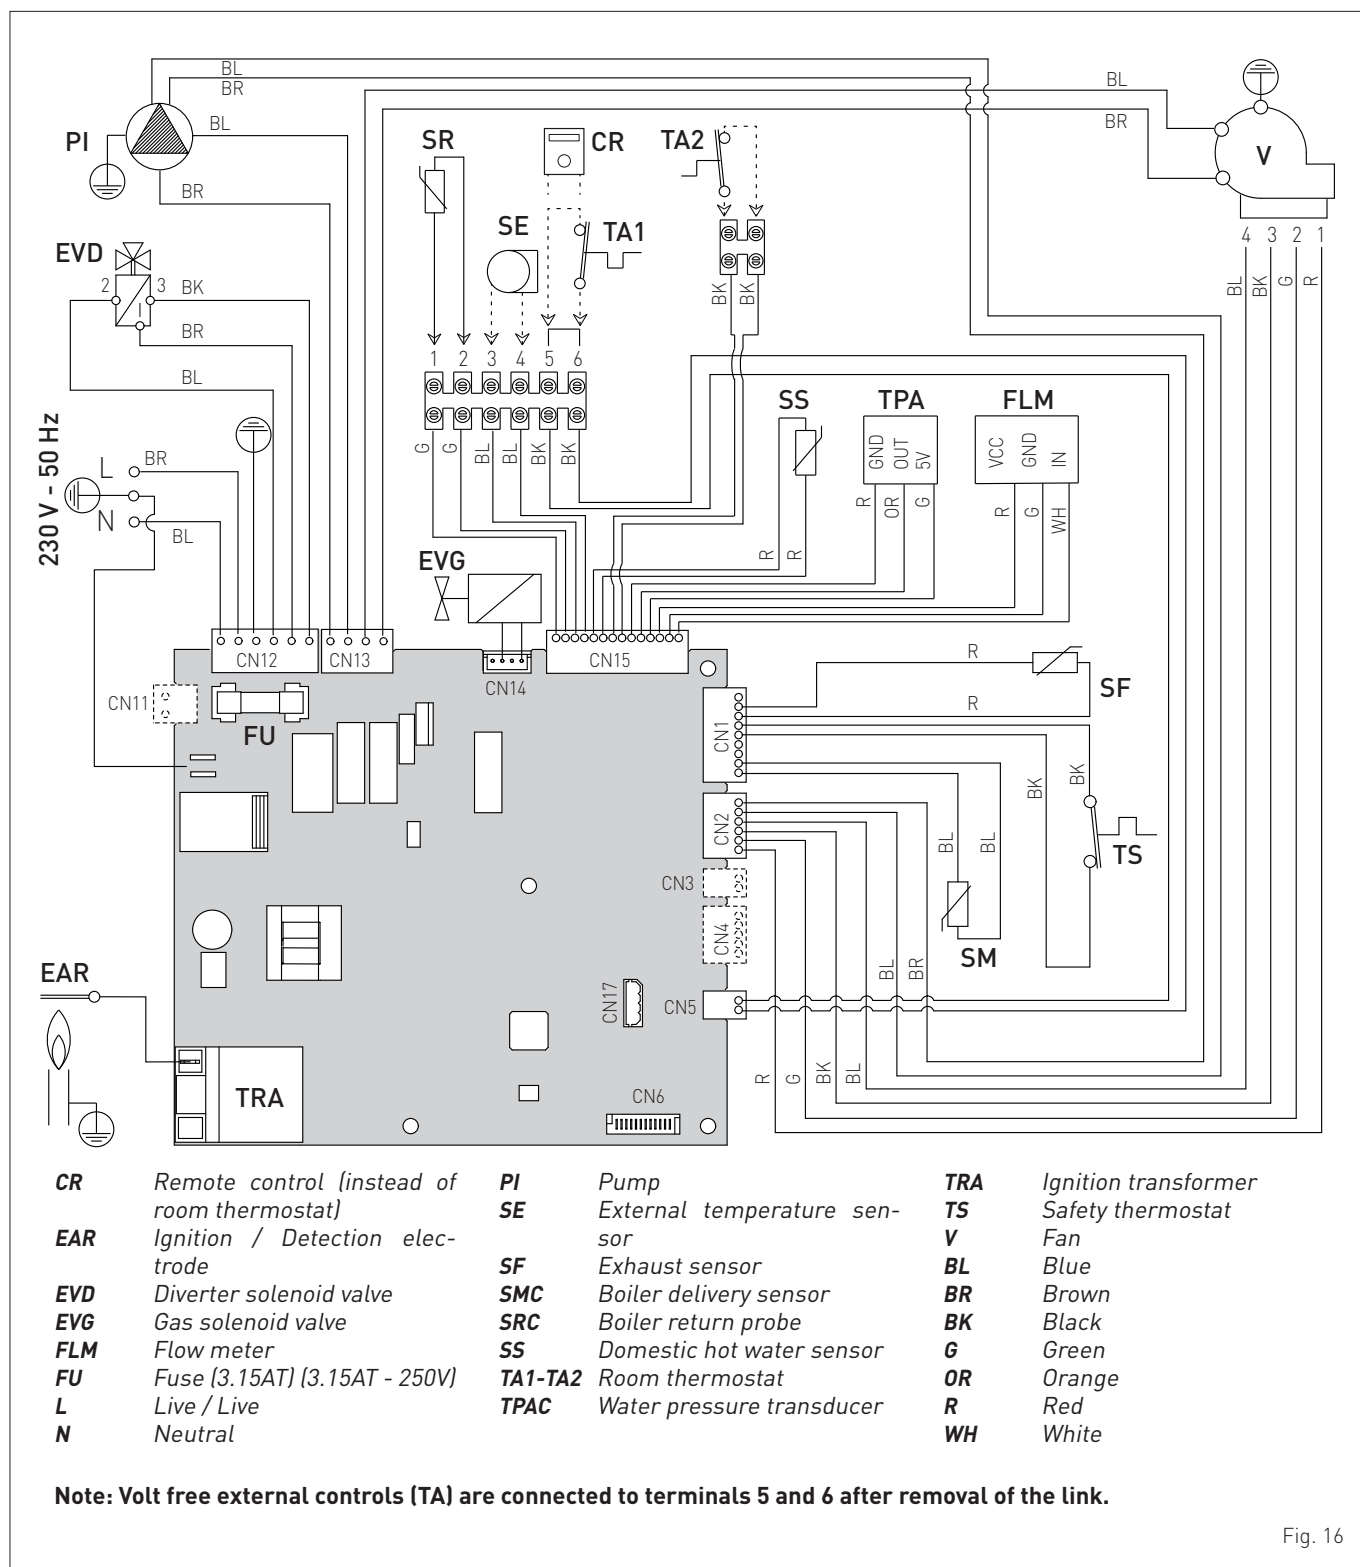

CAUTION

Installer must:

- To mount an omnipolar residual-current circuit breaker conforming to EN standards that allows for completely disconnecting the system in overvoltage category III conditions (that is, with a gap of at least 3 mm between the open contacts).
- Respect the connections L (Live) - N (Neutral).
- Ensure that the special power cable is only replaced with a cable ordered as a spare part and connected by professionally qualified personnel.



CAUTION

Installer must:

- Connect the earth wire to an effective earthing system. **Sime Ltd declines all responsible for any injury or damage to persons, animals, or property as a result of failure to provide adequate earthing of the appliance.**



DO NOT

Do not use water pipes for earthing the appliance.

The Benchmark Scheme

Benchmark places responsibilities on both manufacturers and installers.

The purpose is to ensure that customers are provided with the correct equipment for their needs, that it is installed, commissioned and serviced in accordance with the manufacturer's instructions by competent persons and that it meets the requirements of the appropriate Building Regulations.

The Benchmark Checklist can be used to demonstrate compliance with Building Regulations and should be provided to the customer for future reference.

Installers are required to carry out installation, commissioning and servicing work in accordance with the Benchmark Code of Practice which is available from the Heating and Hotwater Industry Council who manage and promote the Scheme.

INSTALLATION AND SERVICING INSTRUCTIONS

Installer Checklist

Please remember to carry out the following checks after installation. This will achieve complete customer satisfaction, and avoid unnecessary service calls. A charge will be made for a service visit where the fault is not due to a manufacturing defect.

Has a correct by-pass been fitted and adjusted?

Has the system and boiler been flushed?

Is the system and boiler full of water, and the correct pressure showing on the pressure gauge?

Is the Auto Air Vent open?

Has the pump been rotated manually?

Is the gas supply working pressure correct?

Is the boiler wired correctly? [See installation manual].

Has the D.H.W. flow rate been set to the customer requirements?

Has the customer been fully advised on the correct use of the boiler, system and controls?

Has the Benchmark Checklist in the use and maintenance section of this manual, been completed?

TABLE OF CONTENTS

| | | | | | |
|----------|---|-----------|-----------|--|-----------|
| 6 | INSTALLATION | 26 | 7.5 | Display of operating data and counters. | 42 |
| 6.1 | Receiving the product | 26 | 7.6 | Checks | 43 |
| 6.2 | Dimensions and weight. | 26 | 7.6.1 | Chimney sweep function | 43 |
| 6.3 | Handling | 26 | 7.7 | Domestic hot water comfort function (preheating) ... | 44 |
| 6.4 | Ventilation requirements | 26 | 7.8 | Gas conversion | 45 |
| 6.5 | New installation or installation of a replacement appliance | 27 | 7.8.1 | Preliminary operations | 45 |
| 6.6 | Cleaning the system | 27 | 8 | MAINTENANCE | 46 |
| 6.7 | Characteristics of feedwater and system treatment. | 27 | 8.1 | Servicing | 46 |
| 6.8 | Boiler installation | 27 | 8.2 | External cleaning | 46 |
| 6.9 | Plumbing connections | 28 | 8.2.1 | Cleaning the case | 46 |
| 6.9.1 | Plumbing accessories (optional) | 28 | 8.3 | Burner Inspection | 46 |
| 6.10 | Condensate outlet/collection | 28 | 8.3.1 | Burner access | 46 |
| 6.11 | Gas supply | 28 | 8.3.2 | Cleaning the burner and the combustion chamber | 47 |
| 6.12 | Connecting the flue | 29 | 8.3.3 | Checking the ignition/detection electrode .. | 47 |
| 6.12.1 | Flue Terminal Positions | 29 | 8.3.4 | Final operations | 47 |
| 6.12.2 | Installation of coaxial flues 60/100mm – 80/125mm | 30 | 8.4 | Checks | 47 |
| 6.12.3 | Installation of separate ducts 80mm. | 31 | 8.4.1 | Checking the flue | 47 |
| 6.12.4 | Coaxial duct (Ø 60/100mm and Ø 80/125mm) ... | 31 | 8.4.2 | Checking the expansion vessel pressure. ... | 47 |
| 6.12.5 | Separate ducts (Ø 60mm and Ø 80mm) ... | 32 | 8.4.3 | System Inhibiter concentration | 47 |
| 6.12.6 | Separate ducts (Ø 50 mm) | 33 | 8.5 | Circuit Board Replacement | 48 |
| 6.12.7 | Separate ducts (Ø 80mm) with duct kit C(10)334 | 33 | 8.6 | Malfunction codes and possible solutions | 48 |
| 6.13 | Electrical connections and External controls | 34 | 8.6.1 | Maintenance request | 49 |
| 6.13.1 | External temperature sensor | 36 | 9 | EXPLODED VIEWS | 52 |
| 6.13.2 | External timers and Room Thermostats. ... | 36 | 10 | APPENDIX 1 (GUIDANCE HHIC) | 60 |
| 6.13.3 | EXAMPLE of use of the command/control device on some types of heating systems ... | 36 | 11 | APPENDIX 2 | 76 |
| 6.14 | Refilling or emptying | 37 | 12 | ANNEXES | 77 |
| 6.14.1 | Method of filling a sealed system | 37 | 12.1 | Boiler product board | 77 |
| 6.14.2 | SYSTEM Filling | 37 | 12.2 | Boiler technical sheet | 78 |
| 6.14.3 | EMPTYING operations | 38 | | | |
| 7 | COMMISSIONING | 39 | | | |
| 7.1 | Preliminary operations | 39 | | | |
| 7.2 | Before commissioning | 39 | | | |
| 7.3 | Parameter setting and display | 39 | | | |
| 7.4 | List of parameters | 40 | | | |

6 INSTALLATION



CAUTION

The appliance must only be installed by the **Sime Ltd** Technical Service or by qualified professionals **who MUST wear** suitable protective safety equipment.

6.1 Receiving the product

Edea appliances are delivered in a single unit protected by cardboard packaging.

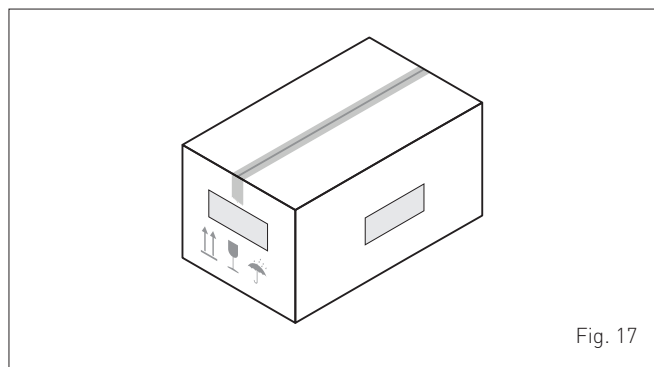


Fig. 17

The plastic bag found inside the packaging contains the following:

- Installation, use and maintenance manual
- Paper template for boiler installation
- Certificate of warranty
- Hydrostatic test certificate
- Hanging Bracket
- Connection pack



DO NOT

To leave packaging material around or near children since it could be dangerous. Dispose of it as prescribed by legislation in force.

6.2 Dimensions and weight

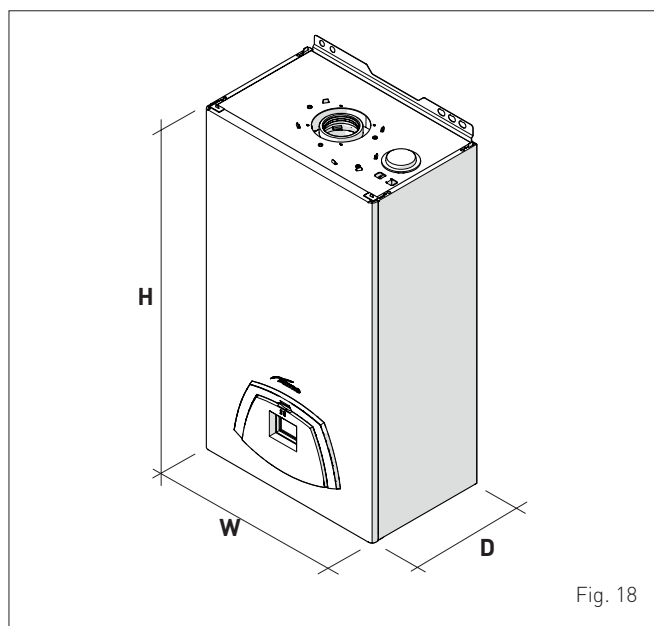


Fig. 18

| Description | Edea | |
|-------------|---------|------|
| | 30 | 40 |
| W (mm) | 400 | |
| D (mm) | 260 (*) | |
| H (mm) | 700 | |
| Weight (kg) | 28,4 | 30,8 |

(*) Without removable panel.

6.3 Handling

Once the packaging has been removed, the appliance is to be handled manually, tilting it slightly, lifting it and applying pressure in the points indicated in the figure.

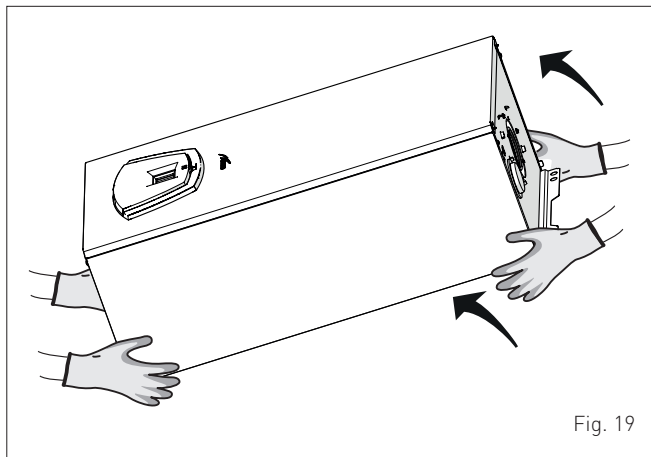


Fig. 19



DO NOT

To grip the appliance casing. Hold the "solid" parts of the appliance such as the base and structural frame.



WARNING

Use suitable tools and personal protection when removing the packaging and when handling the appliance. Observe the maximum weight that can be lifted per person.

6.4 Ventilation requirements

Detailed recommendations for the air supply are given in BS 5440-2. The following note is given for guidance. It is not necessary to have purpose provided air vents in the room or compartment that the appliance is installed.

The minimum temperature of the installation room must NOT be lower than **-5 °C**.



CAUTION

- Make sure that the appliance is protected against direct sunlight, the weather and damp and wet conditions.
- Before assembling the appliance, the installer **MUST** make sure that the wall supports the weight.
- Remember to consider the space needed in order to access the safety/adjustment devices and to carry out maintenance interventions (see Fig. 20).

APPROXIMATE MINIMUM DISTANCES

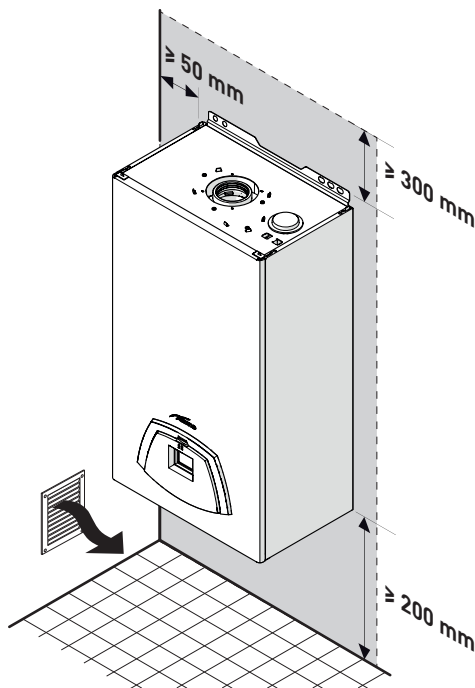


Fig. 20

6.5 New installation or installation of a replacement appliance

The boiler must be installed in a fixed location and only by specialized and qualified person in compliance with all instructions contained in this manual.

The installation of this boiler must be in accordance with the relevant requirements of the current Gas Safety (installation and use), the local building regulations and I.E.E. wiring regulations.

Detailed recommendations for air supply and fluing are given in BS5440.

The following notes are for general guidance: it is not necessary to have a purpose provided air vent in the room or compartment in which the appliance is installed.



CAUTION

It is a condition of the warranty that the boiler is installed in accordance with the instructions in this manual. The boiler must be registered with Gas Safe Register, the Benchmark record must be completed and the boiler is serviced annually and recorded in this manual.



CAUTION

If the domestic water supply is metered or should a water meter be added at a later time, a small expansion vessel should be included in the domestic water pipework.

6.6 Cleaning the system

Before connecting the boiler it is recommended that the system be flushed in accordance to BS 7593, to eliminate any foreign bodies that may be detrimental to the operating efficiency of the appliance.



CAUTION

Failure to flush and add inhibitor to the system may invalidate the warranty.

6.7 Characteristics of feedwater and system treatment

- All recirculatory systems will be subject to corrosion unless an appropriate water treatment is applied. This means that the efficiency of the system will deteriorate as corrosion sludge accumulates within the system, risking damage to pump and valves, boiler noise and circulation problems.
- Before connecting the boiler the associated central heating system must be flushed in accordance with the guidelines given in BS 7593 "Treatment of water in domestic hot water central heating systems".
- **Sime Ltd** recommends only the use of FERNOX products for the flushing and final treatment of the system water. This is particularly important in hard water areas. Failure to flush and add inhibitor to the system may invalidate the appliance warranty. Artificially softened water must not be used to fill the heating system. Naturally soft water areas can corrode aluminium heat exchangers. Adding Fernox F1 or Mb-1 will guard against corrosion.
- **Sime Ltd** promote the fitting of TF1 System filter with any new boiler installation.
- It is important to check the inhibitor concentration after installation, system modification and annually on a service visit in accordance with the manufacturer's instructions. (Note on benchmark service record this has been complete). Test kits are available from inhibitor stockists; the return of the Fernox test report should be kept with the Benchmark to validate warranty.
- Where Central heating systems are susceptible to freezing a mixture of inhibitor and anti-freeze should be added in accordance with the DWTa code of practice and the Manufacturers instructions.
- The addition of sealing agents to system water is not recommended because deposits can be left in heat exchanger causing circulation issues.

6.8 Boiler installation

Edea boilers leave the factory with a paper template for installation onto a solid wall.

For installation:

- position the paper template (1) on the wall (2) where the boiler is to be mounted
- make the holes, remove the template (1) and insert the expansion plugs (3)
- hook the boiler onto the plugs.

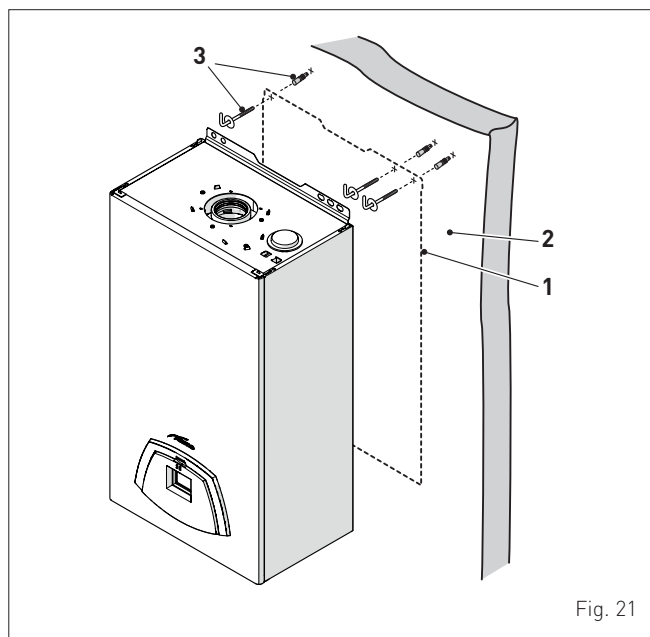


Fig. 21



CAUTION

The boiler should be located observing the required clearances, and provide safe, adequate service access.

6.9 Plumbing connections

The plumbing connections have the following characteristics and dimensions.

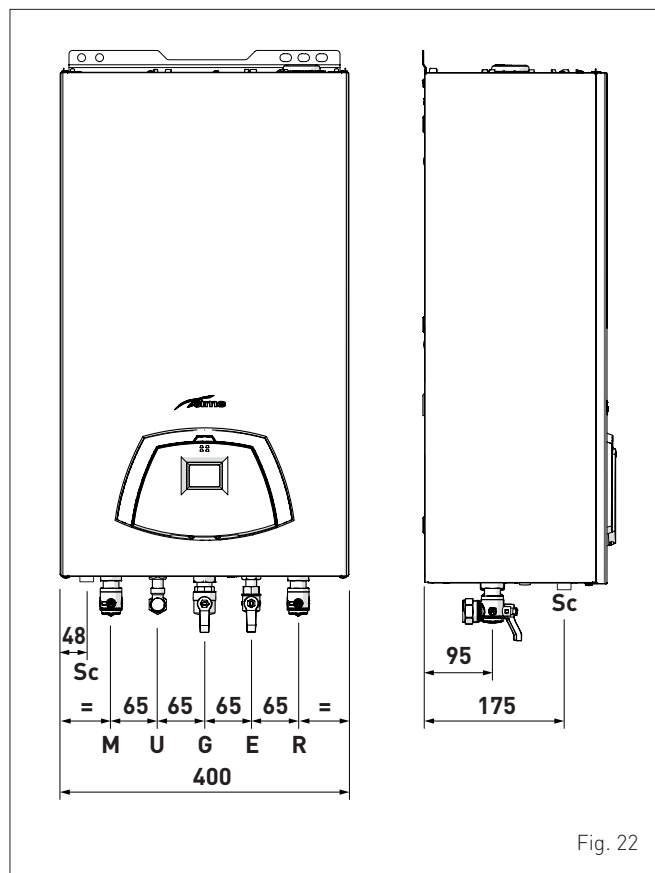


Fig. 22

| Description | Edea | |
|-------------------------------|---------|----|
| | 30 | 40 |
| M - System flow | Ø 22 mm | |
| R - System return | Ø 22 mm | |
| U - Domestic hot water output | Ø 15 mm | |
| E - Domestic hot water inlet | Ø 15 mm | |
| G - Gas cock connection | Ø 15 mm | |
| Sc - Condensate outlet | Ø 20 mm | |



CAUTION

A sealed system must only be filled by a competent person (see section **Method of filling a sealed system** page 37).

6.9.1 Plumbing accessories (optional)

To facilitate plumbing and gas connections to the systems, the accessories as shown in the table below are available and are to be ordered separately from the boiler.

| DESCRIPTION | CODE |
|---|---------|
| Installation plate | 8075441 |
| Connection protection kit (for models 30-40 kW) | 8094530 |

NOTE: kit instructions are supplied with the accessory itself or are to be found on the packaging.

6.10 Condensate outlet/collection

To ensure safe disposal of the condensate produced by the flue gases, reference should be made to BS6798:2009.

The boiler incorporates a condensate trap which has a seal of 75 mm, therefore no additional trap is required.

The condensate trap can be filled prior to the installation of the flue by carefully pouring 1 litre of water into the exhaust connection.

NOTE: All pipework must have a continuous fall from the boiler and must be resistant to corrosion by condensate, copper or steel is NOT suitable. It should be noted that the connection of a condensate pipe to a drain may be subject to local building control requirements (Dealing with Condensate - see Appendix 1).

6.11 Gas supply

Edea boilers leave the factory prearranged for gas G20 and can also work with G31 without the need for any type of mechanical conversion. Simply select parameter "03" (see "**Parameter setting and display**") page 39 and set the type of gas to be used.

If changing the type of gas to be used, carry out the entire appliance "**COMMISSIONING**" phase (page 39).

As a condition of the warranty and to ensure correct operation and efficiency, it is important that the boiler is serviced every 12 months, within 30 days of the anniversary of the installation date ensure the required information is recorded in the Gas Boiler System Service Interval Record (page 51) (Benchmark). The gas connection must be made using seamless steel or copper tube.

Where the piping has to pass through walls, a suitable insulating sleeve must be provided.

When sizing gas piping, from the meter to the boiler, take into account both the volume flow rates (consumption) in m³/h and the relative density of the gas in question.

The sections of the piping making up the system must be such as to guarantee a supply of gas sufficient to cover the maximum output available from the boiler, limiting pressure loss between the gas meter and any apparatus being used to not greater than 1.0 mbar for family II gases (natural gas).

An adhesive data badge is sited inside the front panel; it contains all the technical data identifying the boiler and the type of gas for which the boiler is arranged.



WARNING

Once installation has been completed, check that the joints are air tight as indicated in the installation Standards.



CAUTION

It is recommended that the gas line has a suitable filter.



CAUTION

If the gas supply is changed from G20 to G31, mark the box on the TECHNICAL DATA PLATE.

G31 - 37 mbar



6.12 Connecting the flue



CAUTION


- The appliance must be installed as a room sealed device and unless stated in writing from the manufacturer, in accordance with the current edition of BS 5440-1. The information shown in this manual is for guidance and parts identification.



CAUTION

- Prior to fitting the flue, the condensate trap can be filled by carefully pouring water into the exhaust section of the flue connection.

6.12.1 Flue Terminal Positions

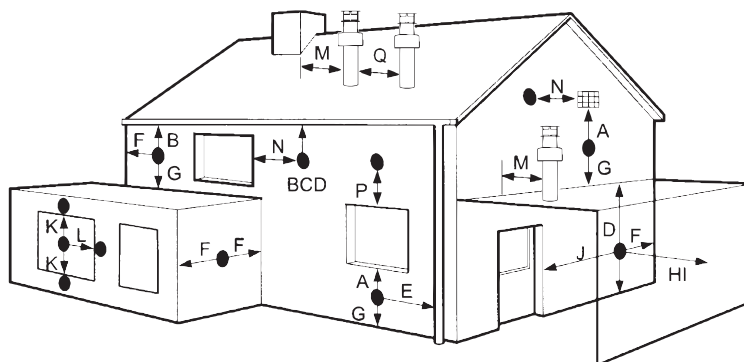

| Terminal position | Minimum spacing | |
|---|-----------------|-------|
| A Directly below an openable window, air vent or any other ventilation opening | 300 mm | 12 in |
| B Below guttering, drain pipes or soil pipes (**) | 75 mm | 3 in |
| C/D Below eaves, balconies or carport roof (*) | 200 mm | 8 in |
| E From vertical drain pipes or soil pipes | 75 mm | 3 in |
| F From internal or external corners | 300 mm | 12 in |
| G Above adjacent ground, roof or balcony level | 300 mm | 12 in |
| H From a boundary or surface facing the boiler | 600 mm | 24 in |
| I From a terminal facing the terminal | 1,200 mm | 48 in |
| J From an opening in the carport (eg door, window into dwelling) | 1,200 mm | 48 in |
| K Vertically from a terminal on the same wall | 1,500 mm | 60 in |
| L Horizont. from a terminal on the same wall | 300 mm | 12 in |
| M Horizont. from a vertical terminal to a wall | 300 mm | 12 in |
| N Horizont. from an openable window or other opening | 300 mm | 12 in |
| P Above an openable window or other opening | 300 mm | 12 in |
| Q From an adjacent vertical terminal | 600 mm | 24 in |

(*) This dimension to be used with ventilated soffits. With unvented soffits this can be reduced to 75 mm and further reduced to 25 mm when a flue shield is used to protect from the effects of heat and condensation.

(**) This can be reduced to 25 mm but it may be necessary to protect the surfaces from the effects of heat and condensation.

- If the terminal discharges into a pathway or passageway check that combustion products will not cause nuisance and that the terminal will not obstruct the passageway.
- Where the lowest part of the terminal is fitted less than 2 m (78 in) above ground, above a balcony or above a flat roof to which people have access, the terminal **MUST** be protected by a purpose designed guard.
- The air inlet/outlet flue duct **MUST NOT** be closer than 10 mm (0.4 in) to combustible material.
- In certain weather conditions the terminal may emit a plume of steam. This is normal but positions where this would cause a nuisance should be avoided.

Fig. 23

6.12.2 Installation of coaxial flues 60/100mm – 80/125mm

Coaxial flue kits that are supplied separately. The diagrams below, illustrate some examples of fluing options allowed and the maximum lengths than can be achieved. It is essential that a flue gas analysis point is made available directly above the boiler.

IMPORTANT:

- The insertion of each additional 90° bend with a diameter of 60/100 (code 8095850) reduces the available section by 1.5 meters.
- The insertion of each additional 90° bend with a diameter of 80/125 (code 8095870) reduces the available section by 2 meters.
- Each additional 45° curve installed a diameter of 60/100 (code 8095950) reduces the available length by 1.0 metres.
- Each additional 45° curve installed a diameter of 80/125 (code 8095970) reduces the available length by 1.0 metres.

HORIZONTAL FLUES MUST BE LEVEL

NOTE: Before connecting accessories, it is always advisable to lubricate the internal part of the gaskets with silicon products. Avoid using oils and greases.

| Model | Length of pipe Ø 60/100 | | | Length of pipe Ø 80/125 | | |
|---------|-------------------------|----------|------|-------------------------|----------|------|
| | H (m) | V (m) | | H (m) | V (m) | |
| | | Min. | Max. | | Min. | Max. |
| EDEA 30 | 6 | 1,3 | 8 | 12 | 1,2 | 15 |
| EDEA 40 | 6 | 1,3 | 12 | 18 | 1,2 | 20 |

LIST OF Ø 60/100 ACCESSORIES

- 1a Coaxial duct kit L. 790 code 8096250
- 1b Telescopic coaxial duct kit L. 695 code 8098605
- 2a Extension L. 1000 code 8096150
- 2b Extension L. 500 code 8096151
- 3 Vertical extension L. 140 with coupling code 8086950
- 5 Tile for joint code 8091300
- 6 Terminal for roof exit L. 1285 code 8091212 (includes 8086950)

LIST OF Ø 80/125 ACCESSORIES

- 1 Coaxial duct kit L. 785 code 8096253
- 2a Extension L. 1000 code 8096171
- 2b Extension L. 500 code 8096170
- 3 Adapter for Ø 80/125 code 8093150
- 5 Tile for joint code 8091300
- 6 Terminal for roof exit L. 1285 code 8091212 (includes 8093150)

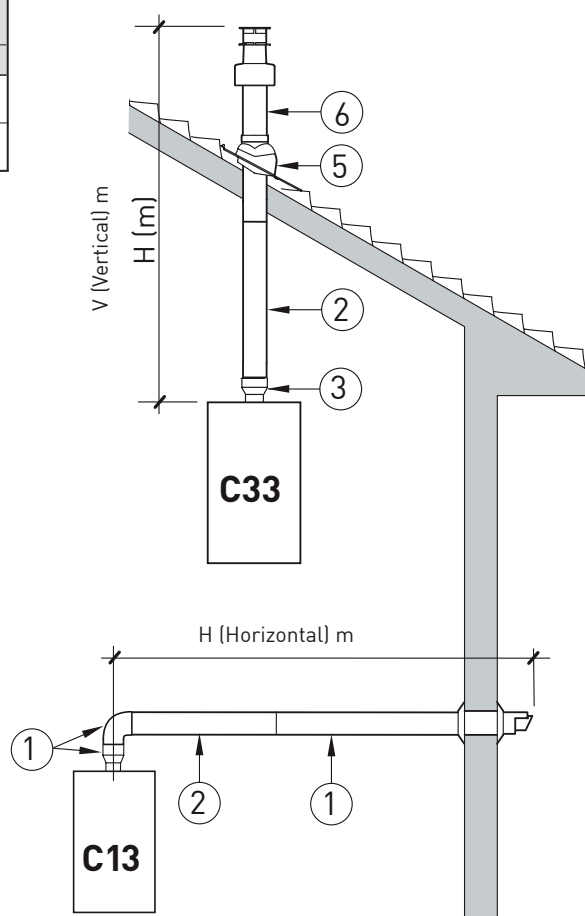


Fig. 24

6.12.3 Installation of separate ducts 80mm

The boiler can be installed with separate air inlet and exhaust ducts. The figure below illustrate some examples of the fluing options allowed and the associated losses of the accessories. The total load loss is the sum of the load losses of the accessories used. The maximum load loss **must not exceed 16.5 mm H₂O** for **Edea 30** and **30.0 mm H₂O** for **Edea 40**. The maximum flue length **must not exceed 25 m** inlet and exhaust.

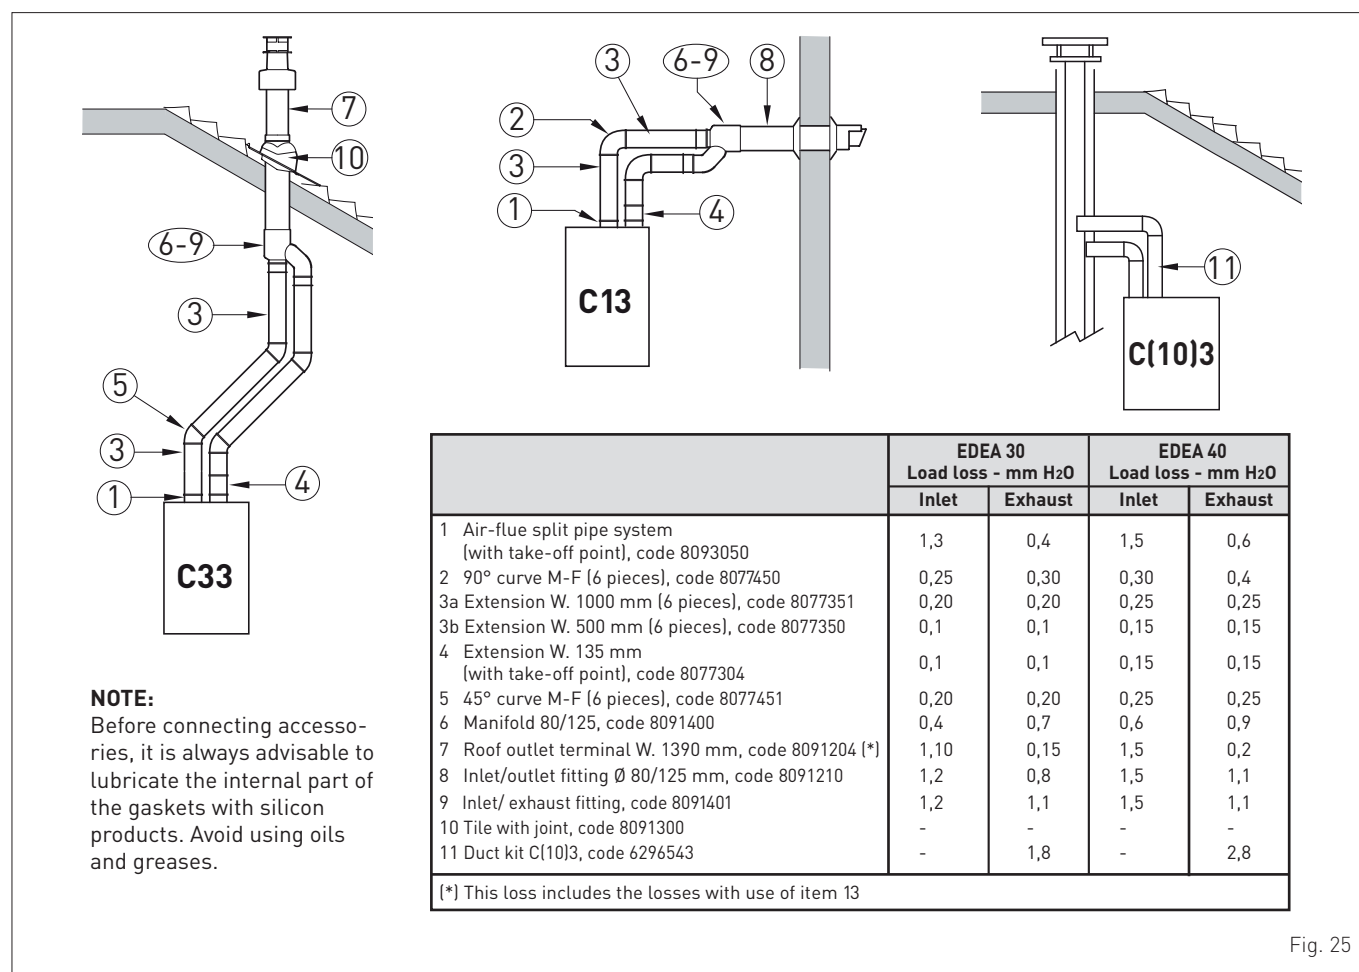


Fig. 25

6.12.4 Coaxial duct (Ø 60/100mm and Ø 80/125mm)

Coaxial accessories

| Description | Code | |
|---|-------------|-------------|
| | Ø 60/100 mm | Ø 80/125 mm |
| Coaxial duct kit | 8096250 | 8096253 |
| Extension W. 1000 mm | 8096150 | 8096171 |
| Extension W. 500 mm | 8096151 | 8096170 |
| Vertical extension W. 140 mm with smoke analysis take-off point | 8086950 | - |
| Adapter for Ø 80/125 mm | - | 8093150 |
| Additional 90° curve | 8095850 | 8095870 |
| Additional 45° curve | 8095950 | 8095970 |
| Tile with joint | 8091300 | 8091300 |
| Roof outlet terminal W. 1285 mm | 8091212 | 8091205 |

Load loss - Equivalent lengths

| Model | Leq (linear metres) | |
|-----------|---------------------|-------------|
| | Ø 60/100 mm | Ø 80/125 mm |
| 90° curve | 1,5 | 2 |
| 45° curve | 1 | 1 |

With a Ø 60/100 mm coaxial outlet duct exceeding 2 metres, remove, by turning it clockwise, the smoke outlet diaphragm (1) positioned as shown in the picture. With a Ø 80/125 mm coaxial outlet duct exceeding 4 metres, remove, by turning it clockwise, the smoke outlet diaphragm (1) positioned as shown in the picture.

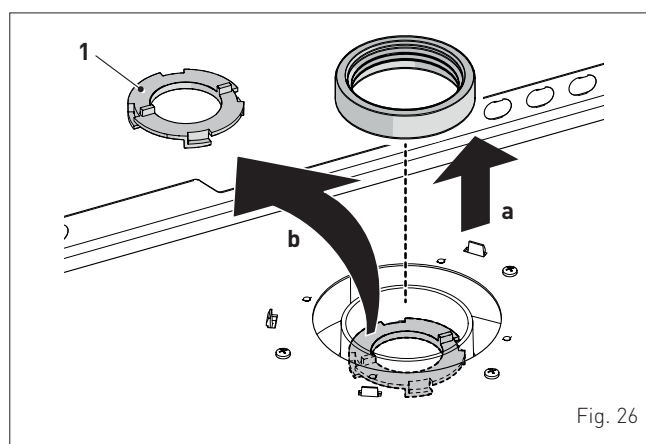


Fig. 26

Minimum-Maximum Lengths

| Model | Duct Length Ø 60/100 | | | | Duct Length Ø 80/125 | | | |
|---------|----------------------|------|----------------|------|----------------------|------|----------------|------|
| | W Horizontal (m) | | H Vertical (m) | | W Horizontal (m) | | H Vertical (m) | |
| | Min. | Max. | Min. | Max. | Min. | Max. | Min. | Max. |
| Edea 30 | - | 6 | 1,3 | 8 | - | 12 | 1,2 | 15 |
| Edea 40 | - | 6 | 1,3 | 12 | - | 18 | 1,2 | 20 |


6.12.5 Separate ducts (Ø 60mm and Ø 80mm)

Constructing outlets for separate ducts indicates the use of the "air-smoke split pipe system". This is to be ordered separately from the boiler and when connected to the other accessories, from those listed in the table below, completes the smoke-outlet/ combustion air inlet assembly.

Separate accessories

| Description | Code | |
|--|--------------------|--------------------|
| | Diameter Ø 60 (mm) | Diameter Ø 80 (mm) |
| Air-smoke split pipe system (without take-off point) | 8093060 | - |
| Air-smoke split pipe system (with take-off point) | - | 8093050 |
| 90° curve M-F (6 pieces) | 8089921 | 8077450 |
| 90° curve M-F (with take-off point) | 8089924 | - |
| M-F 60/80 reduction | 8089923 | - |
| M-F 80/50 reducer | - | 8089941 |
| Extension W. 1000 mm (6 pieces) | 8089920 | 8077351 |
| Extension W. 500 mm (6 pieces) | - | 8077350 |
| Extension W. 135 mm (with take-off point) | - | 8077304 |
| Wall outlet terminal | 8089541 | 8089501 |
| Internal and external ring nut kit | 8091510 | 8091500 |
| Inlet terminal | 8089540 | 8089500 |
| 45° curve M-F (6 pieces) | 8089922 | 8077451 |
| Manifold | 8091400 | |
| Tile with joint | 8091300 | |
| Roof outlet terminal W. 1390 mm | 8091204 | |
| Inlet/outlet fitting Ø 80/125 mm | - | 8091210 |
| Inlet/exhaust fitting Ø 80/125 mm | - | 8091401 |
| Duct kit C(10)3 Edea 30 | - | 6296543 |
| Duct kit C(10)3 Edea 40 | - | |

Twin flue adaptor

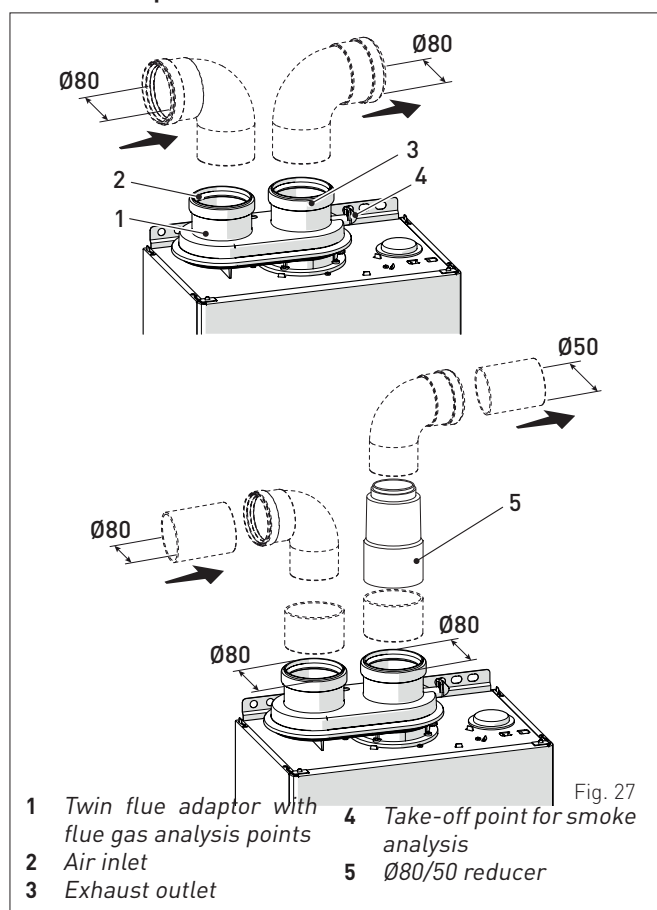

NOTE: the ducts can be reduced from Ø80 to Ø50 by using the reducer with code 8089941, to be ordered separately, as shown in "Fig. 16".



CAUTION

- The maximum total length of the ducts, obtained by adding the lengths of the inlet and outlet pipes, is determined by the load losses of the individual accessories used and **must not exceed 16.5 mm H₂O for Edea 30 and 30.0 mm H₂O for Edea 40.**
- For all boiler versions, the total extension must not in any case exceed 25 m (inlet) + 25 m (outlet) for ducts Ø 80 mm. For Ø 60 mm ducts, the total extension must not exceed, respectively 16 m (suction) + 16 m (discharge) for model **Edea 30** and 16 m (suction) + 16 m (discharge) for model **Edea 40**, even if the total load loss is below the maximum applicable level.



CAUTION

For model **Edea 30**, beyond a total load loss between discharge and suction of **9 mm H₂O**, remove the discharge diaphragm as illustrated in "Fig. 26".

For model **Edea 40**, beyond a total load loss between discharge and suction of **12 mm H₂O**, remove the discharge diaphragm as illustrated in "Fig. 26".

Load loss accessory Ø 60 mm

| Description | Code | Load loss (mm H ₂ O) | |
|--|---------|---------------------------------|--------|
| | | Edea 30 | |
| | | Inlet | Outlet |
| Air-smoke split pipe system (without take-off point) | 8093060 | 2,5 | 0,5 |
| 90° curve M-F (6 pieces) | 8089921 | 0,5 | 1,1 |
| 90° curve M-F (with take-off point) | 8089924 | 0,5 | 1,1 |
| M-F 60/80 reduction | 8089923 | 0,4 | 0,7 |
| Extension W. 1000 mm (6 pieces) | 8089920 | 0,5 | 1,1 |
| Wall outlet terminal | 8089541 | - | 1,4 |
| Inlet terminal | 8089540 | 0,8 | - |
| 45° curve M-F (6 pieces) | 8089922 | 0,45 | 0,9 |
| Manifold 80/125 | 8091400 | 0,4 | 0,7 |
| Roof outlet terminal W. 1390 mm (*) | 8091204 | 1,1 | 0,15 |

| Description | Code | Load loss (mm H ₂ O) | |
|--|---------|---------------------------------|--------|
| | | Edea 40 | |
| | | Inlet | Outlet |
| Air-smoke split pipe system (without take-off point) | 8093060 | 2,5 | 0,5 |
| 90° curve M-F (6 pieces) | 8089921 | 0,6 | 1,4 |
| 90° curve M-F (with take-off point) | 8089924 | 0,6 | 1,4 |
| M-F 60/80 reduction | 8089923 | 0,5 | 0,8 |
| Extension W. 1000 mm (6 pieces) | 8089920 | 0,6 | 1,4 |
| Wall outlet terminal | 8089541 | - | 1,6 |
| Inlet terminal | 8089540 | 1,1 | - |
| 45° curve M-F (6 pieces) | 8089922 | 0,55 | 1,2 |
| Manifold 80/125 | 8091400 | 0,6 | 0,9 |
| Roof outlet terminal W. 1390 mm (*) | 8091204 | 1,5 | 0,2 |

Load loss accessory Ø 80 mm

| Description | Code | Load loss (mm H ₂ O) | |
|---|---------|---------------------------------|--------|
| | | Edea 30 | |
| | | Inlet | Outlet |
| Air-smoke split pipe system (with take-off point) | 8093050 | 1,3 | 0,4 |
| 90° curve M-F (6 pieces) | 8077450 | 0,25 | 0,30 |
| M-F 80/50 reducer | 8089941 | - | 1,1 |
| Extension W. 1000 mm (6 pieces) | 8077351 | 0,20 | 0,20 |
| Extension W. 500 mm (6 pieces) | 8077350 | 0,1 | 0,1 |
| Extension W. 135 mm (with take-off point) | 8077304 | 0,1 | 0,1 |
| Wall outlet terminal | 8089501 | 0,10 | 0,35 |
| Inlet terminal | 8089500 | 0,2 | - |
| 45° curve M-F (6 pieces) | 8077451 | 0,20 | 0,20 |
| Manifold 80/125 | 8091400 | 0,4 | 0,7 |
| Roof outlet terminal W. 1390 mm (*) | 8091204 | 1,10 | 0,15 |
| Inlet/outlet fitting Ø 80/125 mm | 8091210 | 1,2 | 0,8 |
| Inlet/exhaust fitting Ø 80/125 mm | 8091401 | 1,2 | 1,1 |
| Duct kit C(10)3 | 6296550 | - | - |
| | 6296543 | - | 1,8 |

| Description | Code | Load loss (mm H ₂ O) | |
|---|---------|---------------------------------|--------|
| | | Edea 40 | |
| | | Inlet | Outlet |
| Air-smoke split pipe system (with take-off point) | 8093050 | 1,5 | 0,6 |
| 90° curve M-F (6 pieces) | 8077450 | 0,30 | 0,4 |
| M-F 80/50 reducer | 8089941 | - | 1,7 |
| Extension W. 1000 mm (6 pieces) | 8077351 | 0,25 | 0,25 |
| Extension W. 500 mm (6 pieces) | 8077350 | 0,15 | 0,15 |
| Extension W. 135 mm (with take-off point) | 8077304 | 0,15 | 0,15 |
| Wall outlet terminal | 8089501 | 0,15 | 0,50 |
| Inlet terminal | 8089500 | 0,4 | - |
| 45° curve M-F (6 pieces) | 8077451 | 0,25 | 0,25 |
| Manifold 80/125 | 8091400 | 0,6 | 0,9 |
| Roof outlet terminal W. 1390 mm (*) | 8091204 | 1,5 | 0,2 |
| Inlet/outlet fitting Ø 80/125 mm | 8091210 | 1,5 | 1,1 |
| Inlet/exhaust fitting Ø 80/125 mm | 8091401 | 1,5 | 1,1 |
| Duct kit C(10)3 | 6296550 | - | - |
| | 6296543 | - | 2,8 |

(*) The losses of the roof outlet terminal at inlet include the manifold code 8091400.

NOTE: for the boiler to operate correctly it is necessary that a minimum distance of 0.50 m of the duct is respected with a 90° inlet curve.

6.12.6 Separate ducts (Ø 50 mm)

The **Edea** boiler is configured for use in Ø 50 mm discharge flues. To ensure correct boiler operation, parameter PAR31 (long flues) should be set on the basis of the length of the installed flues, as indicated in the table.

| PAR 31 | Edea 30 | |
|--------|---------------------------|---------------------|
| | Ø 50 mm outlet | Discharge diaphragm |
| | | |
| 0 | 1 x 90° elbow + 2 metres | leave it mounted |
| 0 | 1 x 90° elbow + 6 metres | remove |
| 2 | 1 x 90° elbow + 10 metres | remove |
| 4 | 1 x 90° elbow + 14 metres | remove |
| 6 | 1 x 90° elbow + 18 metres | remove |
| 8 | 1 x 90° elbow + 22 metres | remove |
| 10 | - | - |
| 12 | - | - |

| PAR 31 | Edea 40 | |
|--------|---------------------------|---------------------|
| | Ø 50 mm outlet | Discharge diaphragm |
| | | |
| 0 | 1 x 90° elbow + 12 metres | remove |
| 2 | - | - |
| 4 | - | - |
| 6 | - | - |
| 8 | - | - |

NOTE: to remove the discharge diaphragm, proceed as illustrated in "Fig. 26".

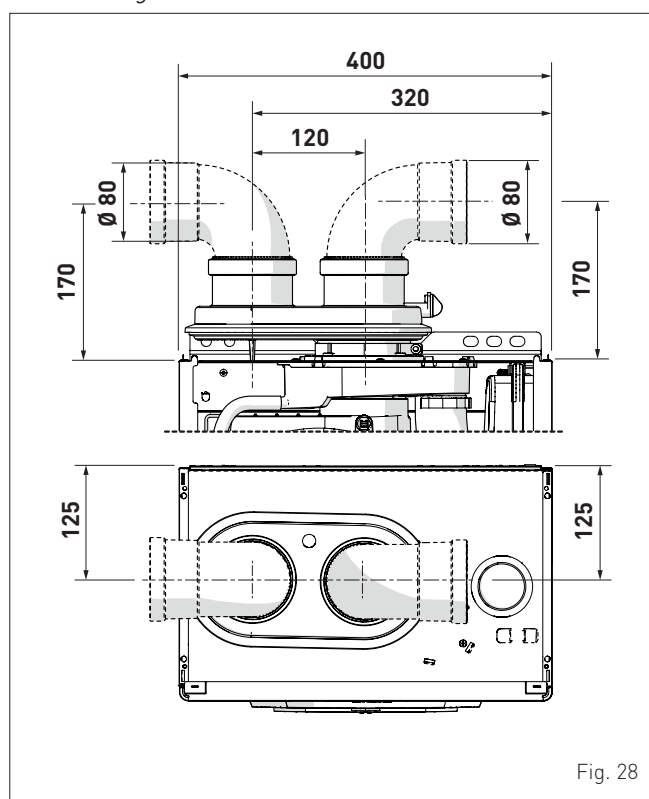


Fig. 28

Example: calculation of the load loss of a **Edea 30** boiler.

| Accessories Ø 80 mm | Code | Quantity | Load loss (mm H ₂ O) | | |
|-----------------------------------|---------|----------|---------------------------------|----------|-------------|
| | | | Inlet | Outlet | Total |
| Extension W. 1000 mm (horizontal) | 8077351 | 9 | 9 x 0,20 | - | 1,80 |
| Extension W. 1000 mm (horizontal) | 8077351 | 9 | - | 9 x 0,20 | 1,80 |
| 90° curve | 8077450 | 2 | 2 x 0,25 | - | 0,50 |
| 90° curve | 8077450 | 2 | - | 2 x 0,30 | 0,60 |
| Wall terminal | 8089501 | 1 | 0,10 | - | 0,10 |
| Wall terminal | 8089501 | 1 | - | 0,35 | 0,35 |
| TOTAL | | | | | 5,15 |

(installation permitted since the total of the load loss of the accessories used is less than 15 mm H₂O).

6.12.7 Separate ducts (Ø 80mm) with duct kit C(10)3


The **Edea** boiler is configured for use with type C(10)3 discharge ducts. To ensure correct boiler operation, certain parameters should be modified in relation to the power and type of fuel used to power the device.

Set the parameters as specified in the table.


| Type | No. | Description | Setting for Edea | | | |
|----------------------|-----|----------------------|------------------|---------|---------|---------|
| | | | 30 | | 40 | |
| | | | METHANE | LPG | METHANE | LPG |
| PAR | 09 | Ignition revolutions | - | 110 | - | 118 |
| PAR | 21 | CH/DHW minimum power | 15 | 10 | 9 | 11 |
| Duct kit C(10)3 code | | | 6296543 | 6296543 | 6296543 | 6296543 |

NOTE: To modify the parameters in the table, proceed as specified in the paragraph **"Parameter setting and display"**.

The duct kit C(10)3 (1) can be installed both vertically (A) and horizontally (B).

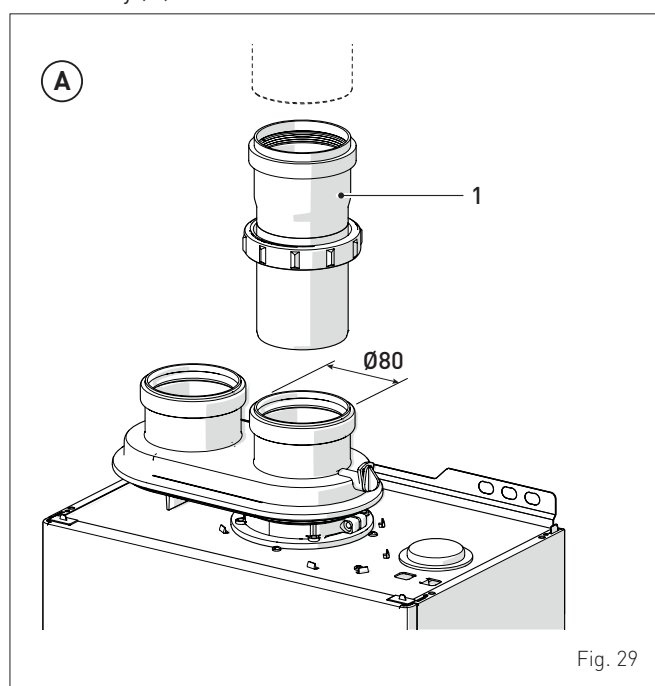

If it is installed horizontally, when positioning the internal butterfly valve make sure that its fins (2) face upwards, so that they remain closed by effect of their weight. Moreover, it is necessary to remove the siphon (3) and mount the cap (4) supplied with the kit.

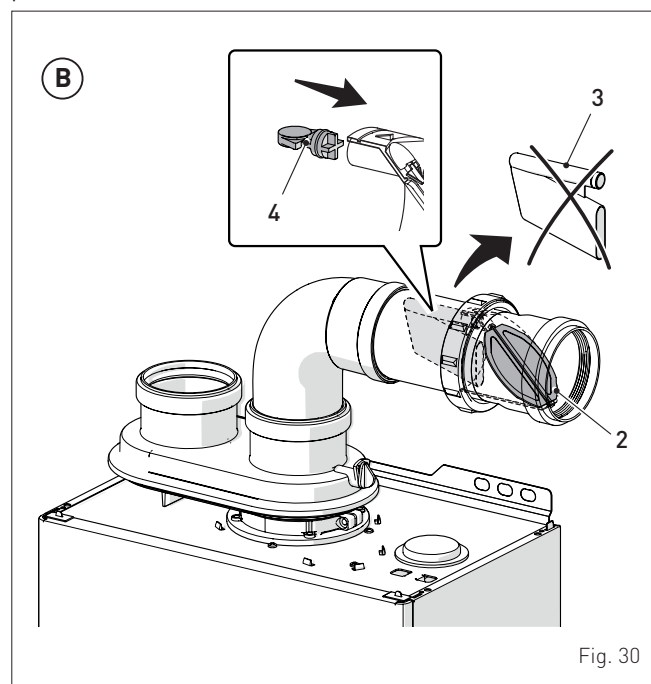

6.13 Electrical connections and External controls

The boiler is supplied with a mains cable. Connect the boiler to a 230V -50Hz single phase power supply through a fused mains switch, with at least 3 mm spacing between contacts, fused at 3 amps.

If this cable needs to be replaced, an original spare must be requested from **Sime Ltd.**

The heating control of the boiler can be achieved by connection of either a volt free room thermostat, room thermostat/timer or a dedicated control (listed below). For connection details see section "External timers and Room Thermostats".

| DESCRIPTION | CODE |
|--|---------|
| External sensor kit ($\beta=3435$, NTC 10KOhm at 25°C) | 8094101 |
| Power cable (dedicated) | 6323875 |
| Remote control HOME (open therm) | 8092280 |
| Remote control HOME PLUS (open therm) | 8092281 |



CAUTION

Only qualified persons in compliance with the instructions contained in this manual are permitted to install, commission and maintain this boiler. The installation of this boiler must be in accordance with the relevant requirements of the current Gas Safety (installation and use) Regulation 1998, the local building regulations, and I.E.E. wiring regulations.




WARNING

Before carrying out any interventions described:


- isolate the power supply
- isolate the gas cock
- avoid contact with any hot surfaces.

To make the electrical connections:


- remove the screws (1), pull the front panel (2) forwards and release it from the top by lifting it

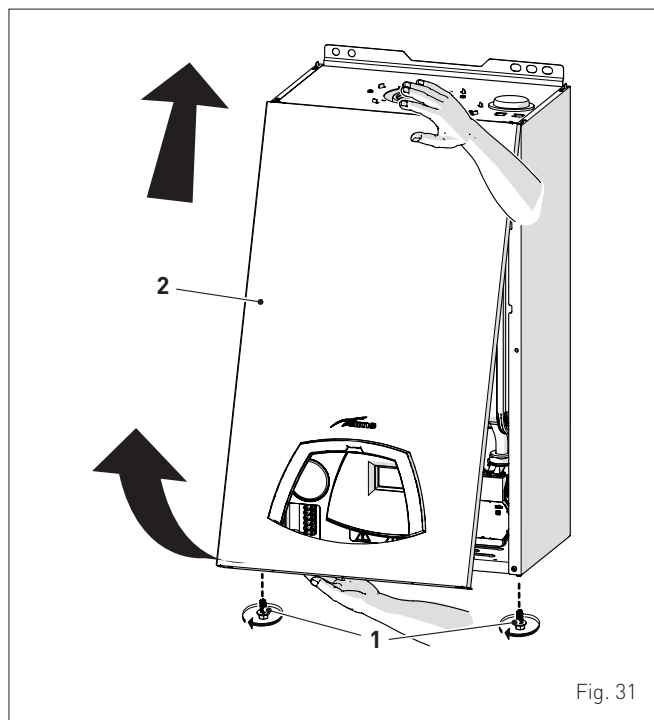


- remove the screws (3) securing the control panel (4)
- move the panel (4) upwards (a) but keeping it in the side guides (5) to the end of travel
- bring it forwards and down (b) until it is horizontal

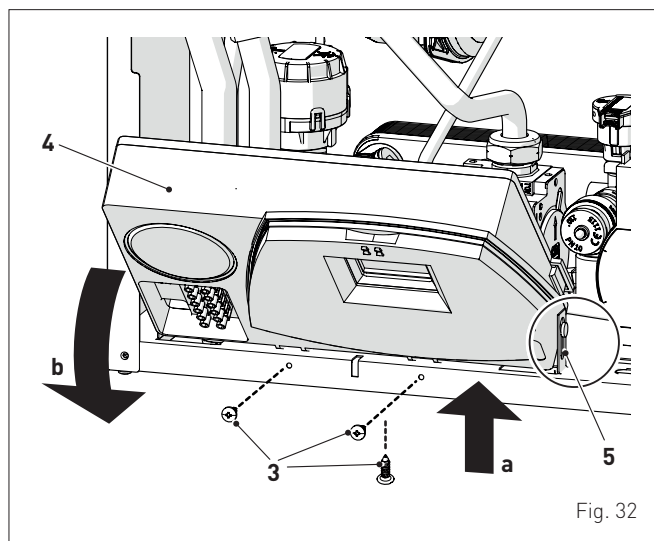

- insert the connection wires through the grommet (6) and the opening (7) on the control panel

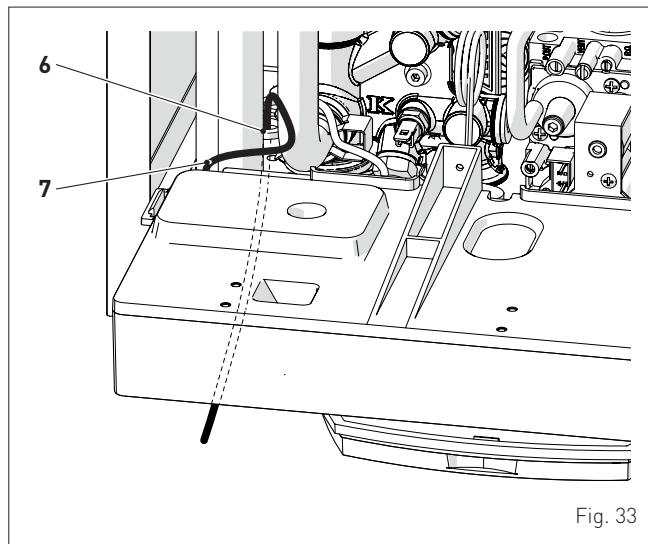

- bring the control panel (4) to the original position and secure it with the screws (3) which were removed previously
- connect the component wires to the terminal board (8) following the indications provided on the data plate (9) and as shown in section "Wiring diagram".

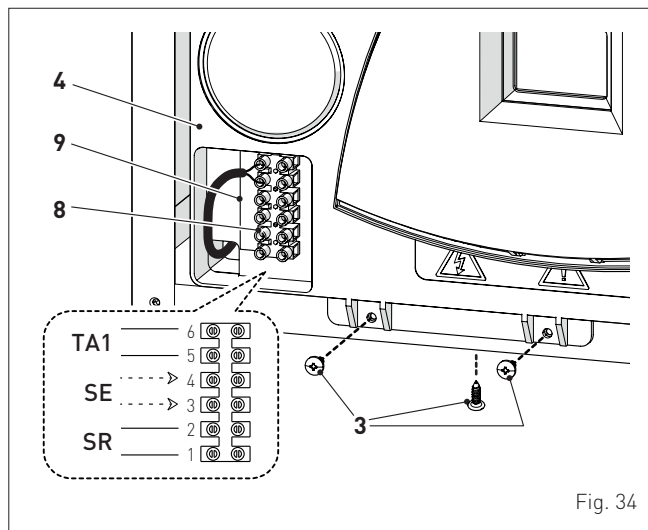

CAUTION

It is compulsory:

- to use an omnipolar cut-off switch, disconnect switch, in compliance with EN standards (contact opening of at least 3 mm)
- if the power cable is to be replaced, that ONLY a special cable is used with a factory produced re-wired connector, ordered as a spare part and connected by a professionally qualified person
- to connect the earth wire to an effective earthing system (*)
- that before any work is done on the boiler, the mains power is disconnected by setting the main system switch to "OFF".

(*) *Sime Ltd declines all responsible for any injury or damage to persons, animals, or property as a result of failure to provide adequate earthing of the appliance.*



DO NOT

Do not use water pipes for earthing the appliance.


6.13.1 External temperature sensor

The boiler is designed for connection to an external temperature sensor code 8094101, which will automatically regulate the central heating delivery temperature.

This means that the delivery temperature of the boiler can vary on the basis of the external temperature depending on the climatic curve selected from those shown in the diagram (Fig. 35).

When fitting the sensor on the outside of the building, follow the instructions provided on the packaging of the product itself.

Climatic curve

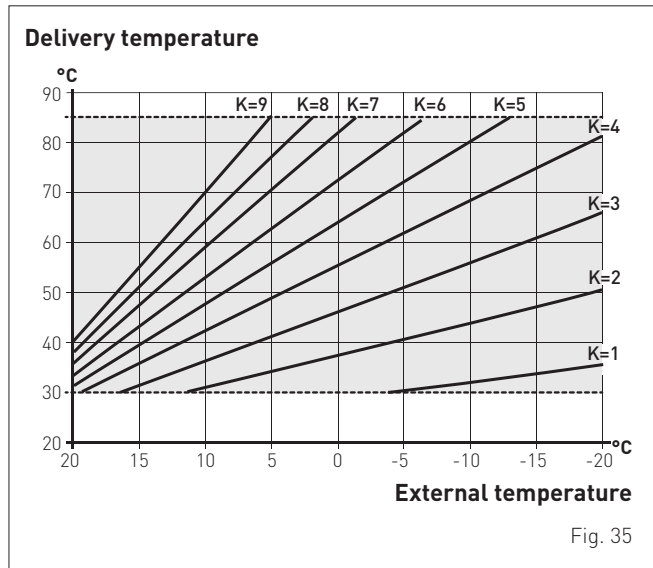

CAUTION

If there is an external sensor, turn the heating knob **III** until the required curve K has been selected within the range **K=0.0 - K=9.0** in order to select the optimal climatic curve for the system and therefore the delivery temperature based on the external temperature.



CAUTION

The adjustment of the Maximum Heating Temperature is managed by "**PAR 14**" (see paragraph "**List of parameters**").

6.13.2 External timers and Room Thermostats


The heat demand can be by a "clean contact" conforming to EN607301 connected to TA (see section "**Wiring diagram**") or by use of a dedicated Sime Remote Control (Home or Home Plus). The boiler will automatically detect when a dedicated control is connected.

6.13.3 EXAMPLE of use of the command/control device on some types of heating systems


KEY

| | |
|-----------|--|
| CR | Remote control |
| SE | External temperature sensor |
| TA | Room thermostat for boiler activation |
| TZ1÷TZ3 | Zone ambient thermostat |
| EVZ1÷EVZ3 | Zone solenoid valve |
| KA1÷KA3 | Zone relays |
| PI1÷PI3 | Pump |
| SP | Hydraulic separator |
| * | 2-relay board mandatory accessory code 8092264 |

ONE DIRECT ZONE system, external sensor and room thermostat.

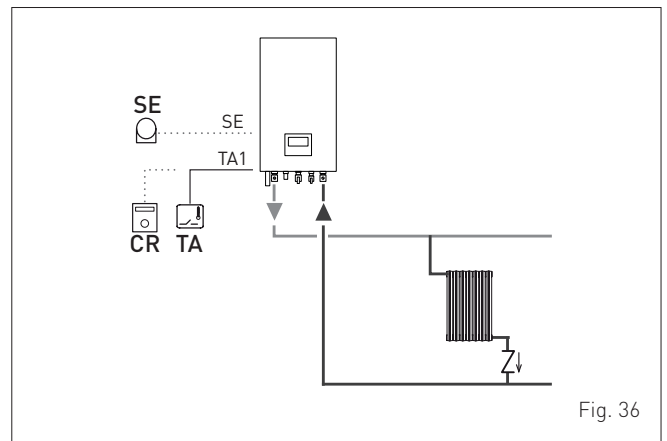

MULTI ZONE system - with zone valve, room thermostat and external sensor.

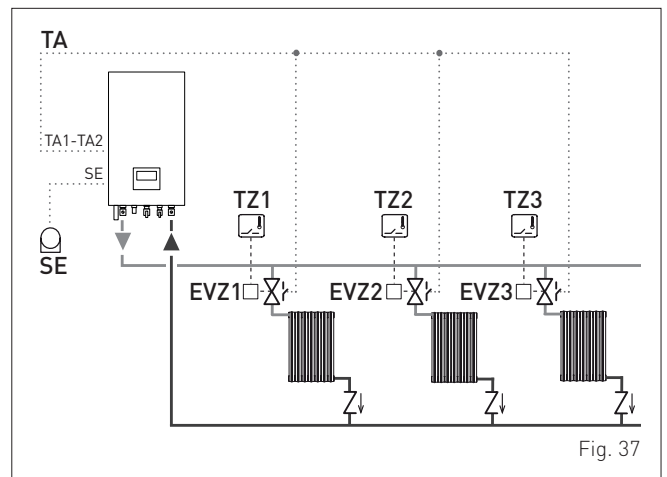

MULTI-ZONE system - with zone valves, remote control SIME, room thermostats and optional external sensor.

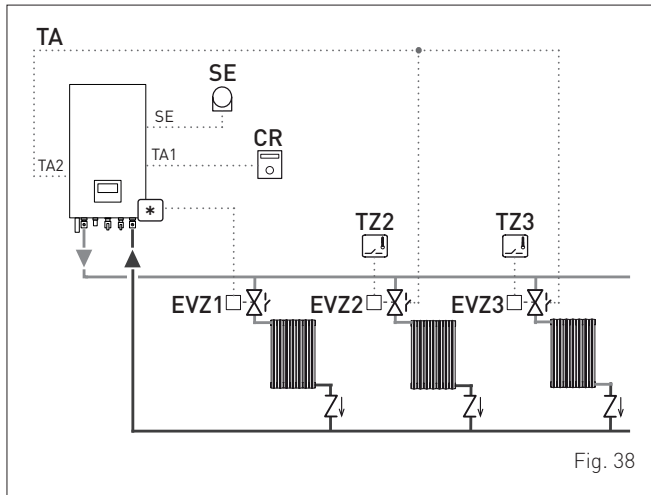


Fig. 38



CAUTION

Set the parameter "tS 17 = DELAY SYSTEM PUMP ACTIVATION" to allow the opening of zone valve Vz.

MULTI ZONE system - with pump, room thermostat and external sensor.

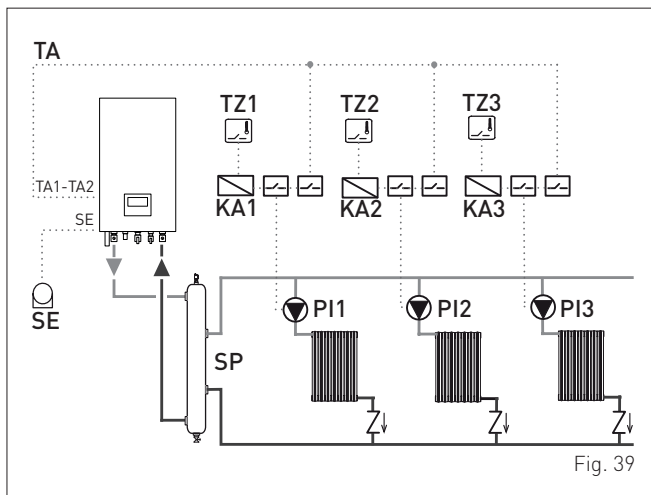


Fig. 39

MULTI ZONE system - with pump, remote control SIME, air thermostat and optional external sensor.

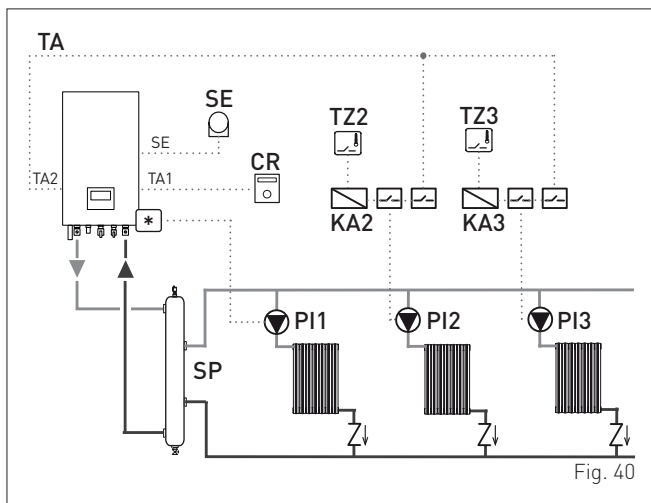


Fig. 40

6.14 Refilling or emptying

Before carrying out the operations described below, make sure that the main system switch is set to "ON" in order for the display to show the pressure level in the system during refilling.

Make sure that the operating mode is set to "Stand-by"; if this is not the case, press the button for at least 1 second until this mode has been selected.

6.14.1 Method of filling a sealed system

A sealed system must only be filled by a competent person using a method similar to that shown in figure below.

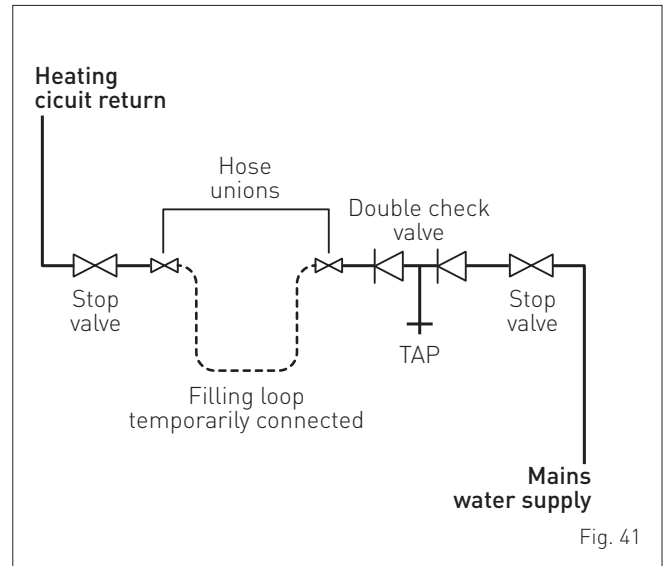


Fig. 41

6.14.2 SYSTEM Filling

Remove the front panel:

- remove the two screws (1), pull the front panel (2) forwards and release it from the top by lifting it.

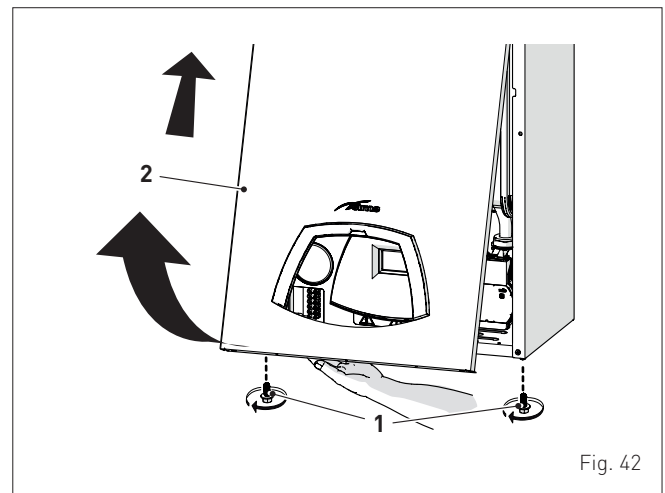


Fig. 42

Domestic hot water circuit:

- open the domestic hot water inlet isolation valve (4)
- open each of the DHW taps until air is expelled.

Heating circuit:

- open the isolation and air bleeding valves in the highest points of the system
- loosen the automatic bleed valve [3]
- open the heating circuit isolation valves [8] and [9]
- activate the filling system "**Method of filling a sealed system**", and fill the heating system until a pressure of **1-1.2 bar** is shown on the display
- stop the filling system
- check that there is no air in the system by bleeding all the radiators and the circuit on the high points of the system. Connect a suitable pipe and use the heat exchanger bleed point [10] to vent the primary heat exchanger

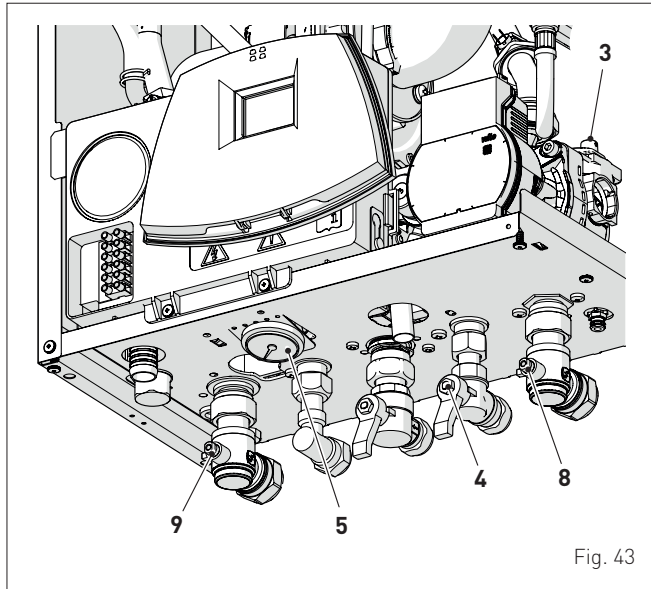


Fig. 43

NOTE: to completely remove all air from the system, it is recommended that this operation is repeated a number of times.

- check the pressure on the display, or on the pressure gauge, and, if necessary, top up until the correct pressure reading appears
- close the automatic bleed valve [3]
- fill the siphon by disconnecting it from the pipe or using the smoke take-off point.

Refit the front panel of the boiler hooking it on at the top, pushing it forwards and securing it with the screw [1] which was removed previously.

6.14.3 EMPTYING operations

Domestic hot water circuit:

- close the domestic hot water circuit isolation valve [4]
- open one or more than one hot water taps and drain the domestic hot water circuit.

Boiler:

- loosen the automatic bleed valve [3]
- close the heating circuit isolation valves [8] and [9]
- connect a rubber hose to the boiler drain valve [7] and open it
- when it has fully emptied, close the drain valve [7]
- close the automatic bleed valve [3].

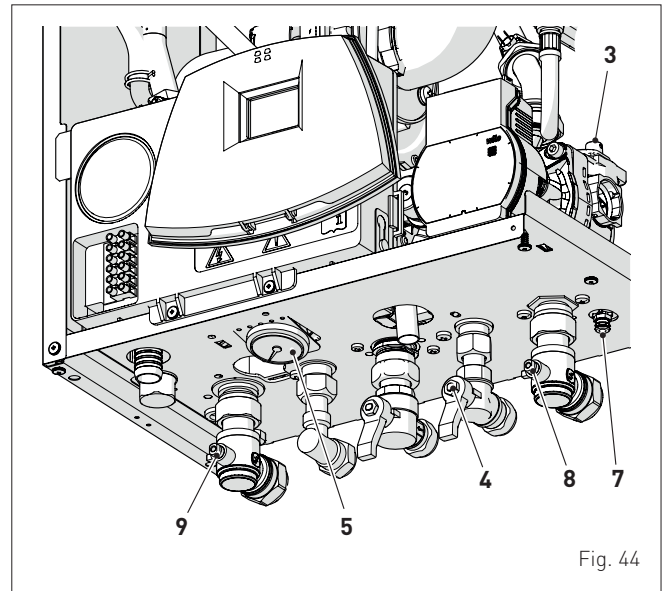


Fig. 44

7 COMMISSIONING

7.1 Preliminary operations



WARNING

- Should it be necessary to access the areas in the bottom part of the appliance, make sure that the system components and pipes are not hot (risk of burning).
- Before replenishing the heating system, put on protective gloves.


Before commissioning the appliance, check that:

- the type of gas is correct for the appliance
- the gas isolation valves for the heating system and the water system are open
- the system pressure as shown on the pressure gauge when the system is cold, is between **1 and 1.2 bar**
- the pump impeller rotates freely
- the siphon has been filled
- the flue is fitted correctly.


7.2 Before commissioning

After having carried out the preliminary operations, proceed as follows:


- set the main system switch to "ON"

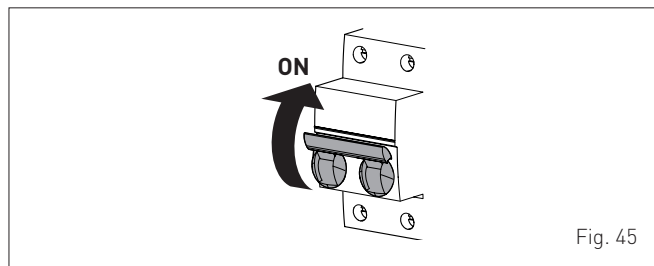

- the type of gas for which the boiler has been calibrated, "**nG**" (methane) or "**LG**" (LPG,) will appear followed by the power. Finally "**--**" will appear on the display

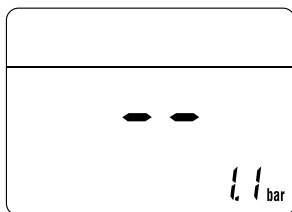


- check that the system pressure as shown on the display or on the pressure gauge, when the system is cold, is between **1 and 1.2 bar**
- press the button **OR** once for at least 1 second to select "SUMMER mode" the value of the delivery sensor detected at that moment will appear on the display

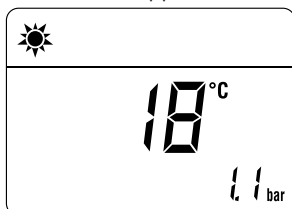


7.3 Parameter setting and display

To go into the parameter menu:

- from the selected mode (eg. WINTER)

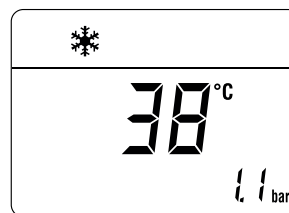


- turn dials and to the maximum
- simultaneously press the **+** and **-** buttons (~ 5 s) until "**PAR 01**" (parameter number) appears on the display along with the set value (0-12) (consult the table in the "**Circuit Board Replacement**" paragraph)

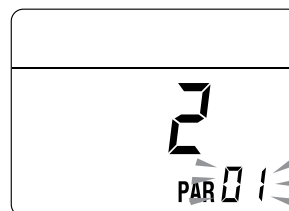

- press the button **+** to scroll up the list of parameters and then **-** to scroll down the list


NOTE: holding the buttons **+** or **-** increases the speed of the scrolling movement.

- once the required parameter has been reached, press the button **OR** for approximately 3 seconds to confirm and access the set value which will then flash and can then be modified

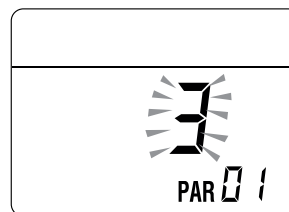

- to modify the value in the permitted range, press the buttons **+** to increase it or **-** to decrease it
- once the required value has been reached, press the button **OR** to confirm.

Once all the desired parameter values have been modified, **simultaneously** press, for ~ 5 s, the **+** and **-** buttons to exit the parameters menu, until the home page reappears.

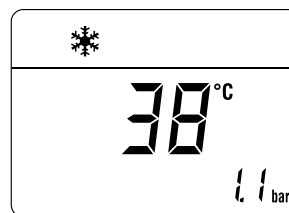


7.4 List of parameters

| Type | No. | Description | Range | U/M | Step | Default |
|-------------------------------------|-----|--|--|-----------------|------|------------------|
| CONFIGURATION | | | | | | |
| PAR | 01 | Index showing boiler power in kW | 2 = 30 kW [G20] 4 = 40 kW [G20] 8 = 30 kW [G31] 10 = 40 kW [G31] | - | 1 | 2; 4 ; 8 ; 10 |
| PAR | 02 | Hydraulic configuration | 0 = combi 1 = system 2 = N/A 3 = N/A 4=instant with solar power input 5 = open vent 6 = Kit Hybrid 9 = Hybrid Wall 10 = Hybrid Wall "T" hot water tank boiler 11 = Kit Hybrid hot water tank boiler "T" | - | 1 | 0 |
| PAR | 07 | Thermal gradient for Hybrid Wall defrosting aid | 0 .. 30 | °C/min | 1 | 10 |
| PAR | 08 | External sensor value correction | -5 .. +5 | °C | 1 | 0 |
| PAR | 09 | Ignition fan speed | 80 .. 160 | RPMx25 | 1 | 128 |
| DOMESTIC HOT WATER - HEATING | | | | | | |
| PAR | 10 | Boiler Antifreeze Threshold | 0 .. +10 | °C | 1 | 3 |
| PAR | 11 | External Sensor Antifreeze Threshold -- = Disabled | -9 .. +5 | °C | 1 | -2 |
| PAR | 12 | Heating Curve Incline | 0 .. 80 | - | 1 | 20 |
| PAR | 13 | Minimum Heating Temperature Adjustment | 20 .. PAR 14 | °C | 1 | 20 |
| PAR | 14 | Maximum Heating Temperature Adjustment | PAR 13 .. 80 | °C | 1 | 80 |
| PAR | 15 | Maximum power in CH mode | 0 .. 100 | % | 1 | 100 |
| PAR | 16 | Heating Post-Circulation Time | 0 .. 99 | seconds x 10 | 1 | 3 |
| PAR | 17 | Heating Pump Activation Delay | 0 .. 60 | seconds x 10 | 1 | 0 |
| PAR | 18 | Heating Re-ignition Delay | 0 .. 60 | Min | 1 | 3 |
| PAR | 19 | Domestic Hot Water Modulation with Flow meter | 0 = Disabled 1 = Enabled | - | 1 | 1 |
| PAR | 20 | Maximum power domestic hot water | 0 .. 100 | % | 1 | 100 |
| PAR | 21 | Minimum power heating/domestic hot water (premixed) | 0 .. 100 | % | 1 | 0 |
| PAR | 22 | Domestic hot water preheating enabling | 0 = OFF 1 = ON | - | 1 | 0 |
| PAR | 23 | External relay 1 function | 0 = not used 1 = remote alarm NO 2 = remote alarm NC 3 = zone valve 4 = automatic filling 5 = external request 6 = recirculation pump 7 = zone valve with OT 8 = relaunch pump 9 = boiler with heat pump (circulator) | - | - | 0 |
| PAR | 24 | External relay 2 function | 0 = not used 1 = remote alarm NO 2 = remote alarm NC 3 = zone valve 4 = automatic filling 5 = external request 6 = recirculation pump 7 = zone valve with OT 8 = relaunch pump 9 = boiler with heat pump (circulator) 13 = management of the heat pump for Hybrid Wall | - | - | 0 |

| Type | No. | Description | Range | U/M | Step | Default |
|--------------|-----|--|--|-----|------|---------|
| PAR | 25 | Auxiliary TA function | 0 = according to TA 1 = TA Antifreeze 2 = domestic hot water disabled | - | 1 | 0 |
| PAR | 26 | Zone Valve / Pump Relaunch Delay | 0 .. 99 | Min | 1 | 1 |
| PAR | 28 | DHW activation delay with solar power | 0 .. 30 | Min | 1 | 0 |
| PAR | 29 | Anti-legionella Function (Only hot water tank) -- = Disabled | 50 .. 80 | - | 1 | -- |
| PAR | 30 | Maximum domestic hot water temperature | 10 .. 67 | °C | 1 | 60 |
| PAR | 31 | Long chimney | 0 .. 50 | - | 1 | 0 |
| PAR | 35 | Digital / analogue Pressure switch | 0 = water pressure switch 1 = water pressure transducer (with ALL 09) 2 = water pressure transducer (without ALL 09) | - | 1 | 1 |
| PAR | 39 | Modulating pump minimum speed | 20 .. 100 | % | 1 | 30 |
| PAR | 40 | Modulating Pump Speed | -- = No modulation AU = Automatic 30 .. 100 | % | 10 | AU |
| PAR | 41 | ΔT Modulating pump delivery/Return | 10 .. 40 | °C | 1 | 20 |
| PAR | 42 | Select heat pump or boiler convenience (only if PAR 02 = 6,9,10) | -20 .. 30 | °C | - | 5 |
| PAR | 43 | Heat pump boiler aid activation delay (only if PAR 02 = 6,9,10) | 1 .. 60 | Min | - | 20 |
| PAR | 44 | Hybrid Wall heat pump delivery safety device | 0 .. 80 | °C | 1 | 55 |
| PAR | 47 | System pump forcing (only in winter mode) | 0 = Disabled 1 = Enabled | - | 1 | 0 |
| RESET | | | | | | |
| PAR | 48 | INST Parameter set to default | 0 .. 1 | - | - | 0 |

In the event of a fault/malfunction the message **"ALL"** will appear on the display with the alarm number eg. **"ALL 04"** (Domestic Hot Water Sensor Fault).

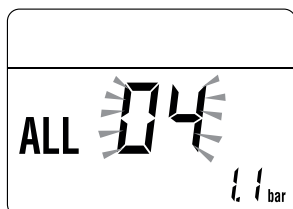

Before repairing the fault:

- disconnect the appliance from the mains power by setting the main switch to "OFF"


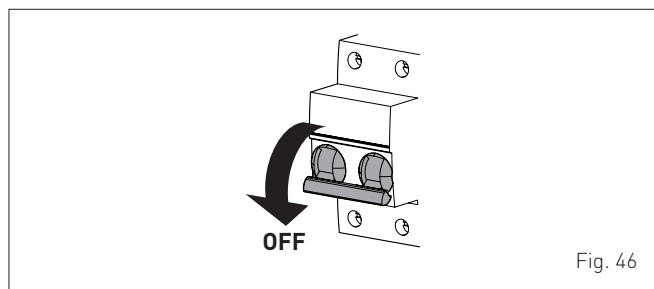


Fig. 46

- as a precautionary measure, close the gas isolation valve.

Resolve the problem and start-up the boiler again.


NOTE: after having repaired the fault, when the alarm number appears on the display together with the message **RESET** (see figure), press the button **OR** for approximately 3 seconds to start the appliance up again.

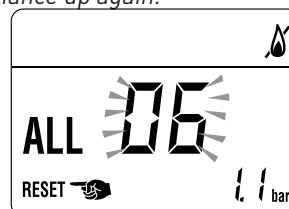


7.5 Display of operating data and counters

Once the boiler is operating a qualified technician can view the operating data and the counters as follows: >.

From the operating screen in the mode enabled at that moment (WINTER ❄️ or SUMMER ☀️):

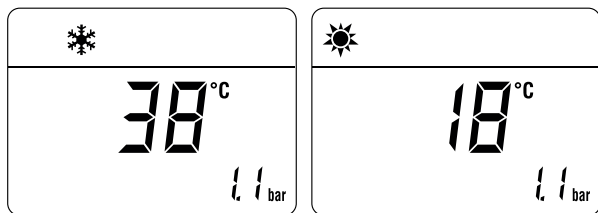


- turn the heating and hot water knobs to the minimum
- simultaneously **press**, for more than 3 s, the **+** and **–** buttons.

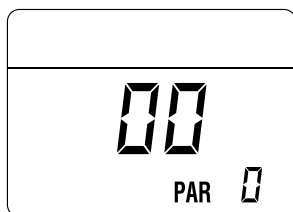


From this point, the technician has 2 options:

- pressing the **+** button will scroll the list of “**information (PAR)**” and of the “**counters (PARc)**”. The scrolling sequence is as follows

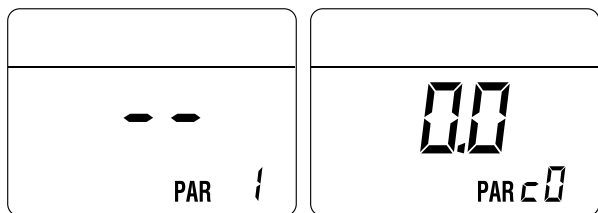

- pressing the **–** button will show the “**alarms occurred (PARa)**”

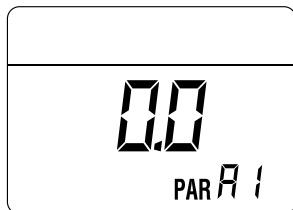

- move within the displayed items using the **–** or **+** buttons
- once the desired values have been displayed, to exit the menu press the button until the home page appears.

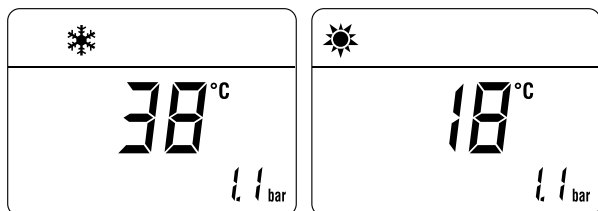


TABLE OF INFORMATION DISPLAYED

| Type | No. | Description | Range | U/M | Step |
|------|-----|---------------------------------------|------------------------|-----------|------|
| PAR | 00 | SW version | | | |
| PAR | 01 | External temperature sensor | - 9 .. 99 | °C | 1 |
| PAR | 02 | Delivery sensor temperature | - 9 .. 99 | °C | 1 |
| PAR | 03 | Exhaust temperature (SF) | - 9 .. 99 | °C | 1 |
| PAR | 04 | Domestic hot water sensor temperature | - 9 .. 99 | °C | 1 |
| PAR | 05 | AUX auxiliary sensor | - 9 .. 99 | °C | 1 |
| PAR | 06 | Actual heating SET temperature | Par. 13 ... Par. 14 | °C | 1 |
| PAR | 07 | Power level | 0 .. 99 | % | 1 |
| PAR | 08 | DHW Flow rate | 0 .. 99 | l/min | 0.1 |
| PAR | 09 | Water pressure transducer reading | 0 .. 99 | bar | 0.1 |
| PAR | 10 | Actual speed fan number | 0 .. 99 | RPM x 100 | 1 |

TABLE OF COUNTER DISPLAYED

| Type | No. | Description | Range | U/M | Step |
|------|-----|--|----------|----------|--|
| PAR | c0 | total no. of boiler operating hours | 0 .. 99 | h x 1000 | 0.1; from 0.0 to 9.9; 1; from 10 to 99 |
| PAR | c1 | total no. of burner operating hours | 0 .. 99 | h x 1000 | 0.1; from 0.0 to 9.9; 1; from 10 to 99 |
| PAR | c2 | total no. of burner ignitions | 0 .. 99 | h x 1000 | 0.1; from 0.0 to 9.9; 1; from 10 to 99 |
| PAR | c3 | total no. faults | 0 .. 99 | x 1 | 1 |
| PAR | c4 | total no. of times installer parameters "ALL" accessed | 0 .. 99 | x 1 | 1 |
| PAR | c5 | total no. of times OEM parameters accessed | 0 .. 99 | x 1 | 1 |
| PAR | c6 | Countdown to the next service | 1 .. 199 | months | 1 |

TABLE OF ACTIVATED ALARMS/FAULTS

| Type | No. | Description |
|------|-----|---------------------------------------|
| PAR | A0 | Last activated alarm/fault |
| PAR | A1 | Last but one activated alarm/fault |
| PAR | A2 | Third from last activated alarm/fault |
| PAR | A3 | Previous activated alarm/fault |
| PAR | A4 | Previous activated alarm/fault |
| PAR | A5 | Previous activated alarm/fault |
| PAR | A6 | Previous activated alarm/fault |
| PAR | A7 | Previous activated alarm/fault |
| PAR | A8 | Previous activated alarm/fault |
| PAR | A9 | Previous activated alarm/fault |

7.6 Checks

7.6.1 Chimney sweep function

The chimney sweeper function is used by the qualified maintenance technician to check the mains gas pressure, detect the combustion parameters and to measure the combustion efficiency. A combustion analysis should not be conducted until a satisfactory inlet working pressure test has been completed.

This function lasts 15 minutes and is activated by proceeding as follows:

- if the panel (2) has not already been removed, remove the two screws (1), pull the front panel (2) forwards and release it from the top by lifting it

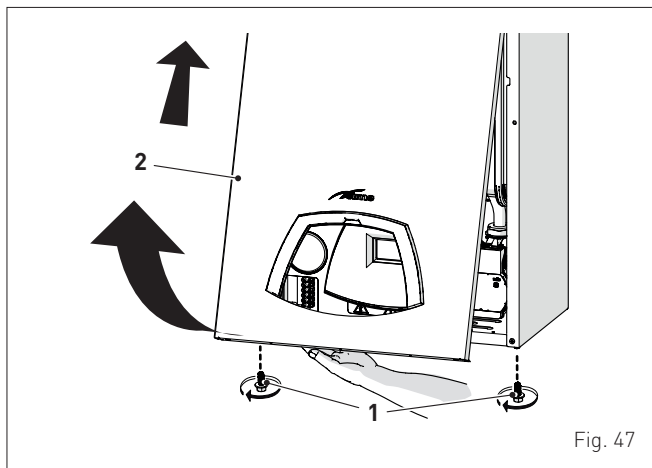


Fig. 47

- remove the screws (3) securing the control panel (4)
- move the panel (4) upwards (a) but keeping it in the side guides (5) to the end of travel
- bring it forwards and down (b) until it is horizontal

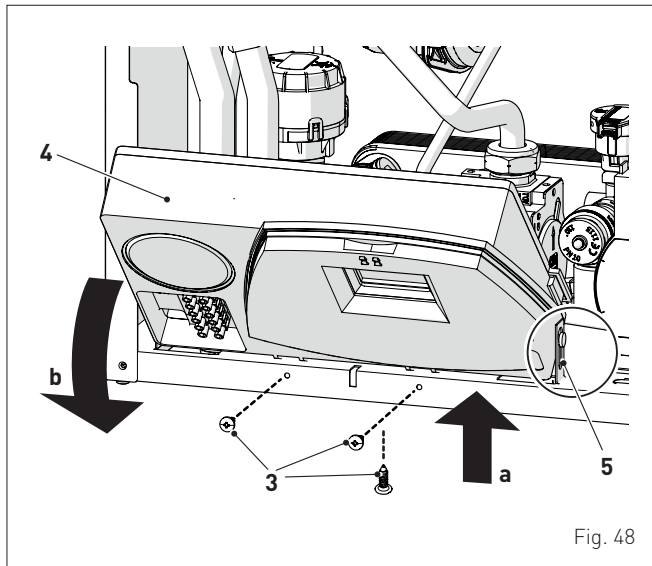


Fig. 48

- isolate the gas cock
- loosen the screw of the “gas mains pressure point” (6) and connect a pressure gauge

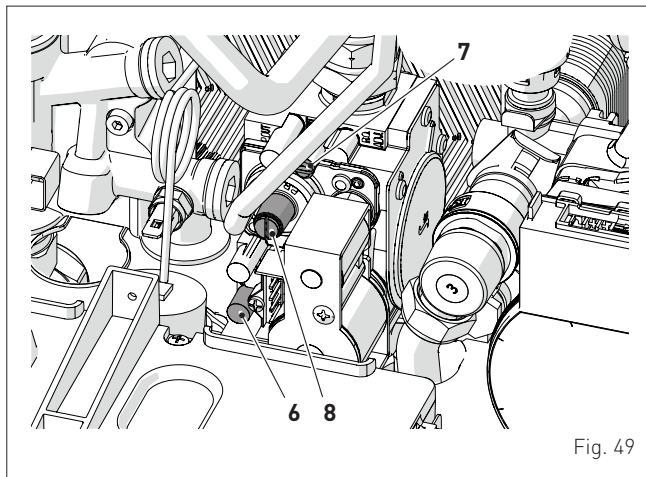


Fig. 49

- open the gas cock
- power the boiler by setting the main switch to “ON”


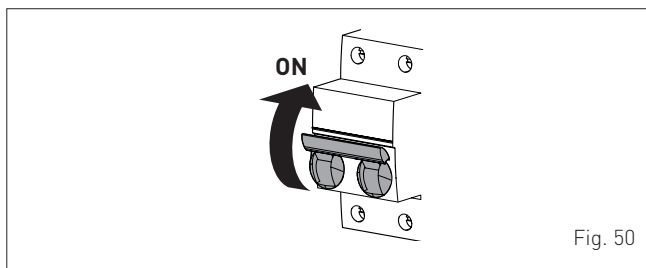


Fig. 50

- press the button **ON** for at least 1 second until “SUMMER” mode has been selected
- simultaneously press the **ON** and **+** buttons, for ~ 10 s, to start the procedure, until “Hi” appears steady on the display and the and symbols flash



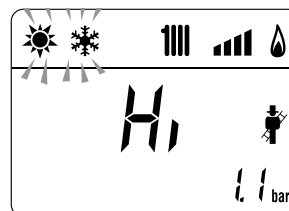


- press the button **+** to make the boiler operate at maximum power “Hi” and check that the mains gas pressure value on the pressure gauge is correct.
- check that the gas supply pressure is as shown in the table below

| Type of gas | G20 | G31 |
|-----------------|-----|-----|
| Pressure (mbar) | 20 | 37 |

- measure the CO₂ and verify that it corresponds to the value appearing in the table. If not, turn the “CO₂ adjuster screw (splitter)” (7) of the gas valve until you obtain the CO₂ value of the table. Make any other necessary measurements.

| Edea | CO ₂ (G20) | CO ₂ (G31) |
|------|-------------------------------|-------------------------------|
| | Q _{max} (% ± 0,2) | Q _{max} (% ± 0,2) |
| 30 | 9,2 | 10,2 |
| 40 | 9,3 | 10,0 |

- press the button **—** to make the boiler operate at minimum power “Lo”. The message “Lo” will appear on the display together with the flashing symbols  and .

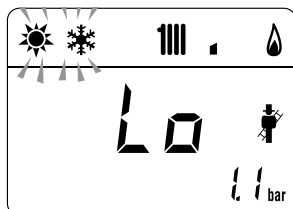


- measure the CO₂ and verify that it corresponds to the value appearing in the table. If not, turn the “CO₂ adjuster screw (offset)” (8) of the gas valve until you obtain the CO₂ value of the table. Make any other necessary measurements.
- record in Benchmark commissioning Check list (page 50).

| Edea | CO ₂ (G20) | CO ₂ (G31) |
|------|-------------------------------|-------------------------------|
| | Q _{min} (% ± 0,2) | Q _{min} (% ± 0,2) |
| 30 | 9,2 | 10,0 |
| 40 | 9,1 | 10,0 |

NOTE: There are negligible losses of working gas pressure attributable to the boiler as the gas cock is connected directly to the gas valve.

- press the button **OR** to exit the “Chimney sweeper Procedure”. The boiler water delivery temperature will appear on the display

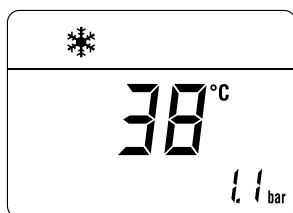


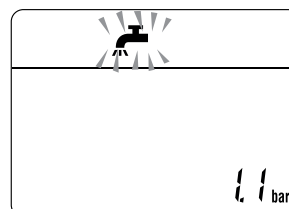
- disconnect the pressure gauge, carefully close the pressure point (6), test for gas tightness, put the control panel back to the original position and refit the front panel (2). Now conduct a flue gas analysis as detailed in APPENDIX 2.

7.7 Domestic hot water comfort function (preheating)


Edea models have a “domestic hot water comfort” function which ensures the best performance in terms of domestic hot water, reducing the time necessary for the hot water to become available and ensuring that the temperature is stable.


To activate the function:

- select parameter “PAR 22” (see “Parameter setting and display”) and set it to **value 1**
- exit parameter settings and press button **+** for approximately 5 seconds until the symbol  appears on the display and begins to flash indicating that the function has been activated.



To deactivate the function:

- press button **+** again for approximately 5 seconds until the symbols  and **RESET** appear on the display and begin to flash indicating that the function has been deactivated.

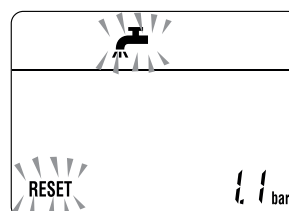

7.8 Gas conversion

The **Edea** models can be transformed from G20 to G31-based operation by installing the "Nozzle kit for G31", which must be ordered separately from the boiler, and by editing "**PAR 01**" as specified in the table.

| Edea | G31 | |
|------|----------|--------|
| | Kit code | PAR 01 |
| 30 | 5185154 | 8 |
| 40 | 5185156 | 10 |

(*) To set parameter **PAR 01** correctly, check the fan model on the technical data plate and set the parameter according to the installed model as described in the paragraph "**List of parameters**".



CAUTION

Only qualified persons in compliance with the instructions contained in this manual are permitted to install, commission and maintain this boiler. The installation of this boiler must be in accordance with the relevant requirements of the current Gas Safety (installation and use) Regulation 1998, the local building regulations, and I.E.E. wiring regulations.



WARNING

Before carrying out any interventions described:

- isolate the power supply
- isolate the gas cock
- avoid contact with any hot surfaces.

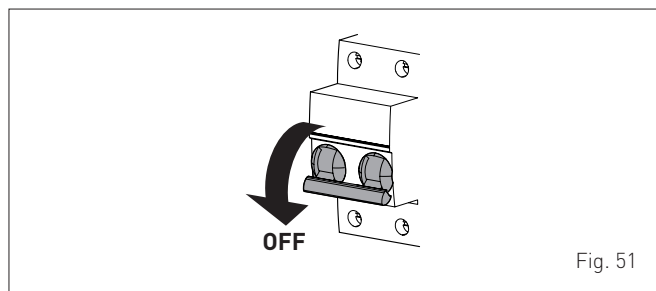


Fig. 51

7.8.1 Preliminary operations

To carry out the conversion:

- remove the screws (1), pull the front panel (2) forwards and release it from the top by lifting it

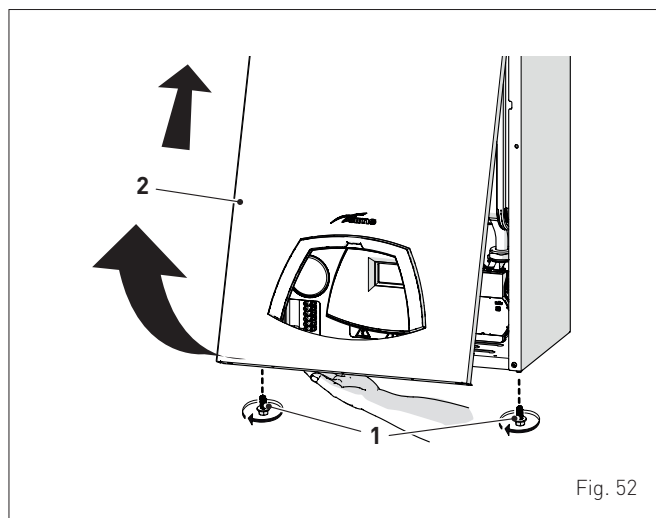


Fig. 52

- loosen the eight screws (3) and remove the cover (4)
- unscrew the screw (5) and remove the plate (6)

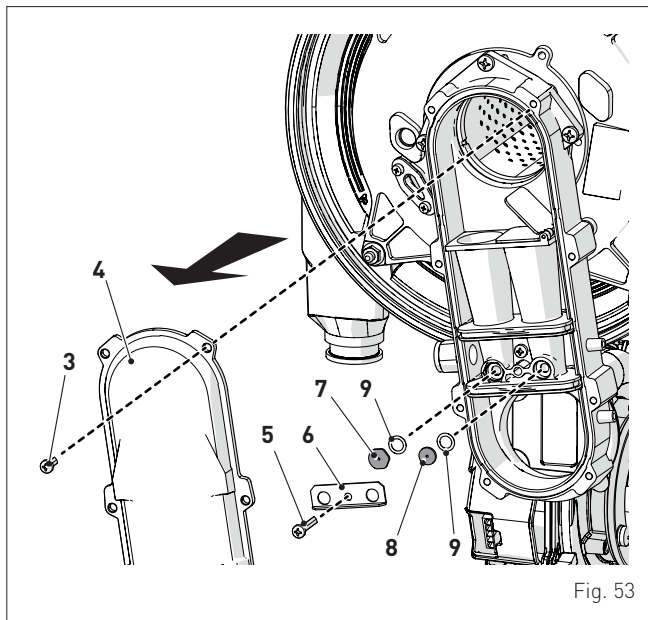


Fig. 53

- replace the two distinct nozzles (7) and (8) and the related O-ring (9) with those provided in the conversion kit. Having two distinct nozzle heads avoids them being inverted during assembly
- refit the plate (6) and cover (4) following the above instructions in reverse order
- replace the smoke outlet diaphragm, if present in the transformation kit, as illustrated in "Fig. 26"
- access the installer parameters and modify parameter **PAR 01** on the basis of the power and gas used, as indicated in the table in the "**Circuit Board Replacement**" paragraph
- perform the "**Chimney sweep function**" function to correctly set the CO₂ of the boiler with the new gas and then mount the front panel (2) back on, securing it with the two screws (1).

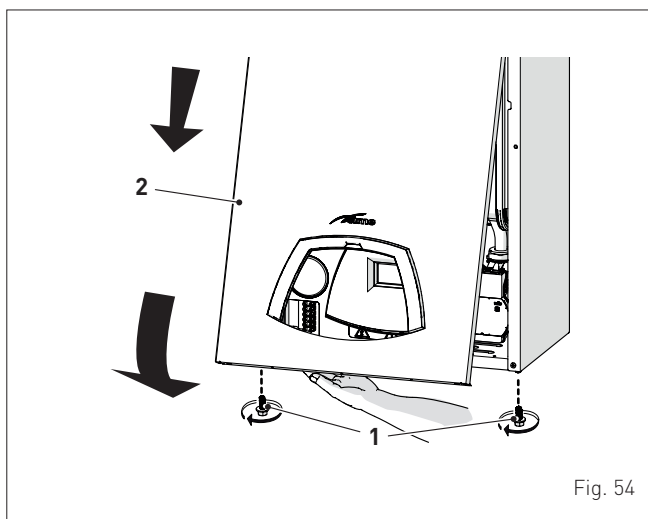


Fig. 54



CAUTION

Conversion may **ONLY** be carried out by Professionally Qualified Personnel.



CAUTION

If the gas supply is changed from G20 to G31, mark the box on the **TECHNICAL DATA PLATE**.

G31 - 37 mbar



8 MAINTENANCE

8.1 Servicing

As a condition of the warranty and to ensure correct operation and efficiency, it is important that the boiler is serviced every 12 months, within 30 days of the anniversary of the installation date ensure the required information is recorded in the Gas Boiler System Service Interval Record (Benchmark).



CAUTION


- Only qualified persons in compliance with the instructions contained in this manual are permitted to install, commission and maintain this boiler. Suitable protective safety equipment **MUST be worn**. The installation of this boiler must be in accordance with the relevant requirements of the current Gas Safety (installation and use), the local building regulations, and I.E.E. wiring regulations.
- Make sure that the system components and pipes are not hot (risk of burning).



WARNING

Before carrying out any interventions described:

- isolate the power supply
- isolate the gas cock
- avoid contact with any hot surfaces.

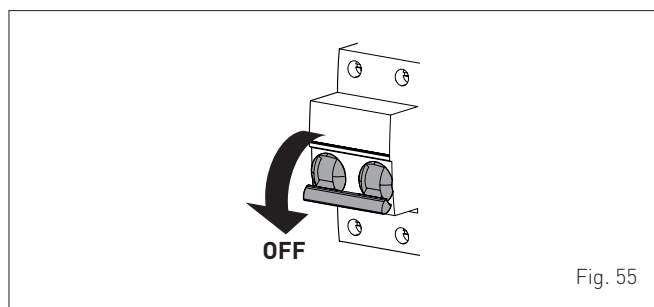

8.2 External cleaning

8.2.1 Cleaning the case

When cleaning the cladding, use a cloth dampened with soap and water or alcohol for stubborn marks.



DO NOT


Do not use abrasive products.

8.3 Burner Inspection


8.3.1 Burner access

To access the internal parts of the boiler:


- remove the screws (1), pull the front panel (2) forwards and release it from the top by lifting it

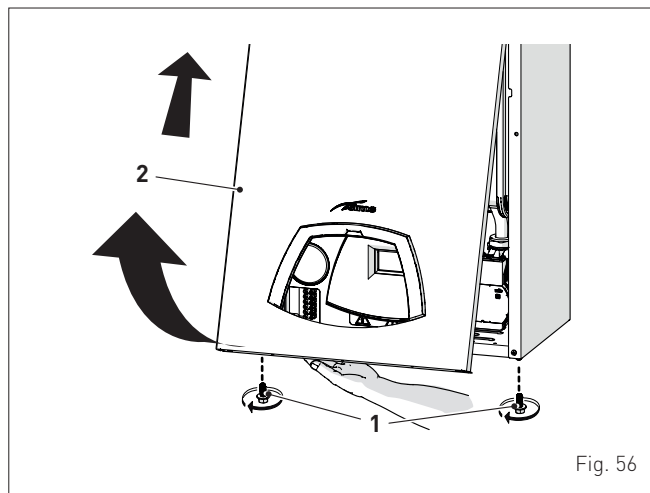


- remove the screws (3) securing the control panel (4)
- move the panel (4) upwards (a) but keeping it in the side guides (5) to the end of travel
- bring it forwards and down (b) until it is horizontal

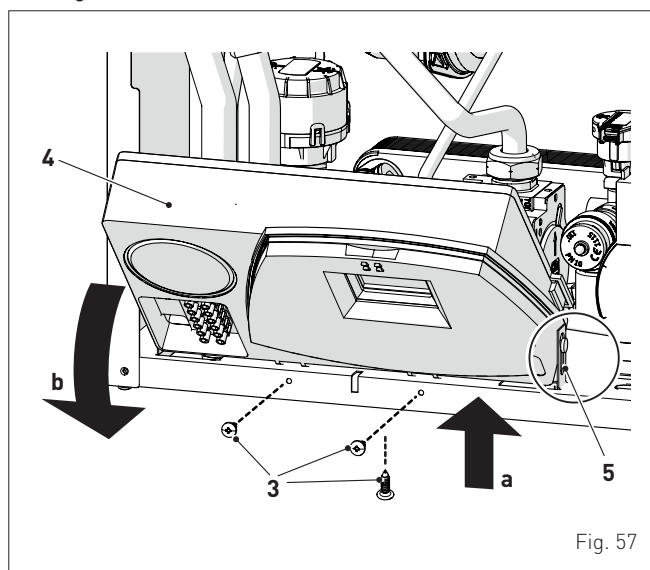

- loosen the clips (6) and extract the air inlet pipe (7)
- loosen both the ring nuts (8)
- extract the connectors (9) from the fan and disconnect the electrode cable (10)
- remove the silicone tube (11) from the air/gas duct

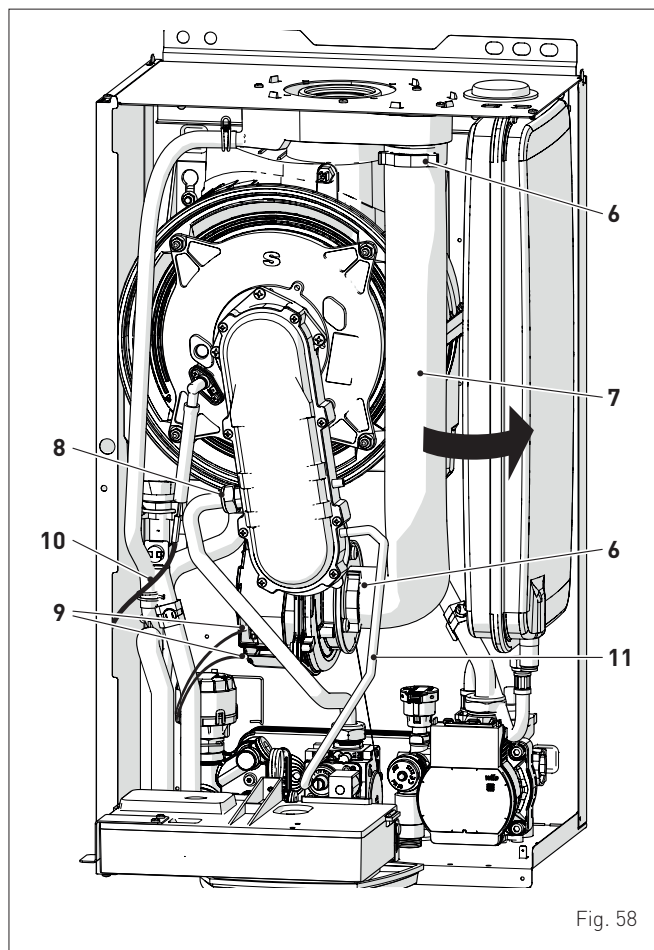

- Unscrew the four nuts (12) securing the combustion chamber door (13)
- pull the fan/sleeve/door unit (14) forwards and remove it.

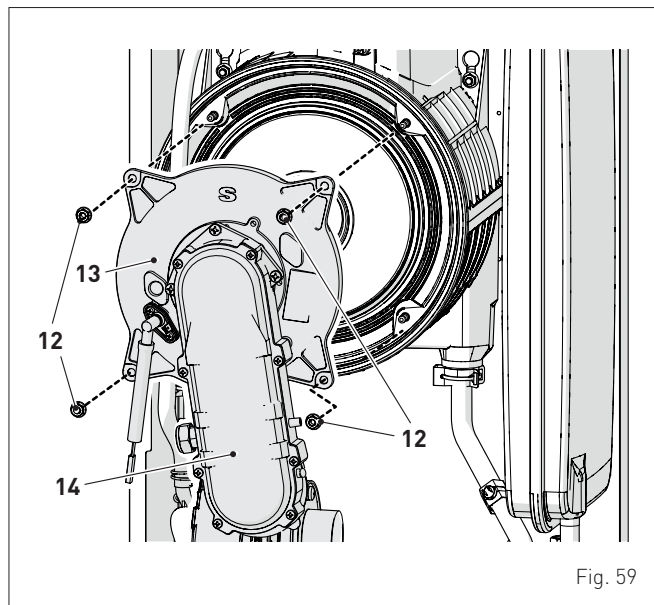

CAUTION

Work carefully when removing the assembly (14) to prevent any damage occurring to the internal insulation of the combustion chamber and the door seal.

8.3.2 Cleaning the burner and the combustion chamber

The combustion chamber and the burner do not require any particular maintenance. Simply brush them with a soft brush.


8.3.3 Checking the ignition/detection electrode

Check the state of the ignition/detection electrode and replace if necessary. Check the measurements as per the drawing whether the ignition/detection electrode is replaced or not.



CAUTION

(*) The positions must be checked with the electrode mounted on the door (13) of the combustion chamber.

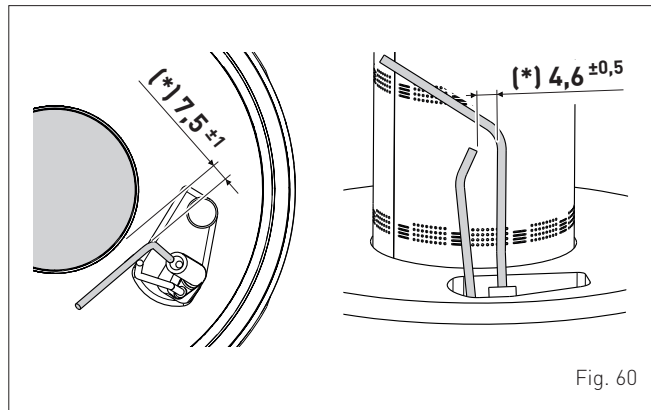

8.3.4 Final operations

After having cleaned the combustion chamber and the burner:

- remove any carbon residue
- check that the seal and the insulation of the door (13) to the combustion chamber are undamaged. Replace if necessary
- refit the assembly by carrying out the same operations for removal but in the reverse order and tighten the screws (12) of the door to the combustion chamber
- reconnect the connections to the fan and the electrode.

8.4 Checks

8.4.1 Checking the flue

Check that the flue is undamaged and complete.

8.4.2 Checking the expansion vessel pressure

It is recommended that the expansion vessel on the water side is drained and that the prefilling pressure is not less than **1 bar**. If this is not the case, pressurize it to the correct value (see section "Expansion vessel").

8.4.3 System Inhibiter concentration

Check and if required correct the inhibitor concentration.

Once the checks described above have been completed:

- refill the boiler as described in section "SYSTEM Filling"
- check that the siphon has been filled correctly
- Start the boiler, activate the "Chimney sweep function" and carry out combustion analysis as detailed in Appendix 2
- refit the front panel securing it with the two screws which were removed previously.

8.5 Circuit Board Replacement

Should the circuit board be replaced, the engineer **MUST set the parameters** as indicated in this table and in the sequence shown.

| Type | No. | Description | Setting for Edea | |
|------|-----|---|------------------|----|
| | | | 30 | 40 |
| PAR | 01 | Index showing for boiler power in kW | G20 2 | 4 |
| | | | G31 8 | 10 |
| PAR | 02 | Hydraulic configuration 0 = combi 1 = system 2 = N/A 3 = N/A 4 = instant with solar power input 5 = open vent 6 = Kit Hybrid 9 = Hybrid Wall 10 = Hybrid Wall "T" hot water tank boiler 11 = Kit Hybrid hot water tank boiler "T" | 0 | |

(*) To set parameter PAR 01 correctly, check the fan model on the technical data plate and set the parameter according to the installed model as described in the paragraph "**List of parameters**".

To enter "**Parameter setting and display**" refer to the indications provided in the specific section.

If the **gas valve** are replaced, the user must still carry out the entire phase of "**Chimney sweep function**" described in the specific section.

8.6 Malfunction codes and possible solutions


LIST OF MALFUNCTION/FAULT ALARMS


| Type | No. | Fault | Solution |
|------|-----|--|---|
| ALL | 02 | Low water pressure in system | - Restore pressure - Check for any leaks in the system |
| ALL | 03 | High water pressure in system | - Empty the system via the drain valve on the hydraulic assembly and bring the pressure to approximately 1.2 bar |
| ALL | 04 | Domestic hot water sensor fault (return sensor fault for T models) | - Check connections - Check the sensor is working |
| ALL | 05 | Delivery sensor fault | - Check connections - Check the sensor is working |
| ALL | 06 | No flame detection | - Check the integrity of the electrode and check that it is not grounded - Check gas availability and pressure - Check the operation of the gas valve |
| ALL | 07 | Safety thermostat intervention | - Check the thermostat connections - Deaerate the system - Check the bleed valve - Replace the thermostat - Check that the pump impeller is not blocked |
| ALL | 08 | Fault in the flame detection circuit | - Check the integrity of the electrode and check that it is not grounded - Check the operation of the gas valve |

| Type | No. | Fault | Solution |
|------|-----|---|--|
| ALL | 09 | No water circulating in the system | - Check the rotation of the pump rotor - Check the electrical connections - Replace the pump |
| ALL | 10 | Auxiliary sensor fault | - Check PAR 02 "hydraulic configuration" - Check the electrical connection |
| ALL | 11 | Gas valve modulator disconnected | - Check the electrical connection |
| ALL | 12 | Domestic hot water sensor fault in tank mode | - Set the parameter PAR 04 (Combustion configuration) to 0 |
| ALL | 13 | Exhaust sensor intervention | - Check the sensor is working - Replace the smoke probe |
| ALL | 14 | Exhaust sensor fault | - Replace the smoke probe - Check the electrical connection of the smoke probe - Contact the Technical Assistance Centre |
| ALL | 15 | Fan check cable disconnected | - Check the connection cable between the fan and the board |
| ALL | 18 | Condensate level fault | - Check for any clogging in the pipe which takes the condensate to the siphon - Check that the siphon is not clogged |
| ALL | 28 | Maximum number of consecutive resets reached (6) | - Wait 1 hour and try unblocking the board again - Contact the Technical Assistance Centre |
| ALL | 30 | Return sensor fault (boiler sensor fault for T models) | - Replace the return probe - Check parameters - Contact the Technical Assistance Centre |
| ALL | 37 | Fault due to low network voltage | - Check the voltage - Contact your network provider |
| ALL | 40 | Incorrect supply frequency detected | - Contact your network provider |
| ALL | 41 | Flame loss more than 6 consecutive times | - Check the ignition/detection electrode - Check the gas supply (open valve) - Check mains gas pressure |
| ALL | 42 | Button fault | - Check that buttons are working |
| ALL | 43 | Open Therm communication fault | - Check the OT electric connection |
| ALL | 44 | Gas valve timeout fault without flame | - Check gas valve and board |
| ALL | 72 | Incorrect positioning of the delivery sensor | - Check delivery sensor operation and position |
| ALL | 80 | Fault on the valve control logic line/valve cable damaged | - Check gas valve and board |
| ALL | 88 | Internal error (board component protection) | - Check the board is working - Replace board |
| ALL | 95 | Flame signal micro interruptions error | - Check electrode - Check board - Check electric power supply - Check gas calibration |

| Type | No. | Fault | Solution |
|------|-----|--|--|
| ALL | 98 | SW error, board start-up | - Contact the Technical Assistance Centre |
| ALL | 99 | General board error | - Contact the Technical Assistance Centre |
| - | - | Frequent relief valve intervention | - Check circuit pressure - Check expansion vessel |
| - | - | Limited production of domestic hot water | - Check the diverter valve - Check that plate heat exchanger is clean - Check domestic hot water circuit valve |

8.6.1 Maintenance request

When it is time to perform maintenance on the boiler, the  symbol shows on the display.

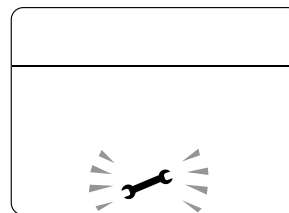

Contact the technical assistance service to organise the necessary work.

GAS BOILER SYSTEM COMMISSIONING CHECKLIST & WARRANTY VALIDATION RECORD

| | | | | | | | | | |
|---|--|--|--|--------------------|-------------------------------|--|---|--------------------------|--|
| Address: | | | | | | | | | |
| Boiler make and model: | | | | | | | | | |
| Boiler serial number: | | | | | | | | | |
| Commissioned by (PRINT NAME): | | | | | Gas Safe registration number: | | | | |
| Company name: | | | | | Telephone number: | | | | |
| Company email: | | | | | Company address: | | | | |
| | | | | | | | | Commissioning date: | |
| Heating and hot water system complies with the appropriate Building Regulations? Yes | | | | | | | | | |
| Optional: Building Regulations Notification Number (if applicable): | | | | | | | | | |
| Time, temperature control and boiler interlock provided for central heating and hot water Yes | | | | | | | | | |
| Boiler Plus requirements (tick the appropriate box(s)) | | | | | | | | | |
| Boiler Plus option chosen for combination boiler in ENGLAND | | | | | Weather compensation | | Smart thermostat with automisation and optimisation | | |
| | | | | | Load compensation | | Flue Gas Heat Recovery | | |
| Time and temperature control to hot water | | Cylinder thermostat and programmer/timer | | | | | Combination boiler | | |
| Zone valves | | pre-existing | | Fitted | | Not required | | | |
| Thermostatic radiator valves | | pre-existing | | Fitted | | Not required | | | |
| Automatic bypass to system | | pre-existing | | Fitted | | Not required | | | |
| Underfloor heating | | pre-existing | | Fitted | | Not required | | | |
| Water quality | | | | | | | | | |
| The system has been flushed, cleaned and a suitable inhibitor applied upon final fill, in accordance with BS7593 and boiler manufacturers' instructions | | | | | | | | Yes | |
| What system cleaner was used? | | | | | Brand: | | Product: | | |
| What inhibitor was used? | | | | | Brand: | | Product: | | |
| Primary water system filter | | pre-existing | | Fitted | | Not required | | | |
| CENTRAL HEATING MODE measure and record (as appropriate) | | | | | | | | | |
| Gas rate (for combination boilers complete DHW mode gas rate) | | | | m ³ /hr | | or | | ft ³ /hr | |
| Central heating output left at factory settings? | | | | Yes | | | | No | |
| If no, what is the maximum central heating output selected? | | | | kW | | | | | |
| Dynamic gas inlet pressure | | | | mbar | | | | | |
| Central heating flow temperature | | | | °C | | | | | |
| Central heating return temperature | | | | °C | | | | | |
| System correctly balanced/rebalanced? | | | | Yes | | | | | |
| COMBINATION BOILERS ONLY | | | | | | | | | |
| Is the installation in a hard water area (above 200ppm)? | | | | Yes | | | | No | |
| Water scale reducer/softener | | pre-existing | | Fitted | | Not required | | | |
| What type of scale reducer/softener has been fitted? | | | | Brand: | | Product: | | | |
| Water meter fitted? | | | | Yes | | | | No | |
| If yes- DHW expansion vessel | | pre-existing | | Fitted | | Not required | | | |
| Pressure reducing valve | | pre-existing | | Fitted | | Not required | | | |
| DOMESTIC HOT WATER MODE Measure and record | | | | | | | | | |
| Gas rate | | | | m ³ /hr | | or | | ft ³ /hr | |
| Dynamic gas inlet pressure at maximum rate | | | | mbar | | | | | |
| Cold water inlet temperature | | | | °C | | | | | |
| Hot water has been checked at all outlets | | | | Yes | | Temperature | | °C | |
| CONDENSATE DISPOSAL | | | | | | | | | |
| The condensate drain has been installed in accordance with the manufacturers' instructions and/or BS5546/BS6798 | | | | | | | | Yes | |
| Point of termination | | | | Internal | | External (only where internal termination impractical) | | | |
| Method of disposal | | | | Gravity | | Pumped | | | |
| ALL INSTALLATIONS | | | | | | | | | |
| Record the following | | At max rate: | | CO ppm | | CO ₂ % | | CO/CO ₂ Ratio | |
| | | At min rate (where possible) | | CO ppm | | CO ₂ % | | CO/CO ₂ Ratio | |
| Where possible, has a flue integrity check been undertaken in accordance with manufacturers' instructions, and readings are correct? | | | | | | | | Yes | |
| The operation of the boiler and system controls have been demonstrated to and understood by the customer | | | | | | | | Yes | |
| The manufacturers' literature, including Benchmark Checklist and Service Record, has been explained and left with the customer | | | | | | | | Yes | |
| Commissioning Engineer's signature | | | | | | | | | |
| Customer's signature (To confirm satisfactory demonstration and receipt of manufacturers' literature) | | | | | | | | | |

* All installations in England and Wales must be notified to Local Authority Building Control (LABC) either directly or through a Competent Persons Scheme. A Building Regulations Compliance Certificate will then be issued to the customer.

© Heating and Hotwater Industry Council (HHIC)



www.centralheating.co.uk

SERVICE & INTERIM BOILER WORK RECORD

It is recommended that your boiler and heating system are regularly serviced and maintained, in line with manufacturers' instructions, and that the appropriate service / interim work record is completed.

Service provider

When completing a service record (as below), please ensure you have carried out the service as described in the manufacturers' instructions. Always use the manufacturers' specified spare parts.

| | | | | | | |
|--|----|-------------------|---------------------------|--------------------|--------------------|-----|
| SERVICE/INTERIM WORK ON BOILER delete as appropriate | | | | | Date: | |
| Engineer name: | | | Company name: | | | |
| Telephone N°: | | | Gas Safe registration N°: | | | |
| Max rate | CO | ppm | CO ₂ | % | CO/CO ₂ | |
| Min rate | CO | ppm | CO ₂ | % | CO/CO ₂ | |
| Where possible, has a flue integrity check been undertaken in accordance with manufacturers' instructions, and readings are correct?" | | | | | yes | |
| Gas rate: | | m ³ /h | OR | ft ³ /h | | |
| Were parts fitted? delete as appropriate | | | Yes | No | | |
| Parts fitted: | | | | | | |
| System inhibitor concentration has been checked and appropriate action taken, in accordance with BS 7593 and boiler manufacturers' instructions. * | | | | | yes | n/a |
| Comments: | | | | | | |
| Signature: | | | | | | |

*A System inhibitor efficacy test is required on every annual service in accordance with the manufacturers' instructions and BS 7593. It is only acceptable to not have undertaken this if the service engineers attendance visit was in between annual services to attend a non-water facing component.

| | | | | | | |
|--|----|-------------------|---------------------------|--------------------|--------------------|-----|
| SERVICE/INTERIM WORK ON BOILER delete as appropriate | | | | | Date: | |
| Engineer name: | | | Company name: | | | |
| Telephone N°: | | | Gas Safe registration N°: | | | |
| Max rate | CO | ppm | CO ₂ | % | CO/CO ₂ | |
| Min rate | CO | ppm | CO ₂ | % | CO/CO ₂ | |
| Where possible, has a flue integrity check been undertaken in accordance with manufacturers' instructions, and readings are correct?" | | | | | yes | |
| Gas rate: | | m ³ /h | OR | ft ³ /h | | |
| Were parts fitted? delete as appropriate | | | Yes | No | | |
| Parts fitted: | | | | | | |
| System inhibitor concentration has been checked and appropriate action taken, in accordance with BS 7593 and boiler manufacturers' instructions. * | | | | | yes | n/a |
| Comments: | | | | | | |
| Signature: | | | | | | |

*A System inhibitor efficacy test is required on every annual service in accordance with the manufacturers' instructions and BS 7593. It is only acceptable to not have undertaken this if the service engineers attendance visit was in between annual services to attend a non-water facing component.

| | | | | | | |
|--|----|-------------------|---------------------------|--------------------|--------------------|-----|
| SERVICE/INTERIM WORK ON BOILER delete as appropriate | | | | | Date: | |
| Engineer name: | | | Company name: | | | |
| Telephone N°: | | | Gas Safe registration N°: | | | |
| Max rate | CO | ppm | CO ₂ | % | CO/CO ₂ | |
| Min rate | CO | ppm | CO ₂ | % | CO/CO ₂ | |
| Where possible, has a flue integrity check been undertaken in accordance with manufacturers' instructions, and readings are correct?" | | | | | yes | |
| Gas rate: | | m ³ /h | OR | ft ³ /h | | |
| Were parts fitted? delete as appropriate | | | Yes | No | | |
| Parts fitted: | | | | | | |
| System inhibitor concentration has been checked and appropriate action taken, in accordance with BS 7593 and boiler manufacturers' instructions. * | | | | | yes | n/a |
| Comments: | | | | | | |
| Signature: | | | | | | |

*A System inhibitor efficacy test is required on every annual service in accordance with the manufacturers' instructions and BS 7593. It is only acceptable to not have undertaken this if the service engineers attendance visit was in between annual services to attend a non-water facing component.

| | | | | | | |
|--|----|-------------------|---------------------------|--------------------|--------------------|-----|
| SERVICE/INTERIM WORK ON BOILER delete as appropriate | | | | | Date: | |
| Engineer name: | | | Company name: | | | |
| Telephone N°: | | | Gas Safe registration N°: | | | |
| Max rate | CO | ppm | CO ₂ | % | CO/CO ₂ | |
| Min rate | CO | ppm | CO ₂ | % | CO/CO ₂ | |
| Where possible, has a flue integrity check been undertaken in accordance with manufacturers' instructions, and readings are correct?" | | | | | yes | |
| Gas rate: | | m ³ /h | OR | ft ³ /h | | |
| Were parts fitted? delete as appropriate | | | Yes | No | | |
| Parts fitted: | | | | | | |
| System inhibitor concentration has been checked and appropriate action taken, in accordance with BS 7593 and boiler manufacturers' instructions. * | | | | | yes | n/a |
| Comments: | | | | | | |
| Signature: | | | | | | |

*A System inhibitor efficacy test is required on every annual service in accordance with the manufacturers' instructions and BS 7593. It is only acceptable to not have undertaken this if the service engineers attendance visit was in between annual services to attend a non-water facing component.

| | | | | | | |
|--|----|-------------------|---------------------------|--------------------|--------------------|-----|
| SERVICE/INTERIM WORK ON BOILER delete as appropriate | | | | | Date: | |
| Engineer name: | | | Company name: | | | |
| Telephone N°: | | | Gas Safe registration N°: | | | |
| Max rate | CO | ppm | CO ₂ | % | CO/CO ₂ | |
| Min rate | CO | ppm | CO ₂ | % | CO/CO ₂ | |
| Where possible, has a flue integrity check been undertaken in accordance with manufacturers' instructions, and readings are correct?" | | | | | yes | |
| Gas rate: | | m ³ /h | OR | ft ³ /h | | |
| Were parts fitted? delete as appropriate | | | Yes | No | | |
| Parts fitted: | | | | | | |
| System inhibitor concentration has been checked and appropriate action taken, in accordance with BS 7593 and boiler manufacturers' instructions. * | | | | | yes | n/a |
| Comments: | | | | | | |
| Signature: | | | | | | |

*A System inhibitor efficacy test is required on every annual service in accordance with the manufacturers' instructions and BS 7593. It is only acceptable to not have undertaken this if the service engineers attendance visit was in between annual services to attend a non-water facing component.

| | | | | | | |
|--|----|-------------------|---------------------------|--------------------|--------------------|-----|
| SERVICE/INTERIM WORK ON BOILER delete as appropriate | | | | | Date: | |
| Engineer name: | | | Company name: | | | |
| Telephone N°: | | | Gas Safe registration N°: | | | |
| Max rate | CO | ppm | CO ₂ | % | CO/CO ₂ | |
| Min rate | CO | ppm | CO ₂ | % | CO/CO ₂ | |
| Where possible, has a flue integrity check been undertaken in accordance with manufacturers' instructions, and readings are correct?" | | | | | yes | |
| Gas rate: | | m ³ /h | OR | ft ³ /h | | |
| Were parts fitted? delete as appropriate | | | Yes | No | | |
| Parts fitted: | | | | | | |
| System inhibitor concentration has been checked and appropriate action taken, in accordance with BS 7593 and boiler manufacturers' instructions. * | | | | | yes | n/a |
| Comments: | | | | | | |
| Signature: | | | | | | |

*A System inhibitor efficacy test is required on every annual service in accordance with the manufacturers' instructions and BS 7593. It is only acceptable to not have undertaken this if the service engineers attendance visit was in between annual services to attend a non-water facing component.

* All installations in England and Wales must be notified to Local Authority Building Control (LABC) either directly or through a Competent Persons Scheme. A Building Regulations Compliance Certificate will then be issued to the customer.


© Heating and Hotwater Industry Council (HHIC)




www.centralheating.co.uk

9 EXPLODED VIEWS


Frame

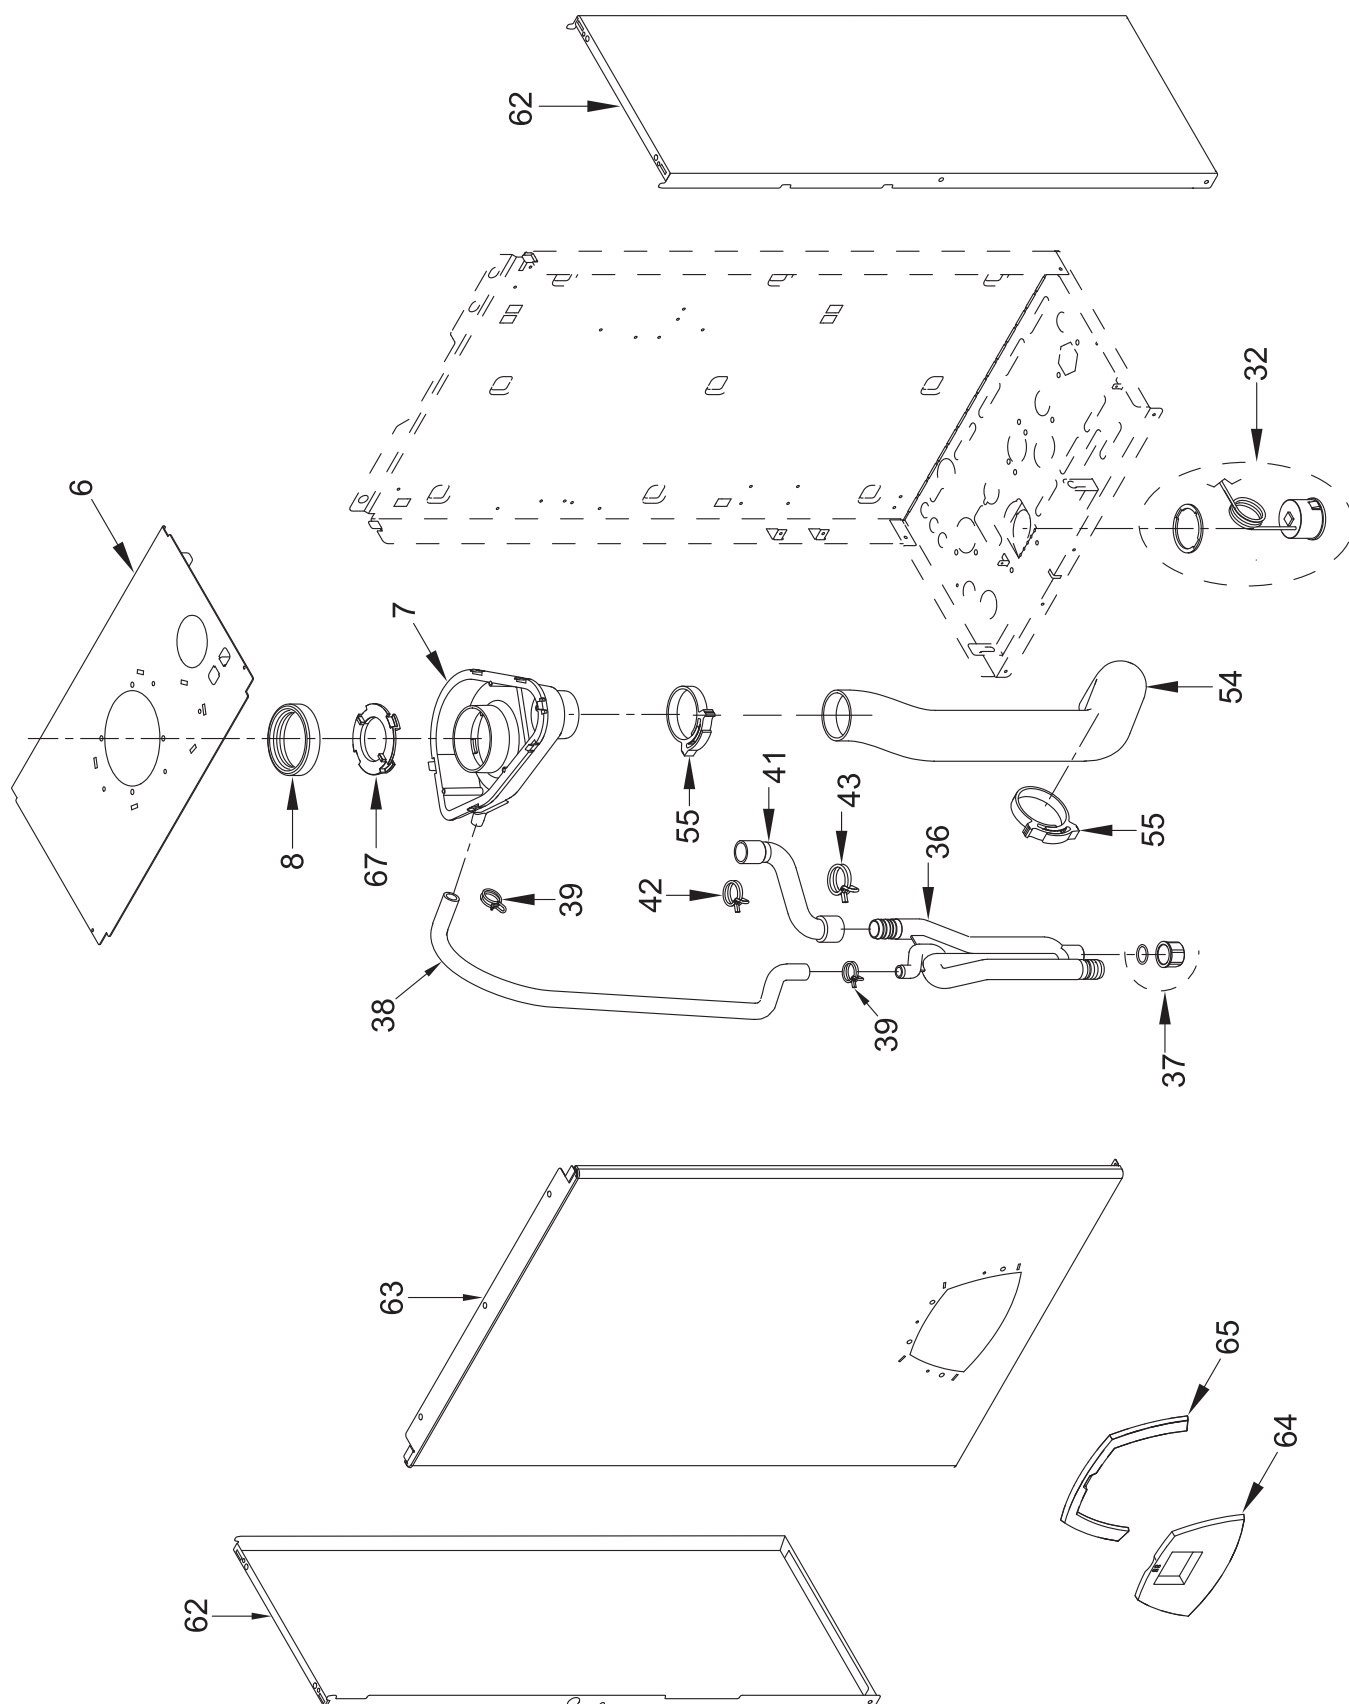


Hydraulic assembly Edea 30

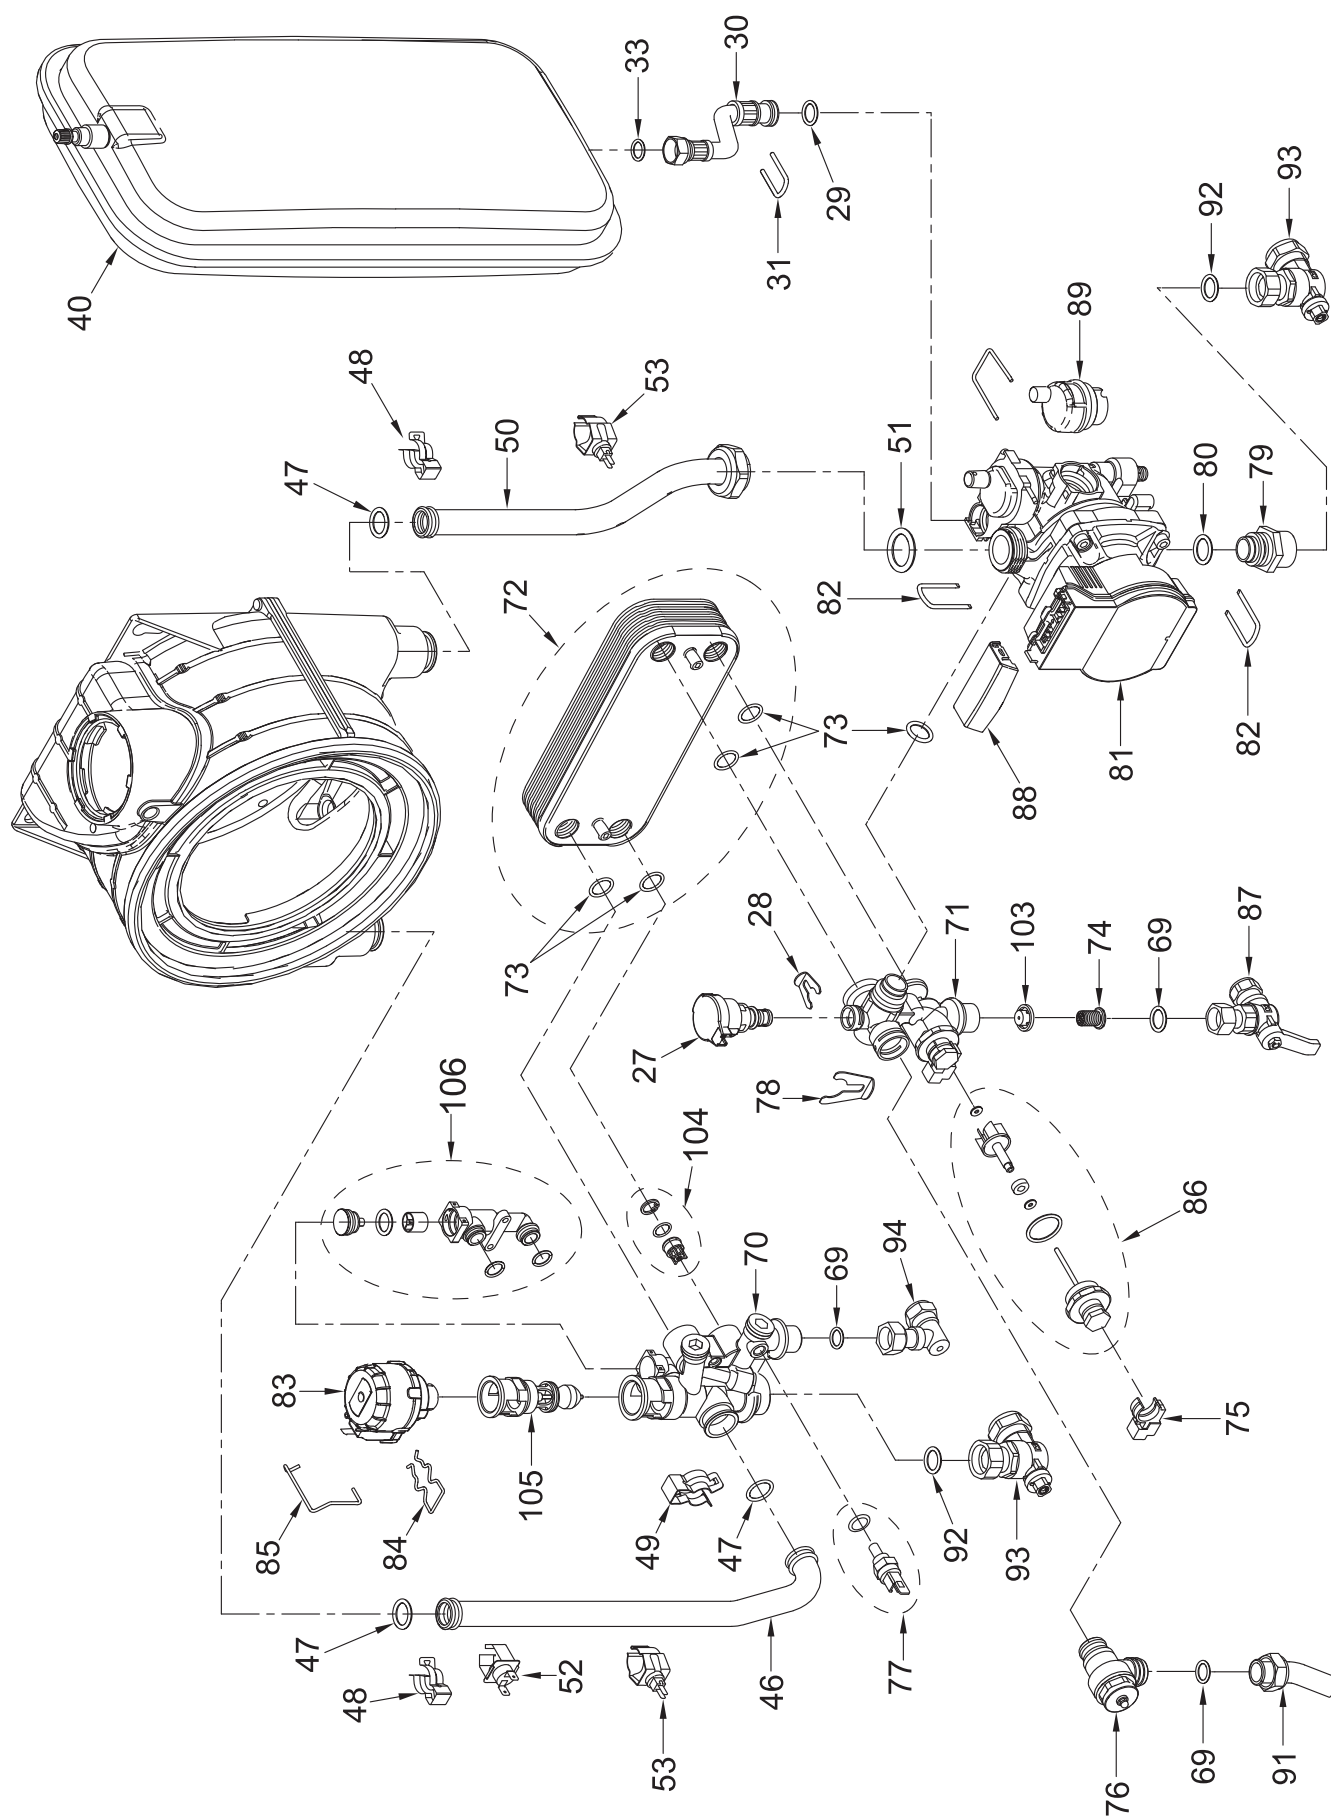


Hydraulic assembly Edea 40

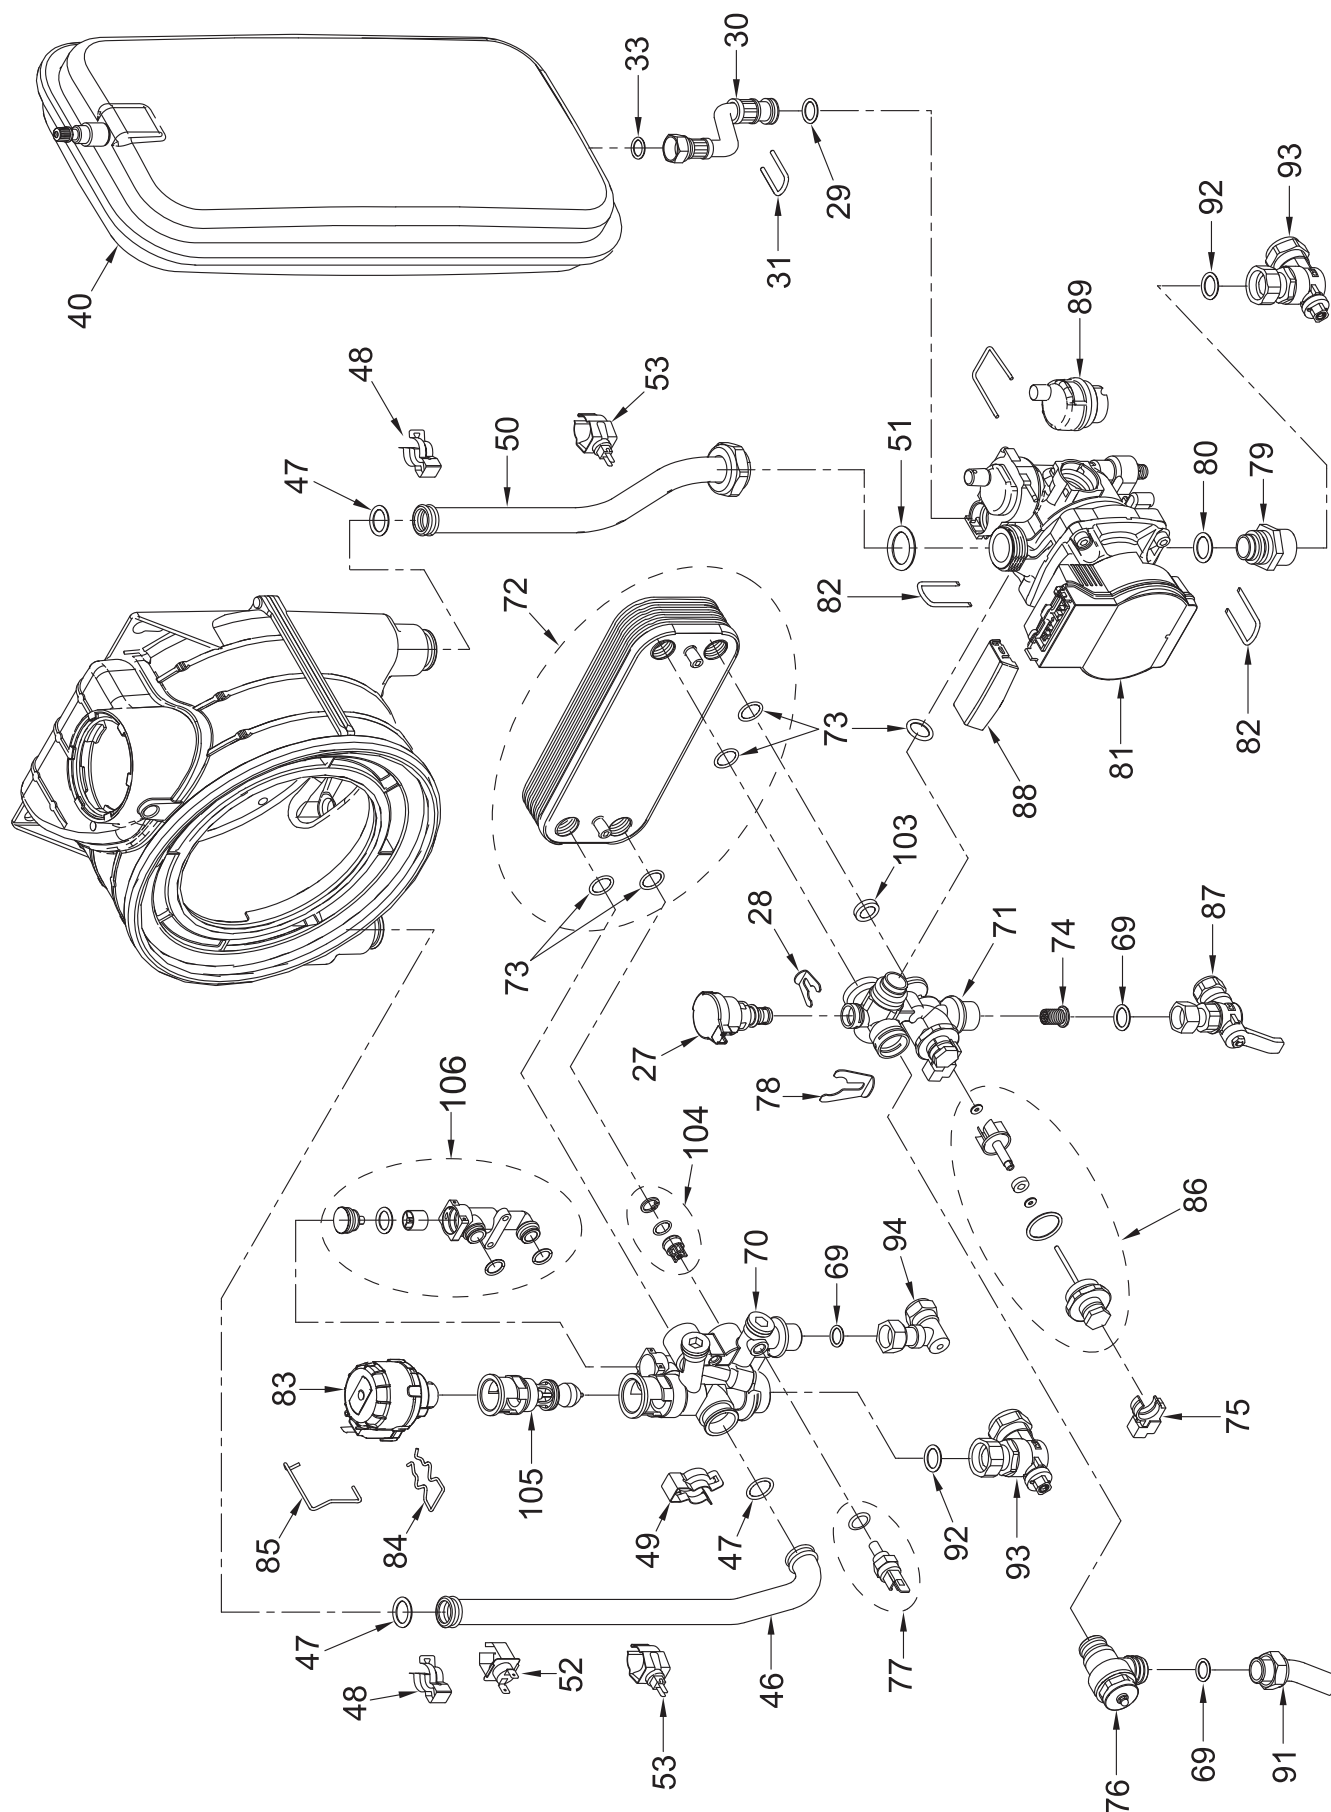


Exchanger / Combustion

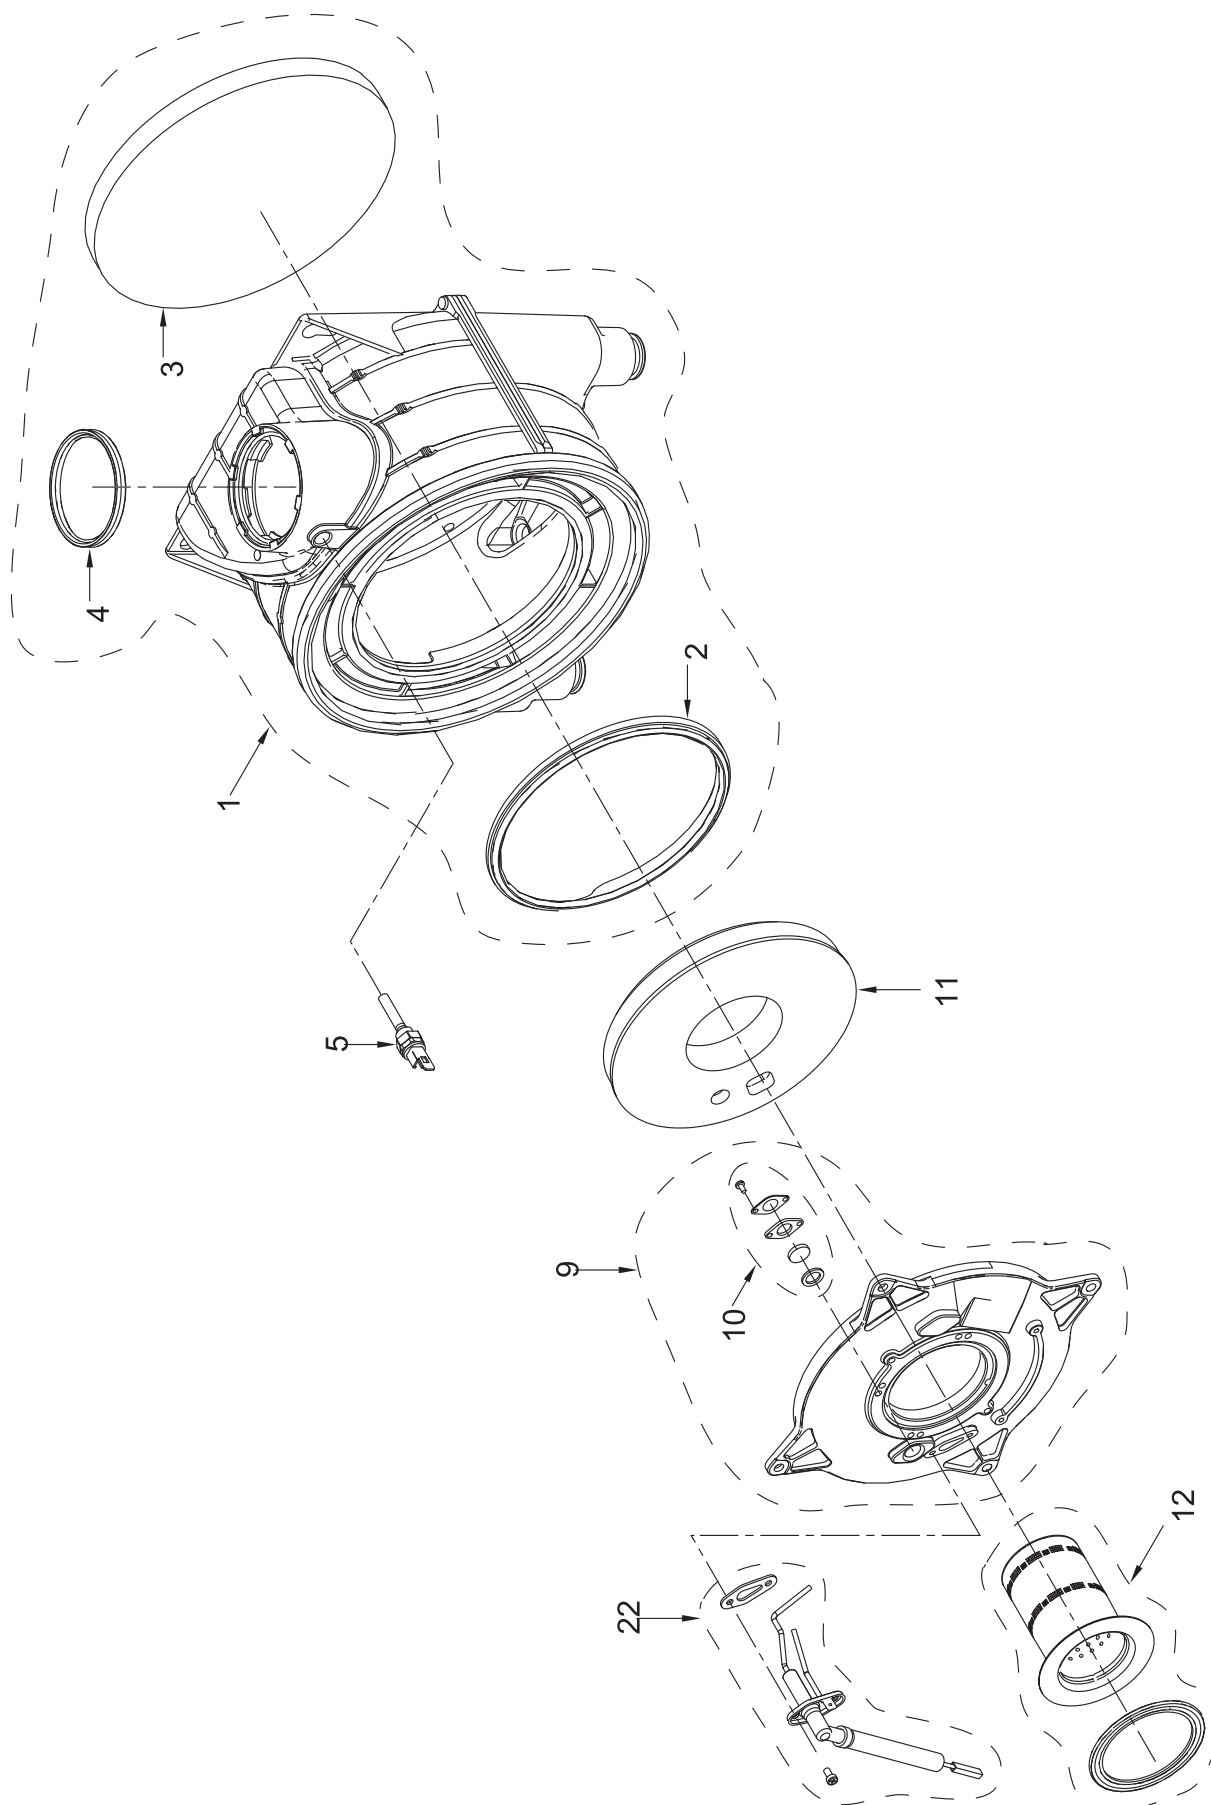

Control panel

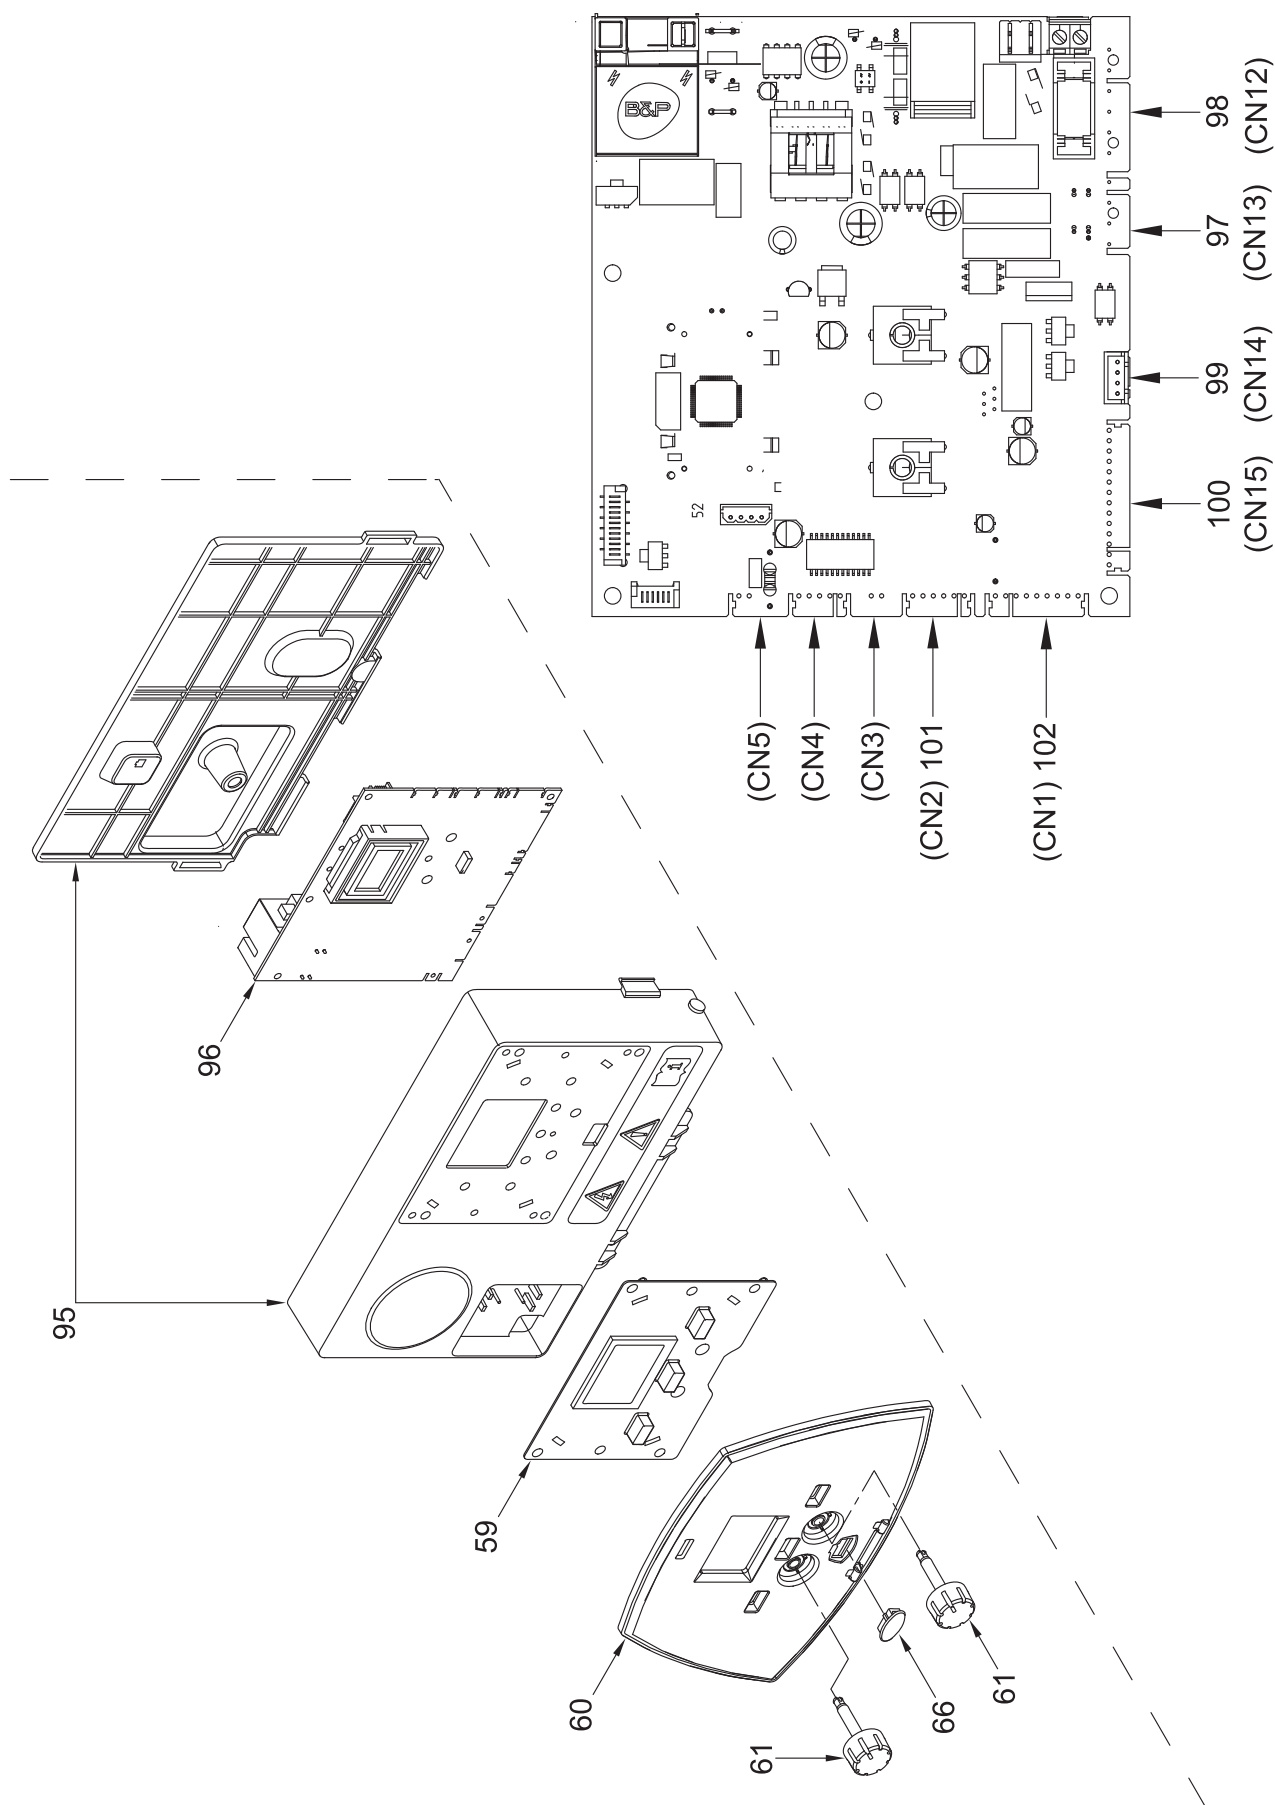

Gas valve / Air/gas duct / Fan

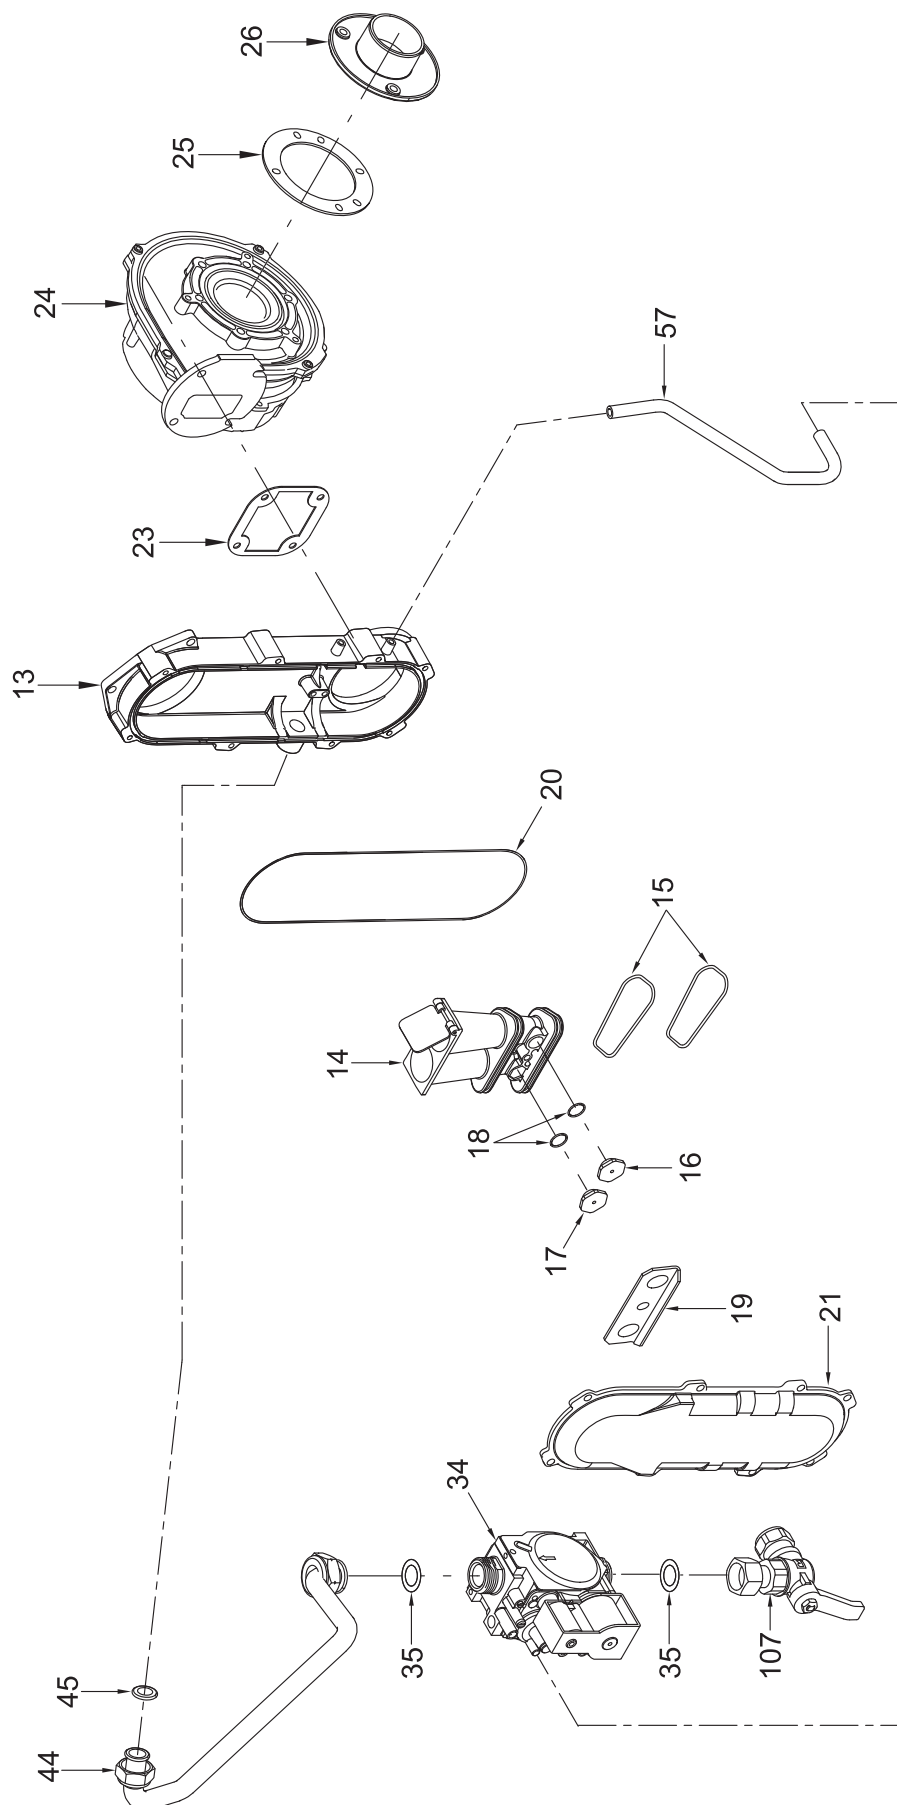

Edea 30

| Pos. | Code | Description | Advised parts |
|------|---------|---------------------------------|---------------|
| 001 | 6278971 | Heat exchanger gas-water | |
| 002 | 6326953 | Sealing | |
| 003 | 6326951 | Rear insulation + springs | |
| 004 | 6248876 | Smoke outlet gasket ø80 mm | |
| 005 | 6277130 | Probe NTC D.4X40 | A |
| 006 | 6291162 | Upper protection shield | |
| 007 | 6278706 | Smoke chamber | |
| 008 | 6248855 | P.C. inlet/outlet smokes gasket | |
| 009 | 5188364 | Main exchanger door | |
| 010 | 6211794 | Peephole kit + gasket | |
| 011 | 6269034 | Insulation | |
| 012 | 8076126 | Burner + gasket kit | |
| 013 | 6278813 | Air-gas hose lower side | |
| 014 | 5200301 | Air/gas mixer assembly | |
| 015 | 6226470 | ORing 52,07 x 2,62 | |
| 016 | 6322303 | Round nozzle Ø 3,50 | |
| 017 | 6322353 | Hexagonal nozzle Ø 4,00 | |
| 018 | 6226403 | O-ring 2031 | |
| 019 | 6267119 | Nozzle locking bracket | |
| 020 | 6226465 | O-ring Ø 183,83x2,62 | |
| 021 | 6278812 | Air-gas hose upper side | |
| 022 | 6281609 | Ignit.-ionis.electrode +gasket | A |
| 023 | 6174816 | Gasket for fan flange | |
| 024 | 6261412 | Fan | A |
| 025 | 6028703 | Gasket for duct flange | |
| 026 | 6083056 | Duct flange 50 | |
| 027 | 6273608 | Water pressure transducer | A |
| 028 | 6226639 | Spring clip | |
| 029 | 6226476 | ORing diam.15x2 | |
| 030 | 6017405 | Flexible pipe M.F. 3/8" L=300 | |
| 031 | 6226643 | Pipe fixing spring | |
| 032 | 6281716 | Hydrometer + spring | |
| 033 | 2030226 | Gasket Ø 10,2x14,8x2 | |
| 034 | 6243840 | Gas valve | A |
| 035 | 2030228 | Gasket Ø 17x24x2 | |
| 036 | 6277211 | Water trap | |
| 037 | 5171635 | Cap + gasket for water trap kit | |
| 038 | 1010215 | Rubber pipe dia. 15x2,5 | |
| 039 | 2051120 | Clamp diam. 17,3 | |
| 040 | 5183729 | Rectang. expans.vessel 9 l. 3/8 | |
| 041 | 6034155 | Condensate drainage pipe | |
| 042 | 2051122 | Clamp | |
| 043 | 2051123 | Clamp diam. | |
| 044 | 6277479 | Pipe connecting gas valve | |
| 045 | 2030255 | Gasket Ø 12,5x18,5x3 | |
| 046 | 6227561 | Flow pipe | |
| 047 | 6226412 | O-ring 3068 | |
| 048 | 6226619 | Spring for heat exchanger conne | |
| 049 | 6226601 | Spring for heat exchanger conne | |
| 050 | 6227548 | Return pipe from C.H. system | |
| 051 | 2030267 | Piracriten gasket Ø 30x17x2 | |
| 052 | 6146729 | 100°C safety stat | A |
| 053 | 6231372 | Temperature sensor | A |
| 054 | 6001174 | Air intake pipe 55 | |

| Pos. | Code | Description | Advised parts |
|------|---------|---------------------------------|---------------|
| 055 | 2051252 | Hose clamp Ø 53-57 | |
| 057 | 1010209 | Silicon pipe Ø 8x1.5 | |
| 059 | 6329900 | Rubber button | |
| 060 | 6329800 | Interface panel | |
| 061 | 6290170 | Knob Ø 20 | |
| 062 | 6304480 | casing left/right side panel | |
| 063 | 6304251 | Casing front panel | |
| 064 | 6281730 | Door for front panel | |
| 065 | 6299760 | Frame for front panel | |
| 066 | 6329960 | Rubber cap | |
| 067 | 6028665 | Smoke exhaust diaphragm | |
| 069 | 2030227 | Gasket Ø 12x18x2 | |
| 070 | 6265866 | C.H. flow manifold | |
| 071 | 6265832 | C.H. return manifold | |
| 072 | 6319692 | Kit 16 plate heat exchanger + o | |
| 073 | 6226475 | ORing diam.18,64x3,53 | |
| 074 | 6222003 | D.H.W. filter | |
| 075 | 6131440 | Flowmeter sensor | A |
| 076 | 6040225 | Pressure relief valve 1/2" 3 ba | A |
| 077 | 6281519 | Plunged sensor + gasket | A |
| 078 | 6226645 | Spring clip | |
| 079 | 6120560 | Pump nipple 3/4" | |
| 080 | 6226475 | ORing diam.18,64x3,53 | |
| 081 | 6330401 | Modulating circulating pump | |
| 082 | 6226644 | Spring clip for rotating connec | |
| 083 | 6087332 | Motor for diverting valve | A |
| 084 | 6226636 | D.H.W. elektrovalve fix.spring | |
| 085 | 6226638 | Divertor valve motor spring cli | |
| 086 | 6319644 | Flowmeter group | A |
| 087 | 6177506 | Ball cock 1/2" x 15 | |
| 088 | 6319647 | Circulateur top cover | |
| 089 | 6013182 | Automatic air vent | A |
| 091 | 6157660 | Pressure relief valve drain pip | |
| 092 | 2030228 | Gasket Ø 17x24x2 | |
| 093 | 6177505 | Ball cock 3/4" x 22 | |
| 094 | 6142330 | Quarter bend 1/2" x 15 | |
| 095 | 6304720 | Control panel | |
| 096 | 6324982 | Main P.C.B | A |
| 097 | 6329610 | 4 pole cable connector CN13 | |
| 098 | 6329477 | 6 pole cable connector CN12 | |
| 099 | 6329611 | 4 pole cable connector CN14 | |
| 100 | 6325811 | 14 pole cable connector CN15 | |
| 101 | 6329457 | 6 pole cable connector CN2 | |
| 102 | 6325671 | 9 pole cable connector CN1 | |
| 103 | 6281442 | Water rate adjuster 14 l/min | |
| 104 | 6281859 | Restraint valve + seeger ring | |
| 105 | 6319654 | Shutter group | A |
| 106 | 6319653 | External by-pass kit | A |
| 107 | 6177530 | Gas cock 3/4" F x 15 | |
| 700 | 5202587 | Complete control panel | A |
| 701 | 5185154 | L.P.G. conversion kit | |
| 702 | 5185161 | Conversion kit for natural gas | |
| 703 | 5184817 | Fitting cocks kit | |
| 704 | 6274343 | Silicone mixer flap | |

A Spare parts for minimum fittings

Edea 40

| Pos. | Code | Description | Advised parts |
|------|---------|---------------------------------|---------------|
| 001 | 6278972 | Heat exchanger gas-water | |
| 002 | 6326953 | Sealing | |
| 003 | 6326951 | Rear insulation + springs | |
| 004 | 6248876 | Smoke outlet gasket ø80 mm | |
| 005 | 6277130 | Probe NTC D.4X40 | A |
| 006 | 6291162 | Upper protection shield | |
| 007 | 6278706 | Smoke chamber | |
| 008 | 6248855 | P.C. inlet/outlet smokes gasket | |
| 009 | 5188364 | Main exchanger door | |
| 010 | 6211794 | Peephole kit + gasket | |
| 011 | 6269034 | Insulation | |
| 012 | 8076127 | Burner + gasket kit | |
| 013 | 6278813 | Air-gas hose lower side | |
| 014 | 5200312 | Air/gas mixer assembly | |
| 015 | 6226470 | ORing 52,07 x 2,62 | |
| 016 | 6322305 | Round nozzle Ø 4,0 | |
| 017 | 6322355 | Hexagonal nozzle Ø 4,50 | |
| 018 | 6226403 | O-ring 2031 | |
| 019 | 6267119 | Nozzle locking bracket | |
| 020 | 6226465 | O-ring Ø 183,83x2,62 | |
| 021 | 6278812 | Air-gas hose upper side | |
| 022 | 6281609 | Ignit.-ionis.electrode +gasket | A |
| 023 | 6174816 | Gasket for fan flange | |
| 024 | 6261405 | Fan | A |
| 025 | 6028703 | Gasket for duct flange | |
| 026 | 6083056 | Duct flange 50 | |
| 027 | 6273608 | Water pressure transducer | A |
| 028 | 6226639 | Spring clip | |
| 029 | 6226476 | ORing diam.15x2 | |
| 030 | 6017405 | Flexible pipe M.F. 3/8" L=300 | |
| 031 | 6226643 | Pipe fixing spring | |
| 032 | 6281716 | Hydrometer + spring | |
| 033 | 2030226 | Gasket Ø 10,2x14,8x2 | |
| 034 | 6243840 | Gas valve | A |
| 035 | 2030228 | Gasket Ø 17x24x2 | |
| 036 | 6277211 | Water trap | |
| 037 | 5171635 | Cap + gasket for water trap kit | |
| 038 | 1010215 | Rubber pipe dia. 15x2,5 | |
| 039 | 2051120 | Clamp diam. 17,3 | |
| 040 | 5183730 | Rectang. expansion vessel L.10 | |
| 041 | 6034155 | Condensate drainage pipe | |
| 042 | 2051122 | Clamp | |
| 043 | 2051123 | Clamp diam. | |
| 044 | 6277479 | Pipe connecting gas valve | |
| 045 | 2030255 | Gasket Ø 12,5x18,5x3 | |
| 046 | 6227561 | Flow pipe | |
| 047 | 6226412 | O-ring 3068 | |
| 048 | 6226619 | Spring for heat exchanger conne | |
| 049 | 6226601 | Spring for heat exchanger conne | |
| 050 | 6227548 | Return pipe from C.H. system | |
| 051 | 2030267 | Piracriten gasket Ø 30x17x2 | |
| 052 | 6146729 | 100°C safety stat | A |
| 053 | 6231372 | Temperature sensor | A |
| 054 | 6001174 | Air intake pipe 55 | |

| Pos. | Code | Description | Advised parts |
|------|---------|---------------------------------|---------------|
| 055 | 2051252 | Hose clamp Ø 53-57 | |
| 057 | 1010209 | Silicon pipe Ø 8x1.5 | |
| 059 | 6329900 | Rubber button | |
| 060 | 6329800 | Interface panel | |
| 061 | 6290170 | Knob Ø 20 | |
| 062 | 6304480 | casing left/right side panel | |
| 063 | 6304251 | Casing front panel | |
| 064 | 6281730 | Door for front panel | |
| 065 | 6299760 | Frame for front panel | |
| 066 | 6329960 | Rubber cap | |
| 067 | 6028663 | Smoke exhaust diaphragm D.34 | |
| 069 | 2030227 | Gasket Ø 12x18x2 | |
| 070 | 6265866 | C.H. flow manifold | |
| 071 | 6265834 | C.H. return manifold | |
| 072 | 6319693 | Kit 18 plate heat exchanger + o | |
| 073 | 6226475 | ORing diam.18,64x3,53 | |
| 074 | 6222003 | D.H.W. filter | |
| 075 | 6131440 | Flowmeter sensor | A |
| 076 | 6040225 | Pressure relief valve 1/2" 3 ba | A |
| 077 | 6281519 | Plunged sensor + gasket | A |
| 078 | 6226645 | Spring clip | |
| 079 | 6120560 | Pump nipple 3/4" | |
| 080 | 6226475 | ORing diam.18,64x3,53 | |
| 081 | 6330401 | Modulating circulating pump | |
| 082 | 6226644 | Spring clip for rotating connec | |
| 083 | 6087332 | Motor for diverting valve | A |
| 084 | 6226636 | D.H.W. elektrovalve fix.spring | |
| 085 | 6226638 | Divertor valve motor spring cli | |
| 086 | 6319644 | Flowmeter group | A |
| 087 | 6177506 | Ball cock 1/2" x 15 | |
| 088 | 6319647 | Circulateur top cover | |
| 089 | 6013182 | Automatic air vent | A |
| 091 | 6157660 | Pressure relief valve drain pip | |
| 092 | 2030228 | Gasket Ø 17x24x2 | |
| 093 | 6177505 | Ball cock 3/4" x 22 | |
| 094 | 6142330 | Quarter bend 1/2" x 15 | |
| 095 | 6304720 | Control panel | |
| 096 | 6324982 | Main P.C.B | A |
| 097 | 6329610 | 4 pole cable connector CN13 | |
| 098 | 6329477 | 6 pole cable connector CN12 | |
| 099 | 6329611 | 4 pole cable connector CN14 | |
| 100 | 6325811 | 14 pole cable connector CN15 | |
| 101 | 6329457 | 6 pole cable connector CN2 | |
| 102 | 6325671 | 9 pole cable connector CN1 | |
| 103 | 6281444 | Water rate adjuster 18 l/min | |
| 104 | 6281859 | Restraint valve + seeger ring | |
| 105 | 6319654 | Shutter group | A |
| 106 | 6319653 | External by-pass kit | A |
| 107 | 6177530 | Gas cock 3/4" F x 15 | |
| 700 | 5202587 | Complete control panel | A |
| 701 | 5185156 | L.P.G. conversion kit | |
| 702 | 5185163 | Conversion kit for natural gas | |
| 703 | 5184817 | Fitting cocks kit | |
| 704 | 6274343 | Silicone mixer flap | |

A Spare parts for minimum fittings

Manufacturer's Instructions

The latest manufacturer's instructions shall be followed for the correct connection of the condensate discharge pipe from the boiler as this may vary due to the design of the boiler. For example, a trap is not required in the condensate discharge pipework if there is a trap with a minimum condensate seal of 75 mm incorporated into the boiler.

Internal Condensate Pipe Discharge Termination

Internal condensate discharge pipework shall be a minimum of 19mm ID (typically 22mm OD) plastic pipe or as per manufacturer's instructions and this should "fall" a minimum of 45mm per metre away from the boiler, taking the shortest practicable route to the termination point.

(45mm as per BS6798, 52mm per metre as per industry practice is specified in the following diagrams)


To minimise the risk of freezing during prolonged sub-zero conditions, an internal "gravity discharge point" such as an internal soil stack (preferred method), internal kitchen, utility room or bathroom waste pipe e.g. from a sink, basin, bath or shower shall be adopted, where possible.

Note - Use a suitable permanent connection to the foul waste pipe. Figures 1, 2(a), 2(b) show appropriate connection methods.

Manufacturers Instructions shall be referred to when installing boiler condensate discharge pipes

November 2023 Issue 3.0

Figure 1 – Connection of condensate discharge pipe to internal soil and vent stack.
Note – Refer to manufacturer's instructions.

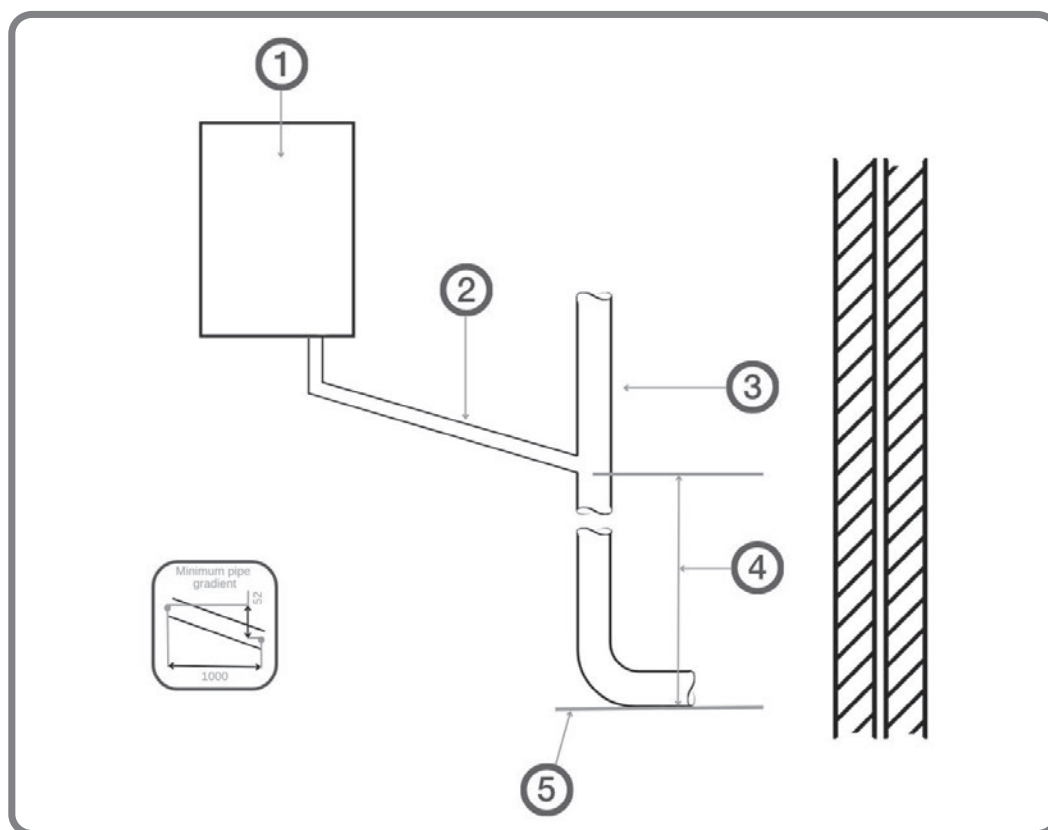


Key

- 1 Boiler
- 2 Minimum internal diameter 19mm
- 3 Soil and vent stack
- 4 450 mm minimum up to three storeys
- 5 Invert

Internal Condensate Pipe Connection with External Termination

Figure 2(a) – Connection of a condensate discharge pipe downstream of a sink, basin, bath or shower waste trap.

Note – Check manufacturer's instructions to see if an air break or trap is required.

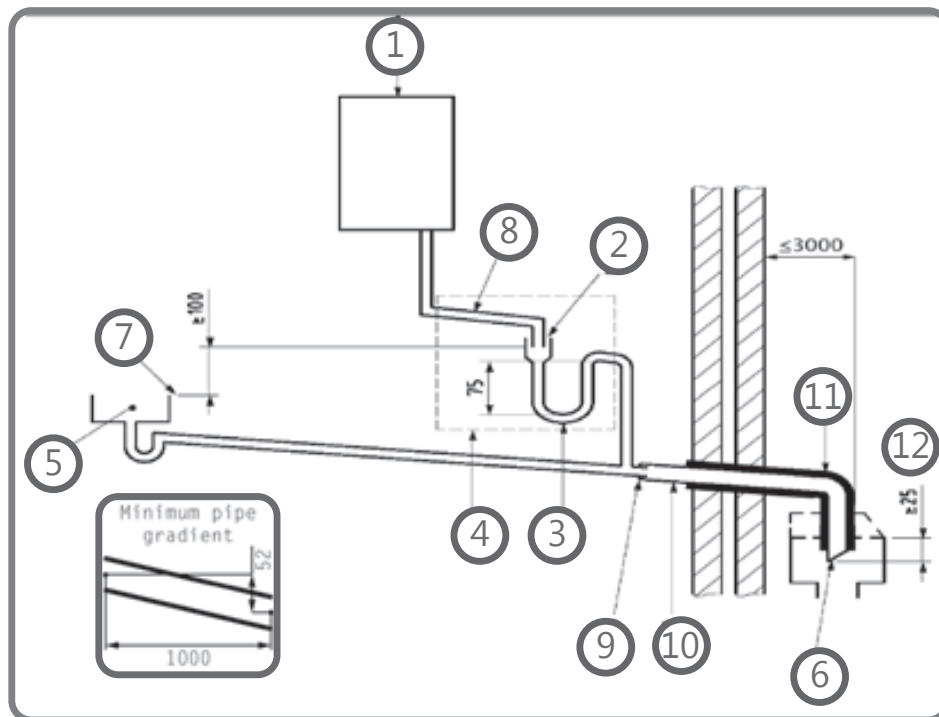

Key

- 1 Boiler
- 2 Visible air break
- 3 75 mm trap
- 4 Visible air break and trap not required if there is a trap with a minimum condensate seal of 75 mm incorporated into the boiler. In this case the 100 mm is measured to the trap in the boiler.
- 5 Sink, basin, bath or shower
- 6 Open end of condensate discharge pipe direct into gully 25 mm min below grating but above water level; end cut at 45 °


Note – the maximum external condensate discharge length is 3 metres

- 7 Sink lip
- 8 Minimum internal diameter 19 mm
- 9 Pipe size transition
- 10 Minimum internal diameter 30 mm taken to the outside
- 11 UV resistant, Water/weather proof insulation
- 12 Drain cover/leaf guard

Manufacturers Instructions shall be referred to when installing boiler condensate discharge pipes

Internal Condensate Pipe Connection with External Termination

Figure 2(b) – Connection of a condensate discharge pipe downstream of a sink, basin, bath or shower waste trap

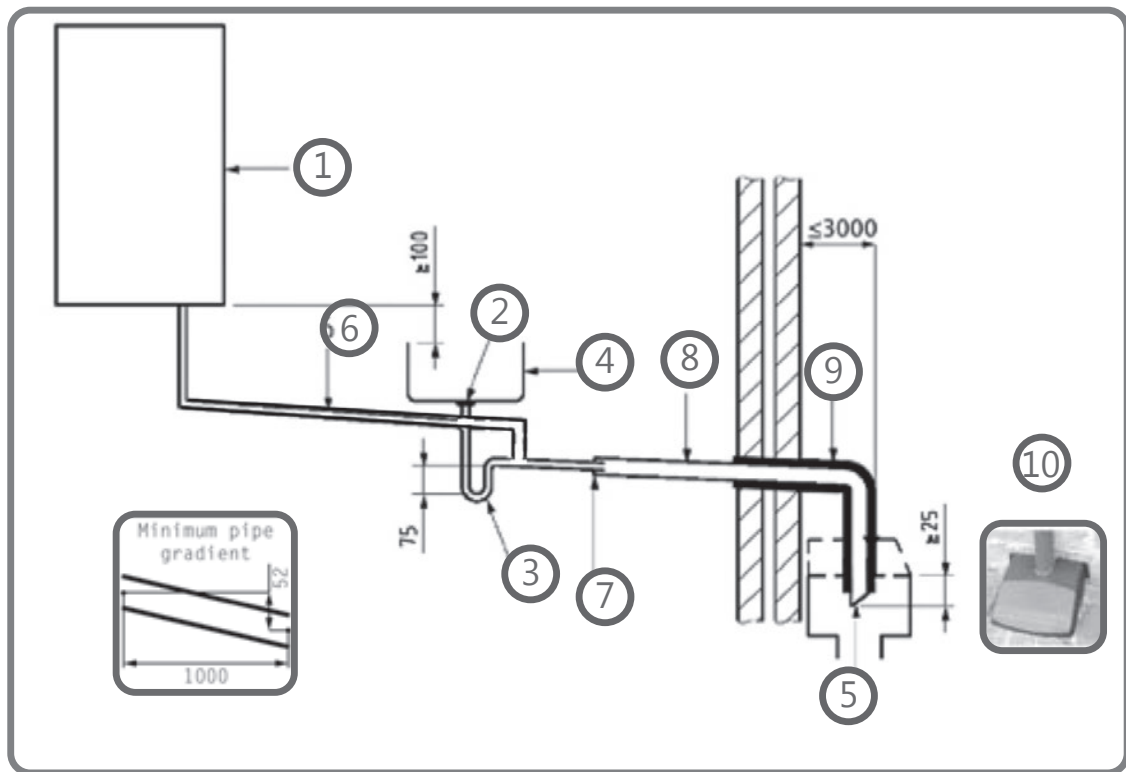

Key

- 1 Boiler
- 2 Visible air break at plug hole –
- 3 75 mm sink, basin, bath or shower waste trap
- 4 Sink, basin, bath or shower with integral overflow
- 5 Open end of condensate discharge pipe direct into gully 25 mm min below grating but above water level; end cut at 45 °
- Note – the maximum external condensate discharge length is 3 metres
- 6 Minimum internal diameter 19 mm
- 7 Pipe size transition
- 8 Minimum internal diameter 30 mm taken to the outside
- 9 UV resistant, Water/weather proof insulation
- 10 Fit drain cover/leaf guard

Internal Condensate Pipe Discharge Termination

When connecting to existing pipework it is critical to review the existing installation to ensure the existing pipework is appropriate for condensate discharge having been run correctly and fully insulated and sealed if this is an external or internal termination.

The possibility of waste pipes freezing downstream of the connection point shall be considered when determining a suitable connection point - e.g. a slightly longer pipe run to an internal soil stack may be preferable to a shorter run discharging directly through the wall to an external drain.

Note - Where "gravity discharge" to an internal termination is not physically possible (e.g. the discharge point is above the appliance location, or access is obstructed by a doorway), or where very long internal pipe runs would be required to reach a suitable discharge point, then a condensate pump shall be used.

External waste pipework shall be:

- Only used to take the condensate waste away and no other waste must be connected to keep the pipework free from restrictions or blockages
- Insulated with waterproof UV resistant material.
- All joints sealed correctly stopping water getting between the insulation and waste pipe
- Terminated below the grid but above the water line and a drain/leaf guard fitted.
- Cut at 45 degrees where it terminates into the grid and insulated to the tip of the pipe.
- A minimum thickness of 13mm insulation is recommended for minimum 32mm OD solvent pipe work and fittings
- Where the insulation passes through the wall with a flexible seal for expansion and contraction is required, to stop any moisture getting between the insulation and waste pipe. This also stops any moisture penetrating through the wall, providing seal supporting energy efficiency



Condensate Pump

Use of a Condensate Pump to an Internal Termination

Condensate can be removed using a proprietary condensate pump, of a specification recommended by the boiler or pump manufacturer. In order to minimise the risk of freezing during prolonged sub-zero spells, the preferred method is internal to the property for terminating the boiler condensate pump to a foul water discharge point should be adopted such as an internal soil stack (preferred method) All waste pipework must be as vertical as possible to take condensate water as fast and as hot as possible to the internal soil stack Any waste pipework being fitted in an unheated area must be enlarged to 32mm OD, insulated and sealed correctly (solvent weld pipe and fitting). UV is not required as fitted internally

Manufacturers Instructions shall be referred to when installing boiler condensate discharge pipes

November 2023 Issue 3.0

External Connections

External Connections

Only fit a correctly insulated external boiler condensate drain connection if an internal gravity or pumped connection is **impractical** to install.

The pipe work from the boiler shall be of a minimum 19mm ID or if in an unheated area increased to 30mm ID (typically 32mm OD) solvent weld of as per manufacturer's instructions and the condensate discharge pipe shall be run in a standard drainpipe material, e.g. poly (vinyl chloride) (PVC), un-plasticized poly (vinyl chloride) (PVC-U), acrylonitrile butadiene-styrene (ABS), polypropylene (PP) or chlorinated poly (vinyl chloride) (PVC-C).


Note - Fixing centres for brackets should be a maximum of 300mm for flexible pipe and 500mm for solid pipe and manufacturer's recommendations should be followed.

The condensate pipe should be run internally as far as possible before going externally and the pipe diameter shall be increased to a minimum of 30mm ID (typically 32mm OD) if not already, if in an unheated, area before it passes through the wall. The angle of the pipe shall slope downwards by at least 3 degrees as it passes through the wall to assist in maintaining a good velocity as the condensate exits the building.

The external pipe run shall be kept as short as possible to a maximum of 3 metres, taking the most direct and "most vertical" route to the discharge point, with no horizontal sections in which condensate might collect. The external condensate and pipework inside the cavity wall must be insulated to manufacturers instructions

External Connections

Figure 3 – Connection of condensate discharge pipe to external soil and vent stack

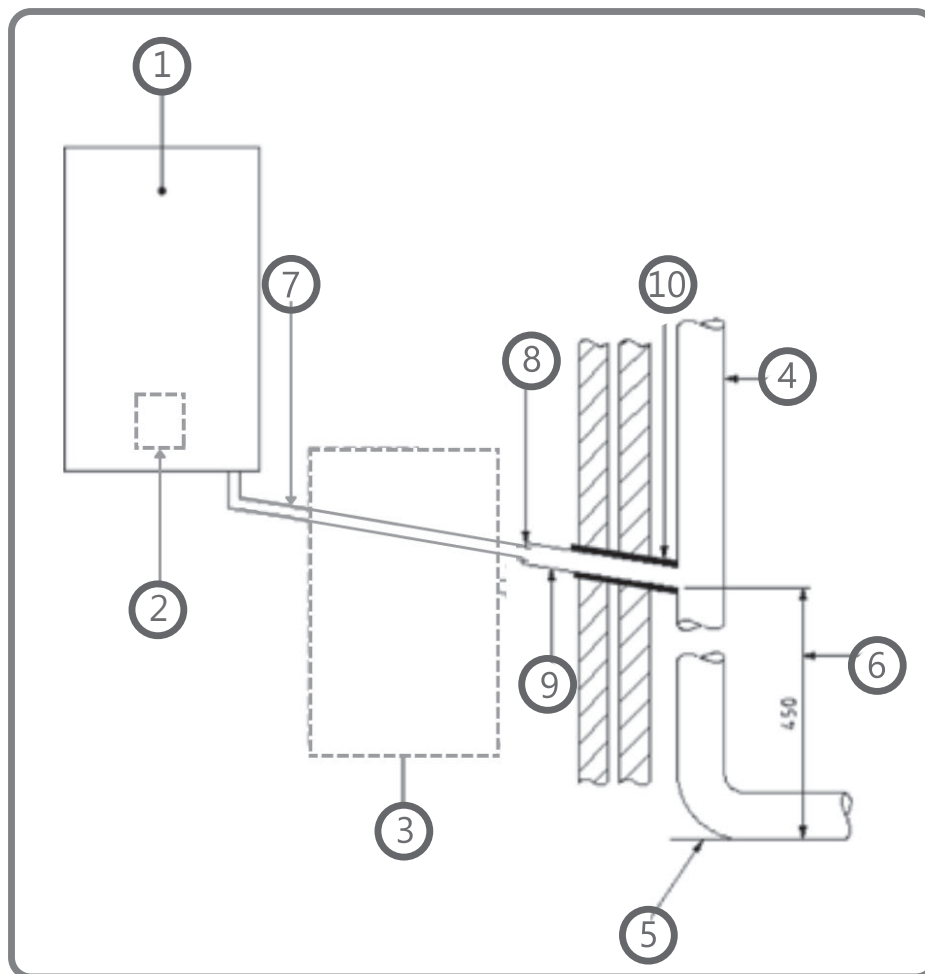

Key

- 1 Boiler
- 2 Internal Trap
- 3 Visible air break and trap not required if there is a trap with a minimum condensate seal of 75mm incorporated into the boiler.
- 4 Soil and vent stack
- 5 Invert
- 6 450mm minimum up to three storeys
- 7 Minimum internal diameter 19 mm
- 8 Pipe size transition point
- 9 Minimum internal diameter 30mm taken to the outside
- 10 UV Resistant, Water/weather proof insulation

Manufacturers Instructions shall be referred to when installing boiler condensate discharge pipes

November 2023 Issue 3.0

External Connections

Connecting to a rain water downpipe/External Soil Stack

When a rain water downpipe is used as the termination (NB only permissible if this downpipe passes to a combined foul and rainwater drainage system) an external air break shall be installed between the condensate discharge pipe and the downpipe to avoid reverse flow of rainwater into the boiler should the downpipe itself become blocked, flooded or frozen.

Figure 4 shows a suitable connection method. Pipe insulation should be fitted.

External Termination of the Condensate Pipe


Where the condensate discharge pipe is terminated over an open foul drain or gully, the pipe should terminate below the grating level, but above water level, in order to minimise “wind chill” at the open end. Pipe drainage and resistance to freezing will be improved if the termination end of the condensate pipe is cut at 45 degrees as opposed to a



The use of a drain cover (such as those used to prevent blockage by leaves) shall be fitted to offer further protection from wind chill. Figure 4 (following page) shows a suitable connection method. Where the condensate drain pipe terminates in a purpose-designed soakaway any above-ground section of condensate discharge pipe should be run and insulated as described above. Figure 6 (following page)


External Connections

Figure 4 – External termination to rainwater downpipe (NB only combined foul/rainwater drain)

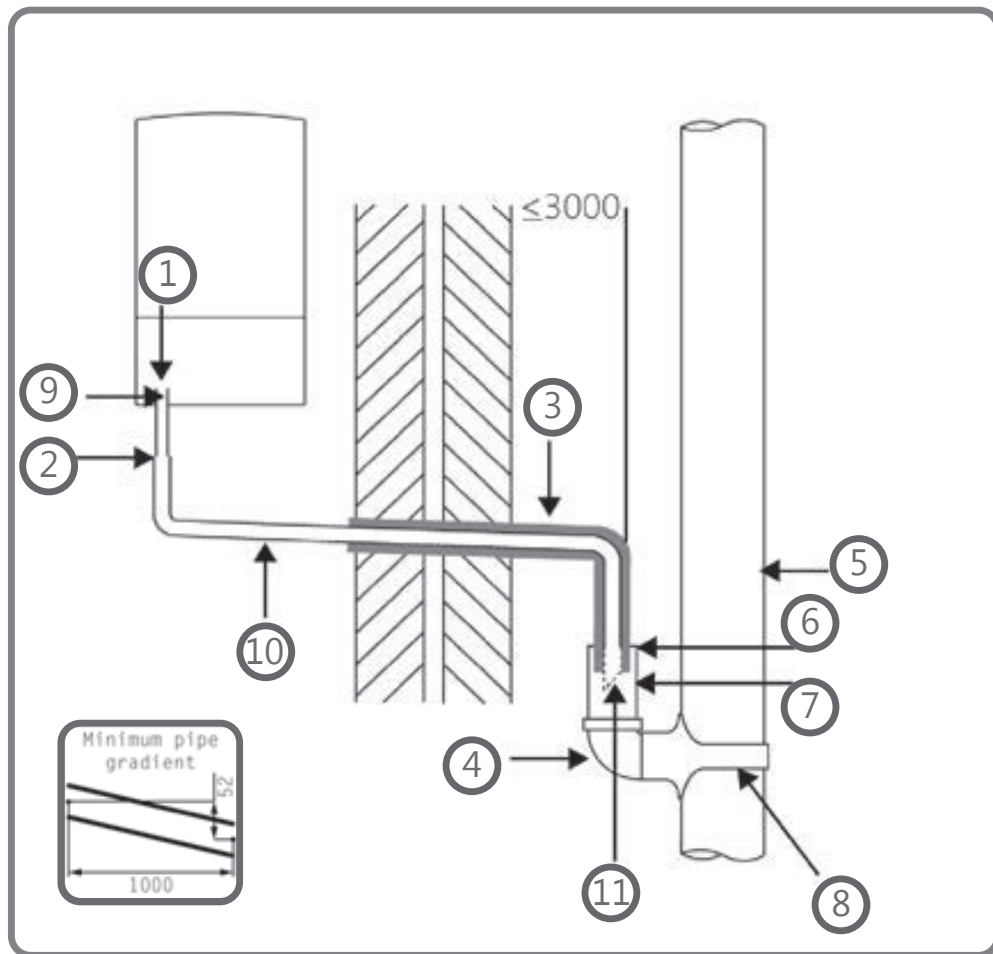

Key

- 1 Condensate discharge pipe from boiler
- 2 Pipe size transition point
- 3 Water/weather proof, UV resistant insulation
- 4 43mm 90° male/female bend
- 5 External rain water pipe into foul water
- 6 External air break
- 7 Air gap
- 8 68mm PVC strapon fitting
- 9 Minimum internal diameter 19mm
- 10 Minimum external diameter 30mm and through the wall
- 11 End cut at 45°

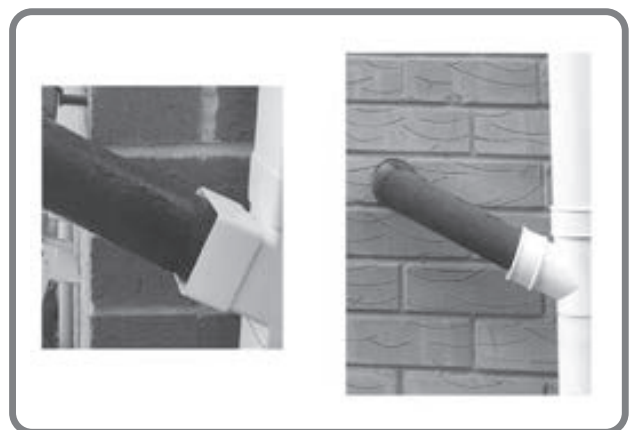


Manufacturers Instructions shall be referred to when installing boiler condensate discharge pipes

November 2023 Issue 3.0

External Connections

Figure 5 – Preferred Method: External drain, gully or rainwater hopper

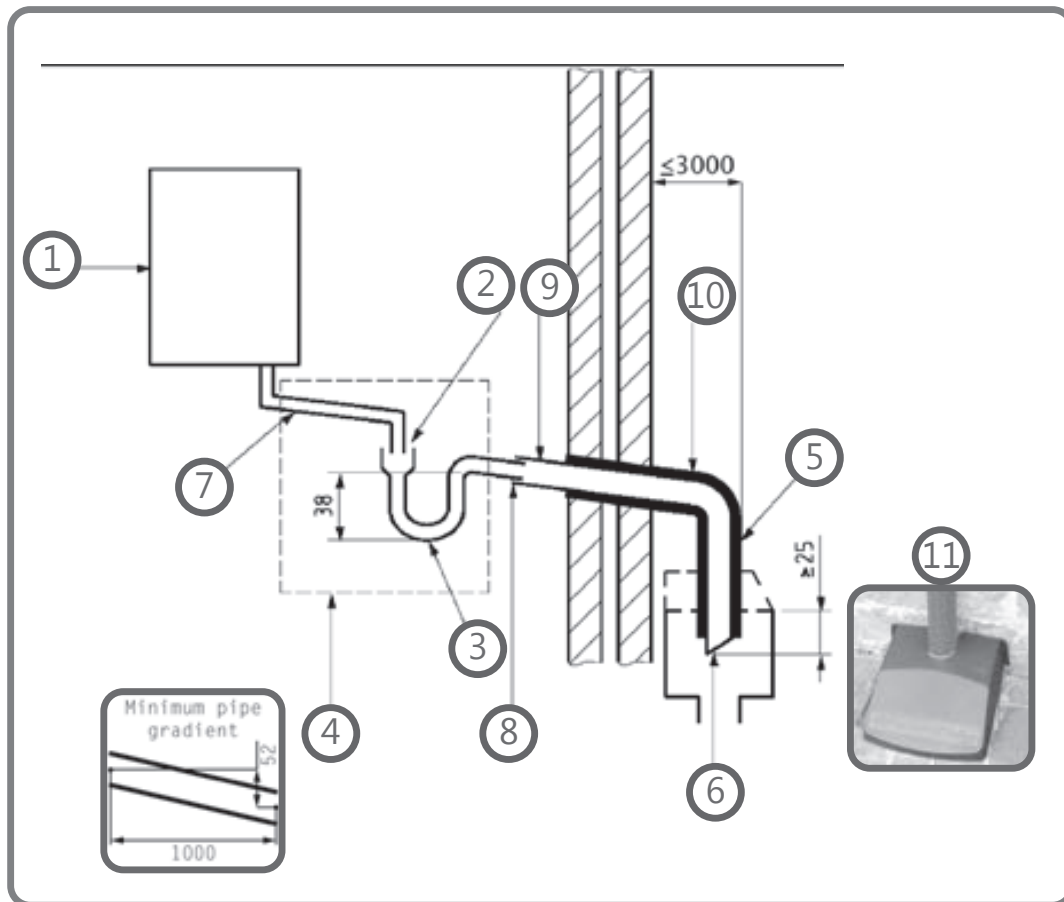


Key

- 1 Boiler
- 2 Visible air break
- 3 38mm minimum trap
- 4 Visible air break and trap not required if there is a trap with a minimum condensate seal of 38 mm incorporated into the boiler – refer to manufacturer's instructions
- 5 External length of pipe 3 m maximum
- 6 Open end of condensate discharge pipe direct into gully 25 mm min below grating but above water level; end cut at 45 °
- 7 Minimum internal diameter 19mm increased to a min of 30mm ID (typically 32mm OD) in an unheated area
- 8 Pipe size transition point
- 9 Minimum internal diameter 30mm to the outside
- 10 Water/weather proof and UV resistant insulation
- 11 Fit drain cover/leaf guard

External Connections

Figure 6 – Example of a purpose made soakaway

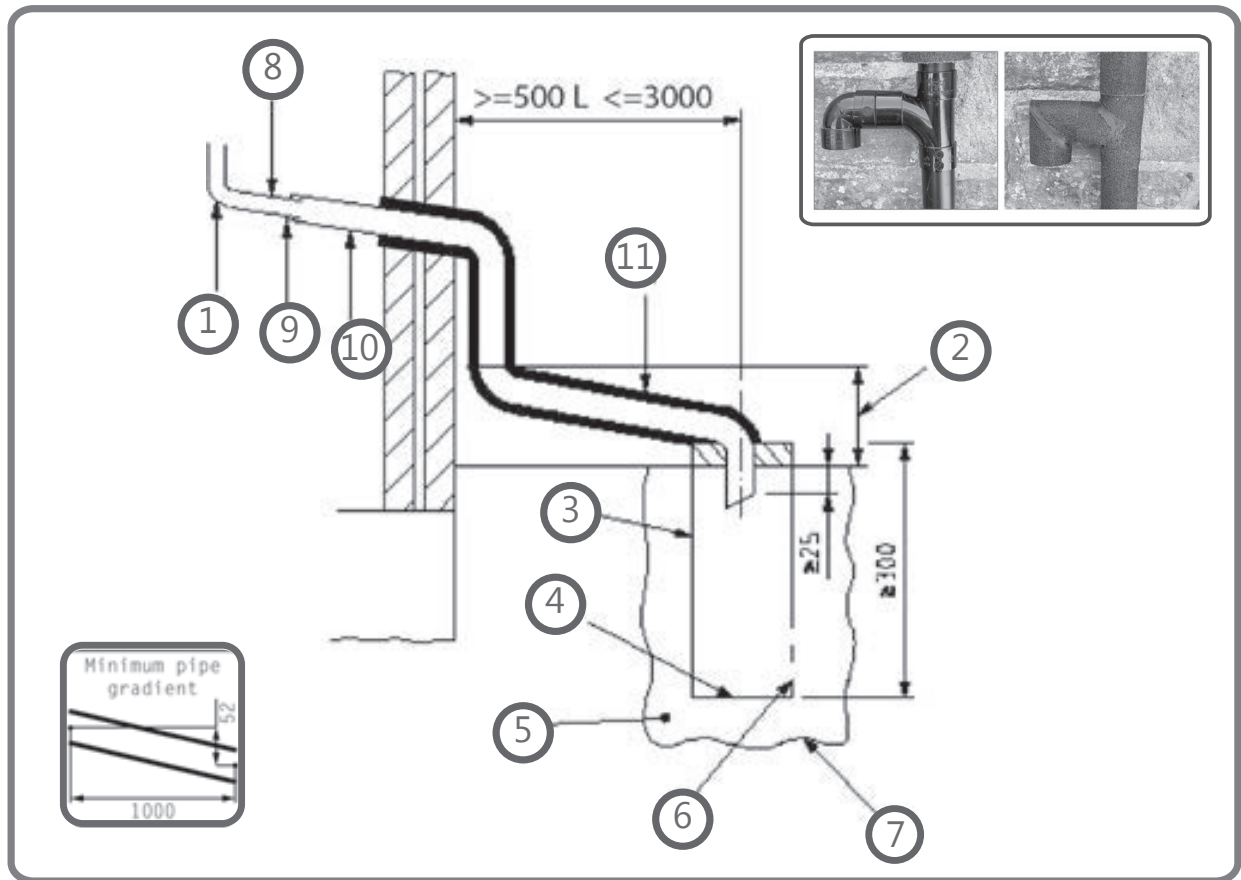

Key

- 1 Condensate discharge pipe from boiler
- 2 Ground (this section of the condensate discharge pipe may be run either above or below round level); End cut at 45°
- 3 Diameter 100 mm minimum plastic tube
- 4 Bottom of tube sealed
- 5 Limestone chippings
- 6 Two rows of three 12 mm holes at 25 mm centres, 50 mm from bottom of tube and facing away from house
- 7 Hole depth 400 mm minimum by 300 mm diameter
- 8 Minimum internal diameter 19 mm
- 9 Pipe size transition point
- 10 Minimum external diameter 30 mm
- 11 Water/weather proof and UV resistant insulation

Manufacturers Instructions shall be referred to when installing boiler condensate discharge pipes

November 2023 Issue 3.0

Other considerations

Unheated Areas in Buildings

Internal condensate drainage pipes run in unheated areas such as lofts, basements and garages shall be treated as external connections and insulated accordingly. Weather proof materials may not be necessary but where separate sections of insulation join together, including elbow joints then these should be connected, insulated and sealed correctly to prevent them coming apart with a suitable material to help prevent freezing.

Insulation Materials

Insulation used for external condensate pipes, shall have an outer coating that is weather proof, and UV resistant. Use a minimum of 13mm thick insulation for 32mm external pipes. Ensure all pipework is insulated and sealed correctly

Use of Air Breaks In Condensate Discharge Pipes

Heating engineers should follow manufacturer's instructions on the use of air breaks in condensate discharge pipes. An air break is normally required for both rainwater and soak away connections. Refer to manufacturer's instructions for further details on for air break requirements.

Soakaway

If a soakaway is the only alternative to discharge the condensate an external insulated and sealed air break is required. This will allow water to be discharged from the condensate pipe should the soakaway become saturated, and will allow the boiler to continue to operate. Note: If water is discharged from this 'overflow', then increasing the volume of the soakaway pit should be considered.



Alternative Solutions

Cold weather protection

Cold weather protection methods approved or endorsed by boiler manufacturers and/or service organisations may be adopted if these are considered suitable by the parties involved. It is the responsibility of the manufacturer of these products to ensure they have completed the necessary testing or calculations to ensure the product offers suitable protection to prevent the condensate pipe from freezing. The product manufacturer should provide information as to what level of external temperature and for what time period the product can protect against sub-zero temperatures, i.e. -15°C for 48 hours.

Electric Trace Heating

Trace heating with an external thermostat can be fitted to the external condensate pipe to raise the temperature of the condensate pipe in freezing conditions. Trace heating takes the form of an electrical heating element run in physical contact along the length of the condensate pipe. The pipe still needs to be insulated and sealed correctly to retain heat losses from the pipe. Heat generated by the element then maintains the temperature of the pipe. If such a system is used then the installation instructions of the trace heating manufacturer and any specific recommendations regarding pipe diameter, insulation, etc. should be followed. All other relevant guidance on condensate discharge pipe installation should also be followed.

Auxiliary Syphon – Fitted Internally

Auxiliary siphons fitted inside the premises assist with the siting of the boiler where an external condensate pipe must be fitted. The storage capacity of the auxiliary siphon increases the volume of condensate discharge reducing the risk of freezing. A further reduction in the potential for the pipe to freeze is achieved when combined with the external insulation requirements and sealing correctly. The aim is to keep the condensate discharge running as fast and as hot as possible, this heats the waste pipe and prevents freezing.

Manufacturers Instructions shall be referred to when installing boiler condensate discharge pipes

November 2023 Issue 3.0

Annex A

Note – Annex A details remedial actions for householders which can be taken if a condensate discharge pipe freezes. This may result in requests for alteration to condensate discharge pipework, in which case the guidance above should be followed.

Frozen Condensate Information Leaflet –Our customer information guide on frozen boiler condensate discharge is also available for download. It includes a condensate assessment form, for engineers to complete and advice to customers during extreme cold weather conditions. www.hhic.org.uk/resources.

Dear Householder,

Your heating engineer has noted that your boiler condensate discharge pipe may be at risk of freezing in prolonged, and extreme cold weather conditions. In recent years we have seen temperatures as low as -20*c in some parts of the UK.

The concern is that your pipe runs externally or in an unheated space for at least some of its length and is liable to freeze in these extreme temperatures as it is not installed in line with the latest guidance, to help guard against freezing. If your pipe freezes, it will cause your boiler to go into “shut off” at a time when you need your heating and hot water the most.

Your heating engineer will advise you on the solutions available to reduce the risk of your pipe freezing, including running the discharge pipe to an internal drainage point (the preferred method if you have an internal soil stack), or installing one of the available products designed to give you added protection against freezing conditions. They will also clearly identify the external condensate discharge pipe for your future reference and may apply an identification label or tape.

Annex A

Your Engineer has identified the potential for your boiler to freeze in extreme conditions as the following:

| Risk category | Explanation | Engineer selection |
|---------------|---|--------------------------|
| RED | High risk of freezing- TAKE ACTION | <input type="checkbox"/> |
| AMBER | Medium risk of freezing- Strongly advise action to be taken | <input type="checkbox"/> |
| GREEN | Low risk but some improvement required | <input type="checkbox"/> |

Work required:

Name: _____

Company: _____

Telephone: _____

Email: _____

Manufacturers Instructions shall be referred to when installing boiler condensate discharge pipes

November 2023 Issue 3.0

Annex A

Thawing Frozen Condensate Pipes

Below is an explanation of what you would need to do to resolve the problem in the event that the pipe was to freeze. We would highly recommend getting a professional to assess the situation and resolve the problem by upgrading the condensate. If you do try to unfreeze your condensate, please take care as there are risks due to the related weather conditions.

1. Locate the blockage

The Condensate discharge pipe usually freezes at the most exposed points outside, such as the open end of the pipe, at a bend or elbow, or where there is a dip in the pipe where condensate can collect. (If the condensate has no insulation there may be an extensive frozen area)

2. Thaw the Frozen Pipe

The Condensate can be thawed in a number of ways. By applying a hot water bottle, a microwaveable heat packs around the blockage or by pouring warm water onto the pipe. Do not use boiling water. Do not use water if your condensate discharge pipe is not easily reached from ground level, Do not put yourself at any undue risk. Seek assistance and engage a professional heating engineer. Be aware that if you are pouring water onto the pipe this can also quickly freeze on the ground, causing a slip hazard.

3. Reset/ Restart the boiler

Once the frozen blockage has been cleared, the boiler will usually need to be reset, and advice on how to do this can be found in the user instructions manual for your boiler. Normally this will involve simply pressing a reset button on the front of the boiler, or in some cases by isolating the electrical supply to the boiler and switching it back on

11 APPENDIX 2

FLOWCHART FOR CO AND COMBUSTION RATIO CHECK ON COMMISSIONING A CONDENSING BOILER

PRIOR TO CO AND COMBUSTION RATIO CHECK

The installation instructions should have been followed, gas type verified and gas supply pressure/rate checked as required prior to commissioning.

As part of the installation process, **ESPECIALLY WHERE A FLUE HAS BEEN FITTED BY PERSONS OTHER THAN THE BOILER INSTALLER**, visually check the integrity of the whole flue system to confirm that all components are correctly assembled, fixed and supported. Check that manufacturer's maximum flue lengths have not been exceeded and all guidance has been followed (e.g. Gas Safe Technical Bulletin TB008).

The flue gas analyser should be of the correct type, as specified by BS 7967

Prior to its use, the flue gas analyser should have been maintained and calibrated as specified by the manufacturer. The installer must have the relevant competence for use of the analyser.

Check and zero the analyser IN FRESH AIR as per analyser manufacturer's instructions.

NOTE

the air gas ratio valve is factory-set and must not be adjusted **DURING COMMISSIONING** unless this action is recommended after discussions with SIME LTD.

If any such adjustment is recommended and further checking of the boiler is required the installer/service engineer must be competent to carry out this work and to use the flue gas analyser accordingly.

If the boiler requires conversion to operate with a different gas family (e.g. conversion from natural gas to LPG) separate guidance will be provided by the boiler manufacturer and must be followed.

VERIFY FLUE INTEGRITY

Analysers readings indicate that combustion products and inlet air must be mixing. Further investigation of the flue is therefore required.

Check that flue components are assembled, fixed and supported as per boiler/flue manufacturer's instructions.

Check that flue and flue terminal are not obstructed.

Is O₂ less than or equal to 20.6% and CO₂ less than 0.2%

YES

NO

Turn off appliance and call SIME LTD Technical Helpline for advice.

the appliance must not be commissioned or used, until problems are identified and resolved.

Check all seals around the appliance burner; internal flue seals, door and case seals. Rectify where necessary.

Is CO less than 350ppm AND CO/CO₂ ratio less than 0.004

YES

NO

Turn off appliance and call SIME LTD Technical Helpline for advice.

the appliance must not be commissioned or used until problems are identified and resolved.

NOTE

Check and record CO and combustion ratio at both maximum AND minimum rate before contacting SIME LTD.

SET BOILER TO MAXIMUM RATE

Set the boiler to operate at maximum rate (full load condition). Allow sufficient time for combustion to stabilise.

NOTE - Do not insert analyser probe during this period to avoid possible "flooding" of sensor.

CARRY OUT FLUE INTEGRITY CHECK USING ANALYSER

Insert analyser probe into the air inlet test point and allow readings to stabilise.

NOTE - The flue must always be installed with flue test point. This will be located within the first piece connected to the boiler.

Is O₂ less than or equal to 20.6% and CO₂ less than 0.2%

NO

YES

CHECK CO AND COMBUSTION RATIO AT MAXIMUM RATE

With boiler still set at maximum rate, insert analyser probe into flue gas sampling point. Allow readings to stabilise before recording.

Is CO less than 350ppm AND CO/CO₂ ratio less than 0.004

NO

YES

SET BOILER TO MINIMUM RATE

In accordance with boiler instructions, set boiler to operate at minimum rate (to minimum load condition). Allow sufficient time for combustion to stabilise.

NOTE: If manufacturer's instructions do not specify how to set boiler to minimum rate contact Technical Helpline for advice.

CHECK CO AND COMBUSTION RATIO AT MINIMUM RATE

With boiler set at minimum rate, insert analyser probe into flue gas sampling point. Allow readings to stabilise before recording.

NOTE - if no flue gas sampling point is present and the correct procedure is not specified in the manual, contact SIME LTD Technical Helpline for advice.

Is CO less than 350ppm AND CO/CO₂ ratio less than 0.004

NO

YES






BOILER IS OPERATING SATISFACTORILY
no further actions required

Ensure test points are capped, boiler case is correctly replaced and all other commissioning procedures are completed.

Complete Benchmark Checklist, recording CO and combustion ratio readings as required.

12 ANNEXES

12.1 Boiler product board

|  | | |
|--|---|---|
| EDEA | 30 | 40 |
| D.H.W load profile declared | XL | XXL |
| C.H. energy efficiency class |  |  |
| D.H.W. energy efficiency class |  |  |
| Heat output (kW) | 25 | 34 |
| C.H. annual energy consumption (GJ) | 42 | 60 |
| D.H.W. annual combustible consumption (GJ) | 17 | 22 |
| C.H. seasonal energy efficiency (%) | 93 | 93 |
| D.H.W. energy efficiency (%) | 86 | 86 |
| Sound power dB(A) | 55 | 56 |
| <p>Specific precautionary measures to be adopted at the time of assembly, installation or maintenance of the equipment are contained in the boiler instruction manual</p> <p>Conforming to Annex IV (item 2) of the Delegated Regulations (EU) No. 811/2013 which supplements Directive 2010/30/EU</p> | | |

12.2 Boiler technical sheet

| Information requirements for boiler space heaters, boiler combination heaters | | | | | | | |
|--|------------------------------|--|-----------|---|-------------------|-------------------|------------|
| Model(s): | | EDEA 30 | | | | | |
| Condensing boiler: | | Yes | | | | | |
| Low-temperature boiler: | | Yes | | | | | |
| B11 boiler: | | No | | | | | |
| Cogeneration space heater: | | No | | Equipped with a supplementary heater: | | No | |
| Combination heater: | | Yes | | | | | |
| Item | Symbol | Value | Unit | Item | Symbol | Value | Unit |
| Nominal heat output for space heating | P _n | 25 | kW | Seasonal space heating energy efficiency | η _s | 93 | % |
| For boiler space heaters and boiler combination heaters: useful heat output | | | | For boiler space heaters and boiler combination heaters: useful efficiency | | | |
| At nominal heat output and high-temperature regime ^a | P ₄ | 24,5 | kW | At nominal heat output and high-temperature regime [*] | η ₄ | 87,9 | % |
| At 30% of nominal heat output and low-temperature regime ^b | P ₁ | 8,2 | kW | At 30% of nominal heat output and low-temperature regime [*] | η ₁ | 97,8 | % |
| Auxiliary electricity consumption | | | | Other items | | | |
| At full load | e _{l_{max}} | 0,043 | kW | Standby heat loss | P _{stby} | 0,105 | kW |
| At part load | e _{l_{min}} | 0,017 | kW | Ignition burner power consumption | P _{ign} | 0 | kW |
| In standby mode | PSB | 0,004 | kW | Emissions of nitrogen oxides | NO _x | 17 | mg/kWh |
| For combination heaters: | | | | | | | |
| Declared load profile | | XL | | Water heating energy efficiency | | η _{wh} | % |
| Daily electricity consumption | | Q _{elec} | 0,190 kWh | Daily fuel consumption | | Q _{fuel} | 22,651 kWh |
| Contact details | | Fonderie Sime S.p.A. Via Garbo 27, 37045 Legnago (VR) ITALIA | | | | | |
| a. High-temperature regime means 60°C return temperature at heater inlet and 80°C feed temperature at heater outlet. b. Low-temperature regime means for condensing boilers 30°C, for low-temperature boilers 37°C and for other heaters 50°C return temperature. | | | | | | | |
| [*] The yield data have been calculated using the higher heating value. | | | | | | | |

| Information requirements for boiler space heaters, boiler combination heaters | | | | | | | | | |
|--|------------------------------|--|-------|---|------------------------|-----------------|-------------------|--------|-----|
| Model(s): | | EDEA 40 | | | | | | | |
| Condensing boiler: | | Yes | | | | | | | |
| Low-temperature boiler: | | Yes | | | | | | | |
| B11 boiler: | | No | | | | | | | |
| Cogeneration space heater: | | No | | Equipped with a supplementary heater: | | No | | | |
| Combination heater: | | Yes | | | | | | | |
| Item | Symbol | Value | Unit | Item | Symbol | Value | Unit | | |
| Nominal heat output for space heating | P _n | 34 | kW | Seasonal space heating energy efficiency | η _s | 93 | % | | |
| For boiler space heaters and boiler combination heaters: useful heat output | | | | For boiler space heaters and boiler combination heaters: useful efficiency | | | | | |
| At nominal heat output and high-temperature regime ^a | P ₄ | 34,1 | kW | At nominal heat output and high-temperature regime [*] | η ₄ | 87,9 | % | | |
| At 30% of nominal heat output and low-temperature regime ^b | P ₁ | 11,3 | kW | At 30% of nominal heat output and low-temperature regime [*] | η ₁ | 97,7 | % | | |
| Auxiliary electricity consumption | | | | Other items | | | | | |
| At full load | e _{l_{max}} | 0,063 | kW | Standby heat loss | P _{stby} | 0,115 | kW | | |
| At part load | e _{l_{min}} | 0,015 | kW | Ignition burner power consumption | P _{ign} | 0 | kW | | |
| In standby mode | PSB | 0,006 | kW | Emissions of nitrogen oxides | NO _x | 34 | mg/kWh | | |
| For combination heaters: | | | | | | | | | |
| Declared load profile | | XXL | | Water heating energy efficiency | | η _{wh} | 86 | % | |
| Daily electricity consumption | | Q _{elec} | 0,220 | kWh | Daily fuel consumption | | Q _{fuel} | 29,034 | kWh |
| Contact details | | Fonderie Sime S.p.A. Via Garbo 27, 37045 Legnago (VR) ITALIA | | | | | | | |
| a. High-temperature regime means 60°C return temperature at heater inlet and 80°C feed temperature at heater outlet. b. Low-temperature regime means for condensing boilers 30°C, for low-temperature boilers 37°C and for other heaters 50°C return temperature. | | | | | | | | | |
| [*] The yield data have been calculated using the higher heating value. | | | | | | | | | |



Sime Ltd

Unit 6 Flockton Park
Holbrook Avenue
Holbrook Industrial Estate, Sheffield, S20 3FF

Phone: 0345 901 1114

www.sime.co.uk

Email: enquiries@sime.co.uk